

## GROUP 14

# ALPHABETICAL INDEX

	<b>A</b>	<b>Page</b>		<b>Page</b>
Accelerator Pedal, Use for Starting Engine		3-6		
Accelerator Vacuum Switch				
Carter Carburetor		10-39		
Stromberg Carburetor		10-42		
Accessories				
Auxiliary (Fog) Lamps		11-36		
Back-Up Lamps		11-34		
Heater and Defroster		11-29		
Radio		11-1		
Rear Window Wiper		11-36		
Safety (Spot) Light		11-35		
Windshield Washer		11-33		
Adjuster, Front Seat		13-33		
Air Cleaner		3-3		
Clean and Fill		3-10		
Air Ventilator, Outside		12-4		
Alignment of Front Wheels		6-29		
Alignment of Flywheel Housing		2-49		
Alignment of Frame		9-2		
Alignment Procedure, Radio		11-13		
Antenna, Radio				
Install, Closed Bodies		11-6		
Install, Convertible Coupes		11-11		
Operating Instructions		11-1		
Trimmer Adjustment		11-4		
Anti-Freeze Solutions		2-43		
Testing		2-44		
Armature Test and Repair		2-44		
Automatic Choke		See Carter or Stromberg		
Automatic Windshield Washer		11-33		
Auxiliary (Fog) Lamps		11-36		
Axle Assembly, Rear		See Rear Axle		
Axle Shaft, Remove and Install		5-10, 5-24		
	<b>B</b>			
Back Curtain		13-37		
Back-Up Lamps and Switch		11-34		
Balance, Brake Drum		8-20		
Balance, Wheel and Tire		6-27		
Battery		10-12		
Fill and Inspect		10-14		
High Discharge Test		10-16		
Hydrometer Test		10-15		
Importance of Keeping Charged		10-3		
Mounting		10-12		
Recharging		10-20		
Registration and Care When New		10-12		
Specifications		10-1		
Trouble Diagnosis		10-6		
Battery Cables		10-12		
Clean and Test		10-17		
Connect Cable and Wind Clock		10-19		
Beam Indicator, Headlight		10-78		
Bearing Lubrication, Rear Wheel		1-10		
Bearing Replacement				
Connecting Rod		2-34		
Crankshaft		2-35		
Differential		5-13		
Front Wheel		6-16		
Rear Wheel (Axle Shaft)		5-10, 5-24		
Steering Shaft		7-8		
Trans. Control Shaft, Upper		7-8		
Bearing Service (Ball and Roller)		1-11		
Bench Test, Cranking Motor		10-52		
Bench Test, Generator		10-28		
Bleeding Brakes		8-11		
Body		13-1		
Breaker Points		See Contact Points		
Brakes		8-2		
Adjustment, Major		8-14		
Adjustment, Minor		8-13		
Adjustment, Parking Brake		8-14		
Adjustment, Pedal		8-13		
Bleeding		8-11		
Drums		8-4		
Drum Inspection		8-19		
Drum Reboring and Balancing		8-20		
Flushing		8-12		
Lubrication, Park, Brake Cables		8-14		
Master Cylinder		8-4		
Master Cylinder Filling		8-11		
Master Cylinder Overhaul		8-21		
Operation, Service Brakes		8-5		
Parking Brake Lever and Cables		8-5		
Service Recommendations		8-6		
Shoe Lining Break-In		8-6		
Shoe, Reline or Replace		8-17		
Specifications		8-1		
Testing		8-8		
Trouble Diagnosis		8-8		
Wheel Cylinder Overhaul		8-20		
Bumpers, Car		9-3		
Button, Horn		10-85		
Buttons, Radio, Setting		11-4		
	<b>C</b>			
Cable, Battery, Clean and Test		10-17		
Cable, Hood Fastener, Adjust		12-12		
Cable, Parking Brake, Lubrication		8-14		
Cable, Speedo., Lubricate, Replace		10-102		
Cable, W/S Wiper, Adjust		13-19		
Calibrations, Carburetor and Choke		3-2		
Camber		6-29		
Check and Adjust		6-31		
Cambshaft and Bearings		2-13, 2-31		
Carbon Monoxide Warning		11-37		
Car Bumpers		9-3		
Car Roughness or Vibration		6-15		
Carburetor				
Adjustment		3-13		
Calibrations		3-2		
Changing Calibrations		3-6		
Carter		See Carter		
Heat Control Valve		3-13		
Stromberg		See Stromberg		
Throttle Linkage		3-4		
Throttle Linkage, Adjust		3-12		
Care of Chrome Plated Parts		13-2		
Care of Folding Top		13-37		
Care of Leather Seats		13-38		
Care of Paint		13-2		
Carter Carburetor		3-26		
Calibrations		3-2		
Identification Numbers		3-26		
Metering Rod Adjustment		3-29		
Operation		3-26		
Remove and Disassemble		3-33		
Cleaning Parts		3-35		
Inspection of Parts		3-36		
Assemble		3-36		
Install		3-40		

	Page		Page
Carter Climatic Control (Choke) .....	3-29	Crankshaft Bearings .....	2-11
Calibrations .....	3-2	Dimensions .....	2-4
Disassembly, Cleaning, Assembly .....	3-32	Crankshaft Bearings, Replace .....	2-34
Fast Idle Cam Adjustment .....	3-31	Crankshaft Oil Seal, Replace .....	2-30
Thermostat Adjustment .....	3-15	Current Regulator .....	10-24
Unloader Adjustment .....	3-31	Test & Adjust on Car .....	10-32
Caster .....	6-29	Test & Adjust on Bench .....	10-36
Check and Adjust .....	6-31	Cut-out Relay .....	10-22
Cements, Body .....	13-2	Test & Adjust on Car .....	10-31
Centrifugal Advance, Distributor .....	10-58	Test & Adjust on Bench .....	10-35
Charge Indicator .....	10-97	Curtain, Black .....	13-37
Chains, Tire .....	6-8	Cylinder Crankcase .....	2-9
Chart, Headlamp Aiming .....	10-79	Cylinder Head .....	2-9
Chassis Lubrication .....	1-1	Remove & Install .....	2-27
Chassis Sheet Metal .....	12-2	Cylinder Reboring .....	2-38
Chassis Springs .....	6-5		
Opt. High, Export, Overload .....	6-22	<b>D</b>	
Replacement, Front .....	6-19	Dash Pot & Linkage, Adjust .....	3-12
Replacement, Rear .....	6-22	Defroster, Windshield .....	11-29
Trim Dimensions, Front .....	6-18	Diagnosis, Trouble	
Trim Dimensions, Rear .....	6-21	Battery .....	10-6
Chassis Suspension Specifications .....	6-1	Brakes .....	8-8
Choke, Automatic .....	See Carter or Stromberg	Clutch .....	4-6
Chrome Plated Parts, Care of .....	13-2	Clock & Instruments .....	10-11
Cigar Lighters .....	10-84	Cranking System .....	10-8
Circuit Diagrams, Wiring .....	10-103	Engine .....	2-20
Climatic Control .....	See Carter	Fuel System .....	3-7
Clock, Electric .....	10-98	Generating System .....	10-7
Clock, Trouble Diagnosis .....	10-11	Hydro-Lectric Power System .....	13-52
Clutch .....	4-3	Ignition System .....	10-9
Driven Plates .....	4-4	Lighting System .....	10-10
Driven Plate Break-in .....	4-6	Radio .....	11-2
Lubrication, Internal Parts .....	4-8	Rear Axle .....	5-5
Pedal Adjustment .....	4-8	Shock Absorbers .....	6-14
Release Mechanism .....	4-5	Signal Systems .....	10-10
Service Recommendations .....	4-6	Steering .....	6-14
Specifications .....	4-2	Steering Gear .....	7-4
Trouble Diagnosis .....	4-6	Tires .....	6-10
Removal & Disassembly .....	4-9	Transmission .....	4-25
Clean & Inspect .....	4-10	Diagrams, Wiring Circuit .....	10-103
Assembly, Series 40-50 .....	4-11	Differential	
Assembly, Series 70 .....	4-12	Bearing Replacement .....	5-13
Installation .....	4-13	Removal, Gear & Case Assembly .....	5-11
Coil Tests, Ignition .....	10-67	Install, Gear & Case Assembly .....	5-23
Connecting Rods .....	2-11	Dimmer Switch .....	10-78
Bearing Adjustment .....	2-33	Direction Signal Lamps & Switch .....	10-89
Bearing Dimensions .....	2-4	Lamp Circuits .....	10-92
Bearing Replacement .....	2-34	Switch Operation .....	10-91
Rod Replacement .....	2-37	Switch Timing Adjustment .....	10-93
Condenser Replacement, Distributor .....	10-63	Switch Parts, Replace .....	10-94
Condenser Tests, Distributor .....	10-68	Trouble Diagnosis .....	10-10
Contact Points, Distributor		Distributor, Ignition	
Adjustment .....	10-61	Advance Mechanism .....	10-58
Inspection .....	10-60	Cap & Rotor, Inspect .....	10-60
Replacement .....	10-63	Condenser Tests .....	10-68
Cooling System, Engine .....	2-17	Contact Points, Adjust .....	10-61
Filling .....	2-42	Lubrication .....	1-3 & 1-5
Flushing .....	2-43	Overhaul .....	10-69
Prepare for Anti-Freeze .....	2-44	Specifications .....	10-3
Trouble Diagnosis .....	2-23	Dome Lamp & Switches .....	10-83
Courtesy Lamps .....	10-84	Doors, Body	
Crankcase Ventilation .....	2-17	Adjustment .....	13-13
Cranking Motor .....	10-46	Checks & Hold Open Devices .....	13-10
Bench Test .....	10-52	Dovetail Bumpers & Wedge Plates .....	13-12
Lubrication .....	1-3	Hinges .....	13-14 & 13-15
Periodic Inspection .....	10-48	Handles & Locks .....	13-8
Repairs, on Bench .....	10-53	Trim Pads .....	13-30
Specifications .....	10-2	Weatherstrips .....	13-11
Voltage Test .....	10-49	Door Ventilators .....	13-27
Cranking System .....	10-37		
Specifications .....	10-2		
Trouble Diagnosis .....	10-8		

	Page		Page
Door Windows			
Closed Bodies	13-26	Gear Shift Control Mechanism	4-24
Convertible Bodies	13-40	Gear Tooth Contact, Rear Axle	5-7
Hydraulic Lifts	13-48	Generator	10-21
Drums, Brake	8-4	Inspection, Test on Car	10-26
Inspect & Recondition	8-19	Lubrication	1-3
Dynamic Balance, Wheel & Tire	6-27	Repairs, on Bench	10-28
		Specifications	10-1
		Test, on Bench	10-28
<b>E</b>		Generator Regulator	10-22
Electric Clock	10-98	Repairs on Bench	10-34
Engine	2-9	Specifications	10-2
Cooling System	2-17	Test & Adjust on Car	10-30
Correction for Unbalance	2-51	Generating System	10-21
Cranking System	10-37	Trouble Diagnosis	10-7
Dimensions, Fits, Adjustments	2-4	Glass Replacement	
Hard Starting	3-7	Back Window	13-25
Ignition System	10-56	Door Window	13-27
Lubrication System	2-15	Windshield, 1948	13-21
Mountings	2-8	Windshield, 1949	13-23
Mounting Adjustment	2-48	Glove Box Lid & Lock	13-17
Oil Recommendations	1-8	Glove Box Light	10-83
Specifications	2-1		
Tune-Up, Trouble Diagnosis	2-20	<b>H</b>	
Exhaust Manifold	3-4	Handles, Door	13-8
Replacement	3-16	Hard Starting	3-7
Valve Service	3-13	Headlamps	10-76
Exhaust Pipes	3-5	Aiming Adjustment	10-78
Estate Wagon Body Service	13-1	Aiming Chart, Use of	10-79
		Sealed Beam Unit, Replace	10-78
		Headlining	13-32
<b>F</b>		Cleaning	13-35
Fan Belt, Adjust or Replace	2-44	Remove & Install	13-32 & 13-33
Fasteners, Hood	12-3	Heater & Defroster	11-29
Fender Extensions	12-4 & 12-15	Controls, Use of	11-31
Fender Replacement	12-15	Wiring Connections	11-31
Filler, Gas Tank, Replace	3-17	Hinges, Door	13-13
Filters, Gasoline	3-11	Hood, Hinges, & Fasteners	12-3
Float Bowl Fuel Level	3-13	Bearing on Bumpers	12-14
Flushing of		Fit Above Grille	12-12
Brake System	8-12	Hinge & Fastener, Adjust, 1948	12-6
Cooling System	2-43	Hinge & Fastener, Adjust, 1949	12-11
Rear Axle	1-9	Noises	12-5
Flywheel & Ring, Replace	2-48	Panel Flutter	12-14
Flywheel Housing Alignment	2-49	Spacing at Doors & Cowl	12-13
Fog Lamps	11-36	Horns, Relay and Button	10-85
Folding Top, Convert. Body	See Top	Adjustments	10-87
Frame	9-1	Trouble Diagnosis	10-11
Front Shock Absorbers	See Shock Absorbers	Housing, 3rd Member, Replace	5-27
Front Springs	See Chassis Springs	Hydraulic Valve Mechanism	2-13
Front Wheel Suspension	6-3	Hyd. Valve Lifters, Adjust, Clean	2-26
Front Wheels		Hydro-Lectric Power System	13-43
Alignment	6-29	Control Switches	13-49
Bearing Adjustment	6-16	Fluid Level	13-51
Bearing Lubrication	1-6	Fluid Change, Seasonal	13-51
Bearing Replacement	6-16	Folding Top System	13-45
Fuel Consumption, Excessive	3-8	Power Unit Assembly	13-44
Fuel Pump	3-18	Seat Adjuster	13-49
Filter Cleaning	3-11	Tests	13-53
Inspection & Test	3-19	Trouble Diagnosis	13-52
Operation	3-19	Window & Seat Systems	13-48
Repairs	3-21	Hydrometer Test of Battery	10-15
Fuel Selection & Additives	3-6		
		<b>I</b>	
<b>G</b>		Ignition Coil	10-56
Gasoline Filters & Strainers	3-11	Inspection	10-61
Gasoline Gauge	10-100	Specifications	10-3
Trouble Diagnosis	10-11	Tests	10-67
Gasoline Tank	3-2	Ignition Distributor	See Distributor
Replacement	3-17	Ignition System	10-56
Gauge		Periodic Inspection	10-59
Gasoline	10-100	Trouble Diagnosis	10-9
Pinion Setting	5-19		
Oil Pressure	10-98		
Temperature	10-97		

	Page
Ignition Switch .....	10-56
Switch Replace, Lock Repairs .....	10-73
Ignition Timing .....	10-64
Indicator, Charge .....	10-97
Indicator, Headlight Beam .....	10-78
Indicators, Direction Signal .....	10-89
Inflation Pressures, Tire .....	6-7
Instrument Panel Compt. Light .....	10-83
Instrument Panel Lights .....	10-82
Intake Manifold .....	3-4
Replacement .....	3-16
Intake Silencer .....	3-3
Interchanging Tires .....	6-8

**K**

King Pin Inclination .....	6-29
Checking K.P.I. ....	6-32
Knuckle, Steering, Rebush, Replace .....	6-17

**L**

Lamp Bulb Specifications .....	10-4
Lamps,	
Auxiliary (Fog) .....	11-36
Back-Up .....	11-34
Courtesy .....	10-84
Direction Signal .....	10-89
Dome .....	10-83
Headlamps .....	10-76
Park, Signal, Tail, Stop .....	10-80
Rear License .....	10-82
Safety (Spot) .....	11-35
Lid, Rear Compartment .....	13-15
Lighting System Trouble Diagnosis .....	10-10
Lighting Switch & Circuit Breaker .....	10-75
Lights,	
Headlights .....	10-76
Direction Signal .....	10-89
Instrument Panel .....	10-82
Instrument Panel Compt. ....	10-83
Luggage Compt. ....	10-84
Map (Instrument Panel) .....	10-83
Lighters, Cigar .....	10-84
Locks, Door .....	13-8
Lower Control Arm, Rebush, Replace .....	6-19
Lubrication	
Body .....	1-4
Chassis .....	1-1
Clutch Internal Parts .....	4-8
Parking Brake Cables .....	8-14
Speedo. Cable .....	10-102
Lubrication System, Engine .....	2-15
Specifications .....	2-3
Luggage Compartment Light .....	10-84

**M**

Manifold Heat Control .....	3-4
Manifold Valve Service .....	3-13
Manifold, Int. & Exh. ....	3-4
Map Light Switch .....	10-83
Marks on Ring Gear & Pinion .....	5-18
Master Cylinder, Brake .....	8-4
Filling .....	8-11
Overhaul .....	8-21
Mountings, Body .....	13-3
Mountings, Engine .....	2-8
Adjustment .....	2-48
Muffler .....	3-5

**N**

	Page
Neutral Safety Switch .....	10-45
Noise	
Clutch .....	4-7
Engine .....	5-5
Front Wheel Bearing .....	5-5
Hood .....	12-5
Rear Axle, Road, Tire .....	5-5
Transmission ..	5-5

**O**

Oil Consumption Excessive .....	2-22
Oil Filter .....	2-16
Changing Filter Element .....	1-5
Oiling System, Engine .....	2-15
Specifications .....	2-3
Oil Pressure Gauge .....	10-98
Oil Pump .....	2-15
Dimensions of Parts .....	2-5
Repairs .....	2-46
Oil Seals, C/S R. Bearing .....	2-36
Oil Seals, R. Wheel Bearings .....	5-10 & 5-24

**P**

Pad, Door Trim .....	13-30
Paint, Care of .....	13-2
Parking Brake Lever & Cables .....	8-5
Adjustment, Lubrication .....	8-14
Parking Lamps .....	10-80
Pedal Adjustment, Brake .....	8-13
Pedal Adjustment, Clutch .....	4-8
Pinion Adjustment, Rear Axle .....	5-22
Pinion Setting Gauges .....	5-19
Pistons, Pins Rings, .....	2-9
Dimensions .....	2-4
Replacement .....	2-37
Ring Fitting .....	2-40
Pipes, Exhaust & Tail .....	3-5
Pivot Pin & Bushing, Replace .....	6-18
Plates, Clutch Driven .....	4-4
Plugs, Spark .....	10-57
Power Unit, Hydro-Lectric .....	13-44
Propeller Shaft	
Removal & Disassembly .....	5-11
Straightening .....	5-16
Assembly of .....	5-15
Installation .....	5-17
Pump, Oil .....	2-15
Repairs .....	2-46
Pump, Water .....	2-19
Seal Replacement .....	2-45
Push Button Setting, Radio .....	11-4

**R**

Radiator Thermostat Test .....	2-45
Radio .....	11-1
Adjustments on Car .....	1-3
Alignment Procedure .....	11-13
Antenna Install., Closed Body .....	11-6
Antenna Install., Convert. Body .....	11-11
Antenna Trimmer, Adjust .....	11-4
Antenna Operating Instructions .....	11-1
Receiver Installation .....	11-5
Service Parts List .....	11-23
Suppressor & Capacitor .....	10-57 & 11-11
Trouble Diagnosis .....	11-2
Radius Rod, Rebush or Replace .....	6-22

	Page		Page
Rear Axle .....	5-1	Solenoid Switch & Relay .....	10-48
Approved Lubricant .....	1-9	Specifications .....	10-3
Draining & Flushing .....	1-9	Test & Adjust, on Car .....	10-49
Specifications .....	5-1	Test & Repair, on Bench .....	10-51
Trouble Diagnosis .....	5-5	Spark Plugs .....	10-57
When to Remove Assembly .....	5-9	Clean & Adjust .....	10-66
Assembly, Remove & Install .....	5-26	Spark Timing Control .....	10-58
Axle Shaft, Remove & Install .....	5-10 & 5-24	Specific Gravity, Battery .....	10-16
Diff. Bearings, Replace .....	5-13	Specifications .....	
Diff. Case & Gear, Remove & Install .....	5-10 & 5-13	Battery .....	10-1
Pinion Gear Adjustment .....	5-22	Brakes .....	8-1
Prop. Shaft, Remove and Disassemble .....	5-11	Chassis Suspension .....	6-1
Prop. Shaft, Assemble .....	5-15	Clutch .....	4-2
Prop. Shaft, Straighten .....	5-16	Cranking System .....	10-2
Prop. Shaft, Install .....	5-17	Engine .....	2-2
Ring Gear Replacement .....	5-14	Fuel & Exhaust Systems .....	3-1
Strut Rod, Replace .....	5-27	Generating System .....	10-1
Third Member Housing, Replace .....	5-27	Ignition System .....	10-3
Wheel Bearing & Oil Seals, Replace .....	5-10 & 5-24	Lighting System .....	10-4
Rear Compt. Lid Weatherstrip .....	13-15	Radio Alignment .....	11-14
Rear Compt. Lid Adjustment .....	13-16	Rear Axle .....	5-1
Rear Shock Absorbers .....	See Shock Absorbers	Signal Systems (Horn, Lights, etc.) .....	10-5
Rear Wheel Bearings .....		Steering Gear .....	7-1
Lubrication .....	1-10	Transmission & U. Joint .....	4-2
Noise .....	5-6	Speedometer .....	10-101
Replacement .....	5-10 & 5-24	Cable Lubrication & Replacement .....	10-102
Rear Wheel Shields .....	12-4 & 12-17	Gears .....	4-26
Rear Wheel Suspension .....	6-4	Gear Specifications .....	4-2
Rear Window Wiper .....	11-36	Test of Head .....	10-101
Reboring Brake Drums .....	8-20	Trouble Diagnosis .....	10-11
Reboring Cylinders .....	2-38	Spot Light .....	11-35
Receiver Installation, Radio .....	11-5	Springs, Chassis .....	See Chassis Springs
Recharging Battery .....	10-20	Stabilizer Link Adjustment .....	6-16
Regulator, Generator .....	10-22	Starter .....	See Cranking Motor
Regulator, Window, Replace .....	13-27	Static Balance, Wheel & Tire .....	6-27
Regulator, Ventilator .....	13-27	Steering Gear .....	7-2
Relay, Cut-Out .....	10-22	Adjustment .....	7-5
Relay, Horn .....	10-85	Lubrication .....	1-7
Release Mechanism, Clutch .....	4-5	Specifications .....	7-1
Reline Brake Shoes .....	8-17	Trouble Diagnosis .....	7-4
Ring Gear & Pinion Marks .....	5-18	Remove, Disassemble .....	7-9
Ring Gear Replacement .....	5-14	Assemble, Install .....	7-11
Rings, Piston .....	See Piston Rings	Shaft Bearing, Replace .....	7-8
Robe Cords .....	13-33	Steering Geometry (Turning Angles) .....	6-29
Rocker Arms, Assembly of .....	2-29	Checking .....	6-33
Rust Preventives, Cooling System .....	2-43	Steering Knuckle, Rebush, Replace .....	6-17
		Steering Tie Rods & Ends .....	7-3
<b>S</b>		Steering Wheel Height, Adjust .....	7-6
Safety (Spot) Light .....	11-35	Steering Wheel, Replace .....	7-7
Sealed Beam Unit, Headlamp .....	10-77	Stop Lamps .....	10-80
Sealing Compounds, Body .....	13-2	Stop Light Switch .....	10-85
Seat Adjuster, Closed Body .....	13-33	Stop Light Trouble Diagnosis .....	10-10
Seat Adjuster, Hydraulic .....	13-49	Strainers, Gas, Cleaning .....	3-11
Selector Control, Transmission .....	4-22	Stromberg Automatic Choke .....	3-44
Service Recommendations .....		Calibrations .....	3-2
Brakes .....	8-6	Disassembly, Cleaning, Assembly .....	3-47
Chassis Suspension .....	6-7	Fast Idle Cam Adjustment .....	3-46
Clutch .....	4-6	Thermostat Adjustment .....	3-15
Fuel System .....	3-6	Unloader Adjustment .....	3-46
Hydro-Lectric Power System .....	13-51	Stromberg Carburetor .....	3-41
Transmission .....	4-25	Calibrations .....	3-2
Sheet Metal, Chassis .....	12-2	Identification Numbers .....	3-41
Shields, Rear Wheel .....	12-4 & 12-17	Operation .....	3-41
Shift Control, Transmission .....	4-20	Remove & Disassemble .....	3-48
Adjustment .....	4-27	Clean & Inspect Parts .....	3-50
Shock Absorbers, Front & Rear .....	6-5 & 6-6	Assemble .....	3-51
Check for Leaks .....	6-23	Install .....	3-54
Filling .....	6-22	Strut Rods, Replace .....	5-27
Replacement of Valves or Shock .....	6-23		
Trouble Diagnosis .....	6-14		

	Page		Page
Switch			
Dimmer	10-78	Specifications	4-2
Direction Signal	10-91	Trouble Diagnosis	4-25
Hydro-Lectric	13-49	Control Shaft U. Bearing, Replace	7-8
Ignition	10-56	Shift Control Adjustment	4-27
Lighting	10-75	Torque Ball Adjustment	4-30
Map Light	10-83	Remove Transmission	4-33
Neutral Safety	10-45	Disassemble Series 40-50	4-33
Radio Control	11-2	Disassemble Series 70	4-35
Solenoid Relay	10-48	Clean & Inspect Parts	4-36
Stop Light	10-85	Assemble, All Series	4-38
		Install Trans., All Series	4-40
		Tools & Fixtures	4-28
Tail Lamps	10-80	Transmission, W/S Wiper	13-19
Tail Pipe	3-5	Trim Dimensions, Chassis Springs, F&R	6-18 & 6-21
Tank, Gasoline	3-2	Trim Fabric Cleaning	13-34
Replacement	3-16	Trim Pad, Door	13-30
Temperature Gauge	10-97	Trouble Diagnosis	See Diagnosis
Trouble Diagnosis	10-11	Trunk	See Rear Comp't.
Therm Circuit Breaker	10-75		
Test	10-76	<b>U</b>	
Thermostat		Universal Joint	4-20
Choke, Adjustment	3-15		
Exh. Manifold Valve	3-13	<b>V</b>	
Radiator, Test	2-45	Vacuum Pump	3-18
Third Member Housing, Replace	5-27	Inspect & Test	3-20
Throttle Linkage	3-4	Operation	3-19
Adjustment	3-12	Repairs	3-21
Tie Rods & Ends	7-3	Valve Mechanism, Engine	2-13
Adjustment	7-5	Checking Timing	2-30
Tightening Specifications		Guide Replacement	2-29
Brakes	8-1	Hydraulic Lifters	2-13
Chassis Suspension	6-1	Hydraulic Lifter Adjustment	2-26
Clutch	4-1	Lash Adjustment	2-25
Engine	2-1	Noise	2-21
Fuel & Exhaust Systems	3-1	Reconditioning	2-28
Rear Axle	5-1	Specifications	2-3
Sheet Metal	12-1	Valves, Shock Absorber, Replace	6-23
Steering Gear	7-1	Ventilation, Crankcase	2-17
Transmission	4-1	Ventilators, Door	13-27
Timing		Ventilator, Outside Air	12-4
Carter Accel. Vac. Switch	10-40	Voltage Regulator	10-25
Direction Signal Switch Cam	10-93	Test & Adjust on Car	10-33
Ignition	10-64	Test & Adjust on Bench	10-36
Stromberg Accel. Vac. Switch	10-44	Voltage Test of Cranking Motor	10-49
Timing Chain Replacement	2-30		
Tires & Tubes	6-7	<b>W</b>	
Chains, Use of	6-8	Washer, Windshield	11-33
Inflation, Pressure	6-7	Water Pump	2-19
Inspection	6-8	Seal Replacement	2-45
Interchanging	6-8	Weatherstrips, Door	13-11
Replacement	6-24	Weatherstrips, Rear Compt. Lid	13-15
Static	11-3	Wheel Alignment Factors	6-29
Wear, Abnormal	6-10	Wheel Alignment Procedure	6-30
Toe-In, Front Wheel	6-29	Wheel Bearing Lubrication, Rear	1-10
Check & Adjust	6-32	Wheel Bearing, R., Remove & Install	5-10 & 5-24
Torque Ball	4-20	Wheel Cylinder, Brake, Overhaul	8-20
Adjustment	4-30	Wheel Shields	12-4 & 12-17
Outer Retainer Packing	4-32	Wheel & Tire Balance	6-27
Top, Convertible Body		Wheel Suspension, F&R	6-2 & 6-4
Adjustments	13-38	Window Glass, Back, Replace	13-25
Back Curtain	13-37	Window Glass Travel Adjustment	13-41
Care of Top	13-37	Window Lifts, Hydraulic	13-48
Control Rod Adjustment	13-55	Window Regulator, Replace	13-27
Hydro-Lectric Power System	13-45	Window Wiper, Rear	11-36
Operation	13-36	Windows, Door, Closed Bodies	13-26
Transmission		Windows, Door, Convert. Bodies	13-40
Series 40-50	4-15	Windshield Defroster	11-29
Series 70	4-17	Windshield Glass, 1948, Replace	13-21
Lubrication	1-3	Windshield Glass, 1949, Replace	13-23
Noises	5-5	Windshield Washer	11-33
Shift Mechanism	4-27	Windshield Wipers	13-14
		Wiring Circuit Diagrams	10-103
		Wiper, Rear Window	11-36