

GROUP 14

ALPHABETICAL INDEX

A	Page	Page	
Accelerator Pedal, for Starting Engine	3-6	Button, Horn	10-71
Accelerator Vacuum Switch	10-38	Button Setting, Radio	11-5
Check Switch Timing, Cleaning	10-39		
Air Cleaner	3-3	C	
Clean & Fill	1-5	Camber, Check & Adjust	7-23
Air Conditioner	11-16	Camshaft & Bearings	2-27
Service Procedures	11-17	Carbon Monoxide Warning	11-15
Alignment		Carburetor	
Frame	12-1	Adjustment	3-10
Front Wheels	7-21	Calibrations	3-1
Flywheel Upper Housing, Synchronesh	4-20	Carter	See Carter
Hood & Fenders	12-6	Changing Calibrations	3-8
Pump & Bell Housing, Dynaflow	5-43	Heat Control Valve	3-9
Radio	11-9	Stromberg	See Stromberg
Ammeter	See Charge Indicator	Throttle Linkage	3-4
Antenna Installation, Radio	11-7	Throttle Linkage Adjustment	3-12
Antenna Trimmer Adjustment	11-5	Car Models	0-3
Anti-Freeze Solutions, Testing	2-38	Car Roughness or Vibration	7-12
Armature Test & Repair	10-25	Carter 2-Barrel Carburetor	3-20
Automatic Choke	See Carter or Stromberg	Carter 4-Barrel Carburetor	3-33
Axle Assembly, Rear	See Rear Axle	Carter Climatic Control (Choke)	3-23
Axle Shaft, Remove & Install	6-7	Disassembly, Cleaning, Assembly	3-26
		Fast Idle Cam & Unloader Adjustment	3-24
B		Thermostat Adjustment	3-11
Back-Up Lamp & Switch	10-68	Caster, Check and Adjust	7-23
Balance, Brake Drum	9-20	Charge Indicator	10-79
Balance Flywheel, Dynaflow	2-43	Chains, Tire	7-15
Balance, Wheel & Tire	7-21	Chart, Headlamp Aiming	10-67
Battery	10-11	Chassis Lubrication	1-1
High Discharge Test	10-14	Chassis Sheet Metal	12-5
Hydrometer Test	10-13	Chassis Springs	7-2
Importance of Keeping Charged	10-12	Overload, Rear	7-18
Inspection & Service	10-12	Replacement, Front	7-18
Recharging	10-17	Replacement, Rear	7-18
Registration & Care When New	10-11	Trim Dimensions	7-17
Specifications	10-1	Choke, Automatic	See Carter or Stromberg
Trouble Diagnosis	10-5	Chassis Suspension Specifications	7-1
Battery Cables, Clean and Test	10-15	Choke Thermostat Adjustment	3-11
Connecting to Wind Clock	10-17	Cigar Lighters	10-69
Beam Indicator, Headlight	10-66	Circuit Diagrams, Wiring	10-80
Bearing Adjustment, Front Wheels	7-16	Climatic Control	See Carter
Bearing Lubrication, Rear Wheels	1-7	Clock Electric	10-77
Bearing Replacement		Trouble Diagnosis	10-10
Connecting Rod	2-29	Clutch, Dynaflow	5-11
Crankshaft	2-30	Clutch, Synchronesh	4-2
Differential	6-11	Disassemble, Inspect, Assemble	4-7
Front Wheel	7-15	Lubricate Internal Parts	4-5
Rear Wheel (Axle Shaft)	6-7	Pedal Adjustment	4-5
Bearing Service (Clean, Inspect, etc.)	1-10	Release Mechanism	4-3
Bell Housing Alignment, Dynaflow	5-43	Remove and Install	4-6
Body	13-1	Specifications	4-1
Mountings	13-2	Trouble Diagnosis	4-4
Lubricare	1-4	Coil, Ignition	10-55
Breaker Points	See Contact Points	Connecting Rods	2-7
Brakes		Bearing Dimensions	2-2
Adjustment, Major	9-16	Bearing Replacement	2-29
Adjustment, Minor	9-14	Rod Replacement	2-32
Bleeding	9-12	Condenser Replacement, Distributor	10-54
Drum Inspection	9-19	Condenser Tests, Distributor	10-57
Drum Reboring & Balancing	9-20	Contact Points, Distributor	
Flushing, Filling System	9-12	Adjustment, Replacement	10-59
Master Cylinder Overhaul	9-21	Inspection	10-54
Operation, Service Brakes	9-4	Cooling System, Engine	2-12
Parking Brake Adjustment, Lubrication	9-15	Filling, Flushing	2-37
Parking Brake Controls	9-3	Prepare for Anti-Freeze	2-37
Power Brakes	9-23	Trouble Diagnosis	2-18
Shoe, Reline or Replace	9-17	Crankcase Ventilation	2-11
Specifications	9-1	Cranking Motor	10-42
Testing, Trouble Diagnosis	9-7	Bench Test	10-47
Wheel Cylinder Overhaul	9-20	Periodic Inspection	10-43
Warning Signal	10-69	Repairs on Bench	10-48
		Specifications	10-2
		Voltage Test	10-43

	Page		Page
Cranking System	10-36		
Specifications	10-2		
Trouble Diagnosis	10-7		
Crankshaft & Bearings	2-7		
Bearing Replacement	2-30		
Dimensions	2-2		
Oil Seal Replacement	2-28		
Current Regulator	See Generator Regulator		
Cut-out Relay	See Generator Regulator		
Cylinder Crankcase	2-6		
Cylinder Heads	2-7		
Removal	2-20		
Installation	2-22		
Cylinder Reboring	2-34		
D			
Dash Pot & Throttle Linkage Adjustment	3-12		
Defroster, Windshield	11-14		
Diagnosis, Trouble			
Battery	10-15		
Brakes	9-7		
Clutch	4-4		
Clock & Instruments	10-10		
Cranking System	10-7		
Engine	2-14		
Fuel System	3-6		
Generating System	10-6		
Ignition System	10-8		
Lighting System	10-9		
Radio	11-3		
Rear Axle	6-4		
Shock Absorbers	7-10		
Signal Systems	10-9		
Steering Action	7-11		
Steering Gear, Hydraulic	8-15		
Steering Gear, Manual	8-3		
Tires	7-7		
Transmission—Dynaflow	5-25		
Transmission—Synchronesh	4-17		
Differential	See Rear Axle		
Dimmer Switch	10-66		
Directional Signal Lamps & Switch	10-72		
Lamp Circuits	10-73		
Switch Parts Replacement	10-73		
Trouble Diagnosis	10-9		
Distributor, Ignition	10-51		
Advance Mechanism	10-52		
Condenser Tests	10-57		
Contact Points—Condenser, Replace	10-59		
Overhaul	10-59		
Periodic Inspection	10-54		
Specifications	10-2		
Timing	10-62		
Dynaflow Transmission	5-1		
Lubricare	1-3		
E			
Engine	2-1		
Cooling System	2-12		
Correction for Unbalance	2-43		
Cranking System	10-36		
Dimensions, Fits, Adjustments	2-2		
Fuel & Exhaust System	3-1		
Hard Starting	3-6		
Ignition System	10-50		
Lubrication System	2-10		
Mountings	2-5		
Mounting Adjustment	2-41		
Oil Recommendations	1-8		
Specifications	2-1		
Tune Up, Trouble Diagnosis	2-14		
Ventilation System	2-11		
Valve Service	3-9		
Exhaust Pipes	3-5		
Exhaust Manifold	3-5		
F			
Fan Belt, Adjust or Replace	2-38		
Fender & Hood Alignment	12-6		
Filler, Gas Tank, Replace	3-13		
Filters, Gasoline	3-9		
Flywheel & Ring Replacement			
Dynaflow	2-41		
Synchronesh	2-42		
Flywheel Housing Alignment	4-20		
Frame	12-1		
Front Shock Absorbers	See Shock Absorbers		
Front Springs	See Chassis Springs		
Front Wheel Suspension	7-1		
Front Wheels			
Alignment	7-21		
Bearing Adjustment	7-16		
Bearing Replacement, Lubrication	7-15		
Fuel Consumption, Excessive	3-8		
Fuel Pump	3-14		
Inspection & Test	3-15		
Repairs	3-16		
Fuel System	3-1		
Trouble Diagnosis	3-6		
Fuse Block	10-80		
Fuse Specifications	10-3		
G			
Gasoline Filters & Strainers	3-9		
Gasoline Gauge	10-78		
Trouble Diagnosis	10-10		
Gasoline Tank Replacement	3-13		
Gauge			
Gasoline	10-78		
Pinion Setting	6-14		
Oil Pressure	10-77		
Temperature	10-76		
Gears, Planetary, Dynaflow	5-10		
Gear Shift Control Mechanism	4-15		
Generator	10-19		
Inspection, Test, on Car	10-12		
Lubrication	1-3		
Repairs, on Bench	10-33		
Specifications	10-1		
Test, on Bench	10-24		
Generator Regulator	10-20		
Repairs on Bench	10-33		
Specifications	10-2		
Test & Adjust, on Car	10-26		
Generating System	10-19		
Trouble Diagnosis	10-6		
Glove Box Light	10-69		
H			
Hard Starting	3-6		
Headlamps	10-65		
Aiming Adjustment	10-67		
Aiming Chart, Use of	10-67		
Sealed Beam Unit, Replace	10-66		
Heater & Defroster	11-14		
Hood	12-5		
Horns, Relay & Button	10-70		
Adjustments	10-71		
Trouble Diagnosis	10-10		
Hydraulic Control System, Dynaflow	5-14		
Hydraulic Valve Mechanism	2-8		
Hydraulic Valve Lifter Service	2-22		
Hydrometer Test of Battery	10-13		
I			
Ignition Coil	10-50		
Inspection	10-55		
Specifications	10-2		
Tests	10-57		
Ignition Distributor	See Distributor		
Ignition System	10-50		
Periodic Inspection	10-53		
Trouble Diagnosis	10-8		

	Page		Page
Ignition Switch	10-50		
Switch Replace, Lock Repairs	10-62		
Ignition Timing	10-62		
Indicator, Charge	10-76		
Indicator, Headlight Beam	10-66		
Indicators, Direction Signal	10-72		
Inflation Pressures, Tire	1-4		
Instrument Panel Compt. (Glove Box)			
Light & Switch	10-69		
Intake Manifold	3-4		
Intake Silencer	3-3		
K			
King Pin Inclination, Checking	7-23		
Knuckle, Steering, Replace	7-16		
L			
Lamp Bulb Specifications	10-3		
Lamps			
Back-Up	10-68		
Direction Signal	10-72		
Headlamps	10-65		
License, Rear	10-68		
Park, Signal, Tail, Stop	10-68		
Lighting System	10-64		
Trouble Diagnosis	10-9		
Lighters, Cigar	10-69		
Lights			
Headlights	10-65		
Direction Signal	10-72		
Instrument Panel	10-69		
Map (Inst. Panel)	10-69		
Lower Control Arm, Rebush, Replace	7-19		
Lubricare (Lubrication)	1-1		
Body	1-4		
Chassis	1-1		
Clutch Internal Parts	4-5		
Dynaflow Transmission	1-3		
Parking Brake Cables	9-15		
Speedometer Cable	10-82		
Lubrication System, Engine	2-10		
Specifications	2-2		
M			
Manifold Heat Control	3-4		
Valve Service	3-9		
Manifold Intake	3-4		
Exhaust	3-5		
Marks on Ring Gear & Pinion	6-14		
Master Cylinder, Brake	9-14		
Filling	9-12		
Overhaul	9-21		
Models, Car	0-3		
Mountings, Body	13-2		
Mountings, Engine	2-5		
Adjustment	2-41		
Muffler	3-5		
N			
Neutral Safety Switch	10-41		
Numbers, Body Style	13-1		
O			
Oil Consumption, Excessive	2-15		
Oil Recommendation, Engine	1-8		
Oil Filter	2-10		
Changing Element	1-5		
Oil Pressure Gauge	10-78		
Oil Pump	2-10		
Dimensions of Parts	2-3		
Repairs	2-40		
Oil Pump, Steering	8-13		
Oil Seal C/S R. Bearing	2-32		
Oil Seals, R. Wheel Bearings	6-7		
P			
Parking Brake Controls	9-3		
Adjustment, Lubrication	9-15		
Release Warning Signal	10-69		
Parking Lamps	10-68		
Power Brakes	9-23		
Pedal Adjustment, Brake	9-14		
Pedal Adjustment, Clutch	4-5		
Pinion Adjustment, Rear Axle	6-17		
Pinion Setting Gauges	6-14		
Pistons, Pins, Rings	2-7		
Dimensions	2-3		
Replacement	2-32		
Ring Fitting	2-35		
Propeller Shaft			
Assembly & Straightening	6-13		
Installation & Adjustment	6-14		
Removal & Disassembly	6-9		
Pump, Fuel & Vacuum	See Fuel Pump		
Pump, Oil	2-10		
Repairs	2-40		
Pump, Hydraulic Steering	8-13		
Pump, Water	2-12		
Repairs	2-39		
Push Button Setting, Radio	11-5		
R			
Radiator	2-12		
Thermostat Test	2-38		
Radio	11-1		
Adjustments on Car	11-5		
Alignment Procedure	11-9		
Antenna Installation	11-7		
Receiver Installation	11-5		
Service Parts Lists	11-9		
Trouble Diagnosis	11-3		
Rear Axle Assembly	6-1		
Draining & Flushing	1-9		
Disassembly	6-7		
Removal	6-6		
Specifications	6-1		
Trouble Diagnosis	6-4		
Rear Wheel Bearing			
Lubrication	1-7		
Replacement	6-7		
Rear Wheel Suspension	7-4		
Reboring Cylinders	2-34		
Receiver Installation, Radio	11-5		
Recharging Battery	10-17		
Regulator, Generator	10-20		
Relay, Cut-Out	10-20		
Relay, Horn	10-70		
Relay, Solenoid Switch, Test & Adjust	10-45		
Release Mechanism, Clutch	4-3		
Ring Gear & Pinion Marks	6-14		
Ring Gear Replacement	6-11		
Rings, Piston	See Piston Rings		
Rocker Arms, Replacement	2-21		
S			
Sealed Beam Unit, Headlamp	10-65		
Serial Numbers, Car & Engine	0-3		
Sheet Metal, Chassis	12-5		
Shift Control, S-M Transmission	4-15		
Signal Lamps	10-72		
Signal, Park, Brake Release	10-69		
Silencer, Intake	3-3		
Shock Absorbers, Front & Rear	7-4		
Filling	7-19		
Replacement of Valve or Shock	7-20		
Trouble Diagnosis	7-10		
Solenoid Switch, Test, Adjust	10-43		
Specifications	10-2		
Spark Plugs	10-51		
Clean & Adjust	10-56		
Spark Timing Control	10-52		
Specific Gravity, Battery	10-14		

	Page		Page
Specifications		Tires	7-4
Battery	10-1	Abnormal Wear	7-7
Brakes	9-1	Chains, Use of	7-15
Car, General	0-3	Inflation	1-4
Chassis Suspension	7-1	Inspection, Interchanging	7-14
Clutch	4-1	Tire & Wheel Balance	7-21
Cranking System	10-2	Toe-In, Front Wheels, Check & Adjust	7-24
Engine	2-1	Torque Ball	4-13
Front Wheel Alignment	7-1	Adjustment	4-18
Fuel & Exhaust Systems	3-1	Torque Converter	5-6
Generating Systems	10-1	Transmission, Dynaflo	5-1
Ignition System	10-2	Approved Oils	1-7
Lighting System	10-3	Drain & Refill	1-7
Radio Alignment	11-9	Installation of Assembly	5-34
Rear Axle	6-1	Manual Control	5-4
Signal System (Horn, Lights, etc)	10-4	Manual Control Linkage Adjust	5-32
Steering Gear, Hydraulic	8-10	Pushing Car to Start Engine	5-5
Steering Gear Manual	8-1	Removal of Assembly	5-33
Steering Gear Lubricare	1-4	Specification	5-1
Transmission, Dynaflo	5-1	Towing Disabled Car	5-5
Transmission, Synchronesh	4-11	Trouble Diagnosis	5-25
Speedometer	10-81	Transmission, Synchronesh	4-11
Gears	4-13	Disassembly, Assembly, Series 40	4-22
Trouble Diagnosis	10-10	Disassembly, Assembly, Series 50-60	4-25
Springs, Chassis	7-2	Lubricare	1-1
Stablizer Link Adjustment	7-15	Removal & Installation	4-19
Starter	10-36	Shift Control Mechanism	4-15
Steering Gear, Hydraulic	8-10	Specifications	4-11
Steering Gear, Manual	8-1	Trouble Diagnosis	4-17
Steering Gear Lubricare	1-4	Torque Ball Adjustment	4-18
Steering Geometry (Turning Angles), Checking	7-24	Trim Dimensions, Chassis Spring, F. & R.	7-17
Steering Knuckle, Replace	7-16	Trouble Diagnosis	See Diagnosis
Steering Linkage	8-3		
Steering Wheel, Replace	8-6	U	
Stop Lights & Switch	10-68	Universal Joint	4-13
Stromberg 2-Barrel Carburetor	3-43		
Strut Rods, Replace	6-7	V	
Style Numbers, Body	13-1	Vacuum Pump, Windshield Wiper	3-14
Switch		Inspect, Test, Repairs	3-16
Dimmer	10-66	Vacuum Switch	10-38
Direction Signal	10-72	Checking Switch Timing, Cleaning	10-51
Ignition	10-50	Valve Mechanism, Engine	2-8
Lighting	10-64	Checking Timing	2-27
Neutral Safety	10-41	Guide Replacement	2-20
Stop Light	10-68	Hydraulic Lifters	2-8
		Hydraulic Lifter Service	2-22
T		Noise	2-16
Tail Lamps	10-68	Reconditioning Valves	2-20
Tank, Gasoline, Replacement	3-13	Specifications	2-3
Temperature Gauge	10-76	Ventilation, Crankcase	2-11
Thermo Circuit Breaker	10-64	Ventilator, Outside Air	11-14
Thermostat		Vickers Oil Pump, Steering	8-13
Choke, Adjustment	3-11	Voltage Regulator	10-22
Exh. Manifold Valve	3-9	Voltage Test, Cranking Motor	10-43
Radiator, Test	2-38		
Throttle Linkage	3-4	W	
Adjustment	3-12	Warning Signal, Park Brake	10-69
Tie Rods & Ends	8-3	Warranty	0-2
Adjustment	8-6	Water Pump	2-12
Tightening Specifications		Repairs	2-39
Brakes	9-1	Wheel Alignment	7-21
Chassis Suspension	7-1	Wheel Bearing, Front, Adjust	7-16
Clutch	4-1	Wheel Bearing Lubrication, Rear	1-7
Engine	2-1	Wheel Bearing Replacement, Front	7-15
Fuel & Exhaust Systems	3-1	Wheel Bearing Replacement, Rear	6-7
Rear Axle	6-1	Wheel Cylinder, Brake, Overhaul	9-20
Steering Gear, Hydraulic	8-10	Wheel & Tire Balance	7-21
Steering Gear, Manual	8-1	Wheel, Steering, Replace	8-6
Transmission, Dynaflo	5-1	Wheel Suspension	7-2
Transmission, Synchronesh	4-11	Windshield Defroster	11-14
Timing		Wiring Circuit Diagrams	10-80
Camshaft	2-27		
Carter Accel. Vac. Switch	10-39		
Ignition	10-62		
Timing Chain Replacement	2-27		