

GROUP 14

ALPHABETICAL INDEX

A	Page	C	Page
Accelerator Pedal, for Starting Engine	3-6	Camber, Check & Adjust	7-23
Accelerator Vacuum Switch	10-39	Camshaft & Bearings	2-27
Check Switch Timing, Cleaning	10-40	Carbon Monoxide Warning	11-15
Air Cleaner	3-3	Carburetor	
Clean & Fill	1-6	Adjustment	3-10
Air Conditioner	11-16	Calibrations	3-1
Service Procedures	11-21	Carter	See Carter
Alignment		Changing Calibrations	3-8
Frame	12-1	Heat Control Valve	3-9
Front Wheels	7-21	Rochester	See Rochester
Flywheel Upper Housing, Synchronesh.....	4-17	Stromberg	See Stromberg
Hood & Fenders	12-6	Throttle Linkage	3-4
Pump & Bell Housing, Dynaflo	5-48	Throttle Linkage Adjustment	3-11
Radio	11-9	Car Models	0-3
Ammeter	See Charge Indicator	Car Roughness or Vibration	7-11
Antenna Installation, Radio	11-7	Carter 2-Barrel Carburetor	3-20
Antenna Trimmer Adjustment	11-5	Carter 4-Barrel Carburetor	3-32
Anti-Freeze Solutions, Testing	2-38	Carter Climatic Control (Choke)	3-23
Armature Test & Repair	10-26	Disassembly, Cleaning, Assembly	3-26
Automatic Choke	See Carter or Stromberg	Fast Idle Cam & Unloader Adjustment	3-25
Axle Assembly, Rear	See Rear Axle	Thermostat Adjustment	3-11
Axle Shaft, Remove & Install	6-7	Caster, Check and Adjust	7-23
		Charge Indicator	10-79
		Chains, Tire	7-15
B		Chart, Headlamp Aiming	10-68
Back-Up Lamp & Switch	10-70	Chassis Lubrication	1-1
Balance, Brake Drum	9-20	Chassis Sheet Metal	12-5
Balance Flywheel, Dynaflo	2-43	Chassis Springs	7-2
Balance, Wheel & Tire	7-21	Overload, Rear	7-19
Battery	10-11	Replacement, Front	7-18
High Discharge Test	10-15	Replacement, Rear	7-18
Hydrometer Test	10-14	Trim Dimensions	7-17
Importance of Keeping Charged	10-12	Choke, Automatic	See Carter or Stromberg
Inspection & Service	10-13	Chassis Suspension Specifications	7-1
Recharging	10-18	Choke Thermostat Adjustment	3-11
Registration & Care When New	10-11	Cigar Lighters	10-72
Specifications	10-1	Circuit Diagrams, Wiring	10-83
Trouble Diagnosis	10-5	Climatic Control	See Carter
Battery Cables, Clean and Test	10-16	Clock Electric	10-80
Connecting to Wind Clock	10-18	Trouble Diagnosis	10-10
Beam Indicator, Headlight	10-67	Clutch, Dynaflo	5-12
Bearing Adjustment, Front Wheels	7-16	Clutch, Synchronesh	4-2
Bearing Lubrication, Rear Wheels	1-8	Inspect	4-6
Bearing Replacement		Lubricate Internal Parts	4-5
Connecting Rod	2-28	Pedal Adjustment	4-4
Crankshaft	2-29	Release Mechanism	4-3
Differential	6-14	Remove and Install	4-5
Front Wheel	7-15	Specifications	4-1
Rear Wheel (Axle Shaft)	6-8	Trouble Diagnosis	4-3
Bearing Service (Clean, Inspect, etc.)	1-10	Coil, Ignition	10-58
Bell Housing Alignment, Dynaflo	5-48	Connecting Rods	2-7
Body	13-1	Bearing Dimensions	2-2
Mountings	13-4	Bearing Replacement	2-28
Lubricare	1-5	Rod Replacement	2-31
Breaker Points	See Contact Points	Condenser Replacement, Distributor	10-58
Brakes	9-1	Condenser Tests, Distributor	10-58
Adjustment, Major	9-15	Contact Points, Distributor	
Adjustment, Minor	9-14	Adjustment, Replacement	10-60
Bleeding	9-12	Inspection	10-54
Drum Inspection	9-19	Cooling System, Engine	2-12
Drum Reboring & Balancing	9-20	Filling, Flushing	2-37
Flushing, Filling System	9-12	Prepare for Anti-Freeze	2-37
Master Cylinder Overhaul	9-21	Trouble Diagnosis	2-18
Operation, Service Brakes	9-4	Crankcase Ventilation	2-12
Parking Brake Adjustment, Lubrication	9-15	Cranking Motor	10-42
Parking Brake Controls	9-3	Bench Test	10-48
Power Brakes	9-24	Periodic Inspection	10-44
Shoe, Reline or Replace	9-17	Repairs on Bench	10-48
Specifications	9-1	Specifications	10-2
Testing, Trouble Diagnosis	9-7	Voltage Test	10-44
Wheel Cylinder Overhaul	9-20		
Warning Signal	10-75		
Button, Horn	10-73		
Button Setting, Radio	11-5		

	Page		Page
Cranking System	10-37		
Specifications	10-2		
Trouble Diagnosis	10-7		
Crankshaft & Bearings	2-7		
Bearing Replacement	2-30		
Dimensions	2-2		
Oil Seal Replacement	2-31		
Current Regulator	See Generator Regulator		
Cut-out Relay	See Generator Regulator		
Cylinder Crankcase	2-6		
Cylinder Heads	2-7		
Removal	2-20		
Installation	2-22		
Cylinder Reboring	2-33		
D			
Dash Pot & Throttle Linkage Adjustment	3-11		
Defroster, Windshield	11-14		
Diagnosis, Trouble			
Battery	10-5		
Brakes	9-7		
Clutch	4-3		
Clock & Instruments	10-10		
Cranking System	10-7		
Engine	2-14		
Fuel System	3-6		
Generating System	10-6		
Ignition System	10-8		
Lighting System	10-9		
Radio	11-3		
Rear Axle	6-3		
Shock Absorbers	7-10		
Signal Systems	10-9		
Steering Action	7-11		
Steering Gear, Power	8-17		
Steering Gear, Manual	8-3		
Tires	7-7		
Transmission—Dynaflow	5-29		
Transmission—Synchronesh	4-12		
Differential	See Rear Axle		
Dimmer Switch	10-67		
Directional Signal Lamps & Switch	10-73		
Lamp Circuits	10-76		
Switch Parts Replacement	10-76		
Trouble Diagnosis	10-9		
Distributor, Ignition	10-51		
Advance Mechanism	10-53		
Condenser Tests	10-58		
Contact Points—Condenser, Replace	10-60		
Overhaul	10-60		
Periodic Inspection	10-54		
Specifications	10-2		
Timing	10-62		
Dynaflow Transmission	5-1		
Lubricare	1-3		
E			
Engine	2-1		
Cooling System	2-12		
Correction for Unbalance	2-43		
Cranking System	10-37		
Dimensions, Fits, Adjustments	2-2		
Fuel & Exhaust System	3-1		
Hard Starting	3-6		
Ignition System	10-51		
Lubrication System	2-10		
Mountings	2-5		
Mounting Adjustment	2-41		
Oil Recommendations	1-8		
Specifications	2-1		
Tune Care, Trouble Diagnosis	2-14		
Ventilation System	2-12		
Valve Service	3-9		
Exhaust Pipes	3-5		
Exhaust Manifold	3-5		
F			
Fan Belt, Adjust or Replace	2-38		
Fender & Hood Alignment	12-6		
Filler, Gas Tank, Replace	3-13		
Filters, Gasoline	3-9		
Flywheel & Ring Replacement			
Dynaflow	2-41		
Synchronesh	2-42		
Flywheel Housing Alignment	4-16		
Frame	12-1		
Front Shock Absorbers	See Shock Absorbers		
Front Springs	See Chassis Springs		
Front Wheel Suspension	7-1		
Front Wheels			
Alignment	7-21		
Bearing Adjustment	7-16		
Bearing Replacement, Lubrication	7-15		
Fuel Consumption, Excessive	3-8		
Fuel Pump	3-14		
Inspection & Test	3-15		
Repairs	3-16		
Fuel System	3-1		
Trouble Diagnosis	3-6		
Fuse Block	10-83		
Fuse Specifications	10-3		
G			
Gasoline Filters & Strainers	3-9		
Gasoline Gauge	10-81		
Trouble Diagnosis	10-10		
Gasoline Tank Replacement	3-13		
Gauge			
Gasoline	10-81		
Pinion Setting	6-16		
Oil Pressure	10-80		
Temperature	10-79		
Gears, Planetary, Dynaflow	5-12		
Gear Shift Control Mechanism	4-11		
Generator	10-19		
Inspection, Test, on Car	10-23		
Lubrication	1-3		
Repairs, on Bench	10-34		
Specifications	10-1		
Test, on Bench	10-25		
Generator Regulator	10-21		
Repairs on Bench	10-34		
Specifications	10-2		
Test & Adjust, on Car	10-23		
Generating System	10-19		
Trouble Diagnosis	10-6		
Glove Box Light	10-71		
H			
Hard Starting	3-6		
Headlamps	10-66		
Aiming Adjustment	10-68		
Aiming Chart, Use of	10-68		
Sealed Beam Unit, Replace	10-67		
Heater & Defroster	11-14		
Hood	12-5		
Horns, Relay & Button	10-73		
Adjustments	10-74		
Trouble Diagnosis	10-10		
Hydraulic Control System, Dynaflow	5-16		
Hydraulic Valve Mechanism	2-8		
Hydraulic Valve Lifter Service	2-22		
Hydrometer Test of Battery	10-14		
I			
Ignition Coil	10-51		
Specifications	10-2		
Tests	10-58		
Ignition Distributor	See Distributor		
Ignition System	10-51		
Periodic Inspection	10-54		
Trouble Diagnosis	10-8		

	Page		Page
Ignition Switch	10-63		
Switch Replace, Lock Repairs	10-64		
Ignition Timing	10-56		
Indicator, Charge	10-79		
Indicator, Headlight Beam	10-67		
Indicators, Direction Signal	10-75		
Inflation Pressures, Tire	1-4		
Instrument Panel Compt. (Glove Box)			
Light & Switch	10-71		
Intake Manifold	3-4		
Intake Silencer	3-3		
		K	
King Pin Inclination, Checking	7-23		
Knuckle, Steering, Replace	7-16		
		L	
Lamp Bulb Specifications	10-3		
Lamps			
Back-Up	10-71		
Direction Signal	10-75		
Headlamps	10-66		
License, Rear	10-71		
Park, Signal, Tail, Stop	10-70		
Lighting System	10-65		
Trouble Diagnosis	10-9		
Lighters, Cigar	10-71		
Lights			
Headlights	10-66		
Direction Signal	10-75		
Instrument Panel	10-71		
Map (Inst. Panel)	10-71		
Lower Control Arm, Rebush, Replace	7-19		
Lubricare (Lubrication)			
Body	1-1		
Chassis	1-1		
Clutch Internal Parts	4-5		
Dynaflow Transmission	1-3		
Parking Brake Cables	9-15		
Speedometer Cable	10-82		
Lubrication System, Engine	2-10		
Specifications	2-2		
		M	
Manifold Heat Control	3-4		
Valve Service	3-9		
Manifold Intake	3-4		
Exhaust	3-5		
Marks on Ring Gear & Pinion	6-16		
Master Cylinder, Brake	9-12		
Filling	9-12		
Overhaul	9-21		
Models, Car	0-3		
Mountings, Body	13-2		
Mountings, Engine	2-5		
Adjustment	2-41		
Muffler	3-5		
		N	
Neutral Safety Switch	10-42		
Numbers, Body Style	13-2		
		O	
Oil Consumption, Excessive	2-15		
Oil Recommendation, Engine	1-8		
Oil Filter	2-10		
Changing Element	1-6		
Oil Pressure Gauge	10-80		
Oil Pump	2-10		
Dimensions of Parts	2-3		
Repairs	2-40		
Oil Pump, Steering	8-13		
Oil Seal C/S R. Bearing	2-31		
Oil Seals, R. Wheel Bearings	6-7		
		P	
Parking Brake Controls	9-3		
Adjustment, Lubrication	9-15		
Release Warning Signal	10-71		
Parking Lamps	10-70		
Power Brakes	9-24		
Pedal Adjustment, Brake	9-14		
Pedal Adjustment, Clutch	4-4		
Pinion Adjustment, Rear Axle	6-19		
Pinion Setting Gauges	6-16		
Pistons, Pins, Rings	2-7		
Dimensions	2-3		
Replacement	2-31		
Ring Fitting	2-34		
Propeller Shaft			
Assembly & Straightening	6-11		
Installation & Adjustment	6-11		
Removal & Disassembly	6-9		
Pump, Fuel & Vacuum	See Fuel Pump		
Pump, Oil	2-10		
Repairs	2-40		
Pump, Hydraulic Steering	8-13		
Pump, Water	2-12		
Repairs	2-89		
Push Button Setting, Radio	11-5		
		R	
Radiator	2-12		
Thermostat Test	2-38		
Radio	11-1		
Adjustments on Car	11-5		
Alignment Procedure	11-9		
Antenna Installation	11-7		
Receiver Installation	11-5		
Service Parts Lists	11-9		
Trouble Diagnosis	11-3		
Rear Axle Assembly	6-1		
Draining & Flushing	1-9		
Disassembly	6-9		
Oil Pump	6-3		
Oil Pump, Disassembly, Inspect, Assembly	6-22		
Removal	6-6		
Specifications	6-1		
Trouble Diagnosis	6-3		
Rear Wheel Bearing			
Lubrication	1-8		
Replacement	6-7		
Rear Wheel Suspension	7-4		
Reboring Cylinders	2-33		
Receiver Installation, Radio	11-5		
Recharging Battery	10-18		
Regulator, Generator	10-21		
Relay, Cut-Out	10-21		
Relay, Horn	10-73		
Relay, Solenoid Switch, Test & Adjust	10-45		
Release Mechanism, Clutch	4-3		
Ring Gear & Pinion Marks	6-14		
Ring Gear Replacement	6-13		
Rings, Piston	See Piston Rings		
Rochester 4-Barrel Carburetor	3-52		
Rocker Arms, Replacement	2-21		
		S	
Saginaw Oil Pump, Steering	8-13		
Sealed Beam Unit, Headlamp	10-66		
Serial Numbers, Car & Engine	0-3		
Sheet Metal, Chassis	12-5		
Shift Control, S-M Transmission	4-11		
Signal Lamps	10-75		
Signal, Park, Brake Release	10-71		
Silencer, Intake	3-3		
Shock Absorbers, Front & Rear	7-4		
Filling	7-19		
Replacement of Valve or Shock	7-20		
Trouble Diagnosis	7-10		

14-4 INDEX

	Page		Page
Solenoid Switch, Test, Adjust	10-45	Timing	
Specifications	10-2	Camshaft	2-27
Spark Plugs	10-52	Carter Accel. Vac. Switch	10-39
Clean & Adjust	10-57	Ignition	10-56
Spark Timing Control	10-53	Timing Chain Replacement	2-27
Specific Gravity, Battery	10-14	Tires	7-4
Specifications		Abnormal Wear	7-7
Battery	10-1	Chains, Use of	7-15
Brakes	9-1	Inflation	1-4
Car, General	0-3	Inspection, Interchanging	7-14
Chassis Suspension	7-1	Tire & Wheel Balance	7-21
Clutch	4-1	Toe-In, Front Wheels, Check & Adjust	7-24
Cranking System	10-2	Torque Ball	4-11
Engine	2-1	Adjustment	4-15
Front Wheel Alignment	7-1	Torque Converter	5-7
Fuel & Exhaust Systems	3-1	Transmission, Dynaflow	5-1
Generating Systems	10-1	Approved Oils	1-7
Ignition System	10-2	Drain & Refill	1-7
Lighting System	10-3	Installation of Assembly	5-37
Radio Alignment	11-10	Manual Control	5-4
Rear Axle	6-1	Manual Control Linkage Adjust	5-36
Signal System (Horn, Lights, etc)	10-4	Pushing Car to Start Engine	5-5
Steering Gear, Power	8-10	Removal of Assembly	5-37
Steering Gear Manual	8-1	Specification	5-1
Steering Gear Lubricare	1-4	Towing Disabled Car	5-5
Transmission, Dynaflow	5-1	Trouble Diagnosis	5-29
Transmission, Synchromesh	4-8	Transmission, Synchromesh	4-8
Speedometer	10-82	Disassembly, Assembly	4-17
Gears	4-10	Lubricare	1-1
Trouble Diagnosis	10-10	Removal & Installation	4-15
Springs, Chassis	7-2	Shift Control Mechanism	4-11
Stabilizer Link Adjustment	7-15	Specifications	4-8
Starter	10-37	Trouble Diagnosis	4-12
Steering Gear, Power	8-10	Torque Ball Adjustment	4-15
Steering Gear, Manual	8-1	Trim Dimensions, Chassis Spring, F. & R.	7-17
Steering Gear Lubricare	1-4	Trouble Diagnosis	See Diagnosis
Steering Geometry (Turning Angles), Checking	7-24		
Steering Knuckle, Replace	7-16	U	
Steering Linkage	8-3	Universal Joint	4-11
Steering Wheel, Replace	8-6		
Stop Lights & Switch	10-70	V	
Stromberg 2-Barrel Carburetor	3-42	Vacuum Pump, Windshield Wiper	3-15
Strut Rods, Replace	6-7	Inspect, Test, Repairs	3-16
Style Numbers, Body	13-2	Vacuum Switch	10-39
Switch		Checking Switch Timing, Cleaning	10-40
Dimmer	10-67	Valve Mechanism, Engine	2-8
Direction Signal	10-75	Checking Timing	2-26
Ignition	10-63	Guide Replacement	2-20
Lighting	10-65	Hydraulic Lifters	2-8
Neutral Safety	10-42	Hydraulic Lifter Service	2-22
Stop Light	10-70	Noise	2-16
T		Reconditioning Valves	2-20
Tail Lamps	10-70	Specifications	2-3
Tank, Gasoline, Replacement	3-13	Ventilation, Crankcase	2-12
Temperature Gauge	10-79	Ventilator, Outside Air	11-14
Thermo Circuit Breaker	10-65	Voltage Regulator	10-22
Thermostat		Voltage Test, Cranking Motor	10-44
Choke, Adjustment	3-11		
Exh. Manifold Valve	3-9	W	
Radiator, Test	2-38	Warning Signal, Park Brake	10-71
Throttle Linkage	3-4	Warranty	0-2
Adjustment	3-11	Water Pump	2-12
Tie Rods & Ends	8-3	Repairs	2-39
Adjustment	8-5	Wheel Alignment	7-21
Tightening Specifications		Wheel Bearing, Front, Adjust	7-16
Brakes	9-1	Wheel Bearing Lubrication, Rear	1-8
Chassis Suspension	7-1	Wheel Bearing Replacement, Front	7-15
Clutch	4-1	Wheel Bearing Replacement, Rear	6-7
Engine	2-1	Wheel Cylinder, Brake, Overhaul	9-20
Fuel & Exhaust Systems	3-1	Wheel & Tire Balance	7-21
Rear Axle	6-1	Wheel, Steering, Replace	8-6
Steering Gear, Power	8-10	Wheel Suspension	7-2
Steering Gear, Manual	8-1	Windshield Defroster	11-14
Transmission, Dynaflow	5-1	Wiring Circuit Diagrams	10-83
Transmission, Synchromesh	4-8		