

ALPHABETICAL INDEX

A

| | |
|--|--------|
| Adjuster, Remove and Install Front Seat..... | 13-59 |
| Arm Rest, Adjust Center | 13-162 |
| Arm Rest, Remove and Install Center | 13-162 |
| Arm Rest, Remove and Install Door | 13-16 |

B

| | |
|--|--------|
| Back, Remove and Install Front Seat..... | 13-161 |
| Back, Remove and Install Rear Seat..... | 13-161 |

C

| | |
|---|--------|
| Control Switch, Remove and Install Front Seat.... | 13-160 |
| Chrome, Care of | 13-2 |
| Clip, Door Lock Spring (Series 40-60)..... | 13-33 |
| Clip, Door Lock Spring (Series 50-70)..... | 13-137 |

F

| | |
|---|--------|
| Folding Top, Adjust | 13-74 |
| Folding Top, Clean | 13-3 |
| Folding Top, Operation of | 13-84 |
| Folding Top, Remove and Install | 13-76 |
| Front Door | |
| Adjust (Series 40-60) | 13-27 |
| Adjust (Series 50-70) | 13-135 |
| Handle, Disassemble Outside (Series 40-60)..... | 13-35 |
| Handle, Disassemble Outside (Series 50-70)..... | 13-138 |
| Handle, Remove and Install Outside (Series 40-60) | 13-35 |
| Handle, Remove and Install Outside (Series 50-70) | 13-138 |
| Lock Cylinder, Remove and Install (Series 40-60) | 13-37 |
| Lock Cylinder, Remove and Install (Series 50-70) | 13-37 |
| Locking Rod, Remove and Install (Series 40-60) | 13-34 |
| Locking Rod, Remove and Install (Series 50-70) | 13-138 |
| Lock, Remove and Install (Series 40-60) | 13-34 |
| Lock, Remove and Install (Series 50-70) | 13-137 |
| Molding, Remove and Install Ventilator Garnish (Series 40-60)..... | 13-27 |
| Motor, Remove and Install Window Regulator (Series 40-60) | 13-32 |
| Motor, Remove and Install Window Regulator (Series 50-70) | 13-143 |
| Regulator, Adjust Ventilator (Series 40-60) | 13-29 |
| Regulator, Adjust Ventilator (Series 50-70) | 13-141 |
| Regulator, Remove and Install Ventilator (Series 40-60) | 13-28 |
| Regulator, Remove and Install Ventilator (Series 50-70) | 13-141 |
| Regulator, Remove and Install Window (Series 40-60) | 13-31 |
| Regulator, Remove and Install Window (Series 50-70) | 13-142 |
| Remote Control, Adjust Lock (Series 40-60)..... | 13-35 |
| Remote Control, Adjust Lock (Series 50-70)..... | 13-138 |
| Remove and Install | 13-26 |
| Run Channel, Remove and Install (Series 40-60) | 13-30 |
| Run Channel, Remove and Install (Series 50-70) | 13-142 |
| Trim, Remove and Install | 13-16 |
| Ventilator, Adjust (Series 40-60) | 13-29 |
| Ventilator, Adjust (Series 50-70) | 13-141 |
| Ventilator, Remove and Install (Series 40-60)... | 13-28 |
| Ventilator, Remove and Install (Series 50-70)... | 13-141 |
| Window, Adjust (Series 40-60) | 13-30 |
| Window, Adjust (Series 50-70) | 13-142 |
| Window, Replace (Series 40-60) | 13-30 |
| Window, Replace (Series 50-70) | 13-142 |

H

| | |
|--|--------|
| Handle, Remove and Install Door Inside (Series 40-60) | 13-16 |
| Handle, Remove and Install Door Inside (Series 50-70) | 13-126 |
| Headlining, Remove and Install | 13-57 |
| Hydro-Lectric Electrical Checking Procedure | 13-85 |
| Hydro-Lectric Hydraulic Checking Procedure | 13-86 |
| Hydro-Lectric System, Convertible | 13-83 |

I

| | |
|--|--------|
| Instrument Panel | |
| Center Section, Remove and Install (Series 40-60) | 13-13 |
| Center Section, Remove and Install (Series 50-70) | 13-123 |
| Compartment Door, Adjust (Series 40-60)..... | 13-13 |
| Compartment Door, Adjust (Series 50-70) | 13-122 |
| Compartment Door, Remove and Install (Series 40-60) | 13-12 |
| Compartment Door, Remove and Install (Series 50-70) | 13-122 |
| Cover, Replace (Series 40-60) | 13-14 |
| Cover, Replace (Series 50-70) | 13-123 |
| Lock Cylinder, Remove and Install Compartment Door (Series 40-60) | 13-13 |
| Lock Cylinder, Remove and Install Compartment Door (Series 50-70) | 13-123 |

L

| | |
|--|--------|
| Leather, Care of | 13-3 |
| Lift Cylinder, Remove and Install Folding Top | 13-86 |
| Lock, Remove and Install Door | 13-137 |
| Lubrication, When Parts are Accessible | 13-104 |
| Lubrication, Twice a Year | 13-100 |

M

| | |
|---|--------|
| Molding, Remove and Install Back Window (Series 40-60) | 13-67 |
| Molding, Remove and Install Back Window (Series 50-70) | 13-164 |
| Molding, Remove and Install Door | 13-109 |
| Molding, Remove and Install Door Belt Finishing (Series 40-60) | 13-16 |
| Molding, Remove and Install Rear Quarter (Series 40-60) | 13-111 |
| Molding, Remove and Install Rear Quarter (Series 50-70) | 13-111 |
| Molding, Remove and Install Windshield (Series 40-60) | 13-4 |
| Molding, Remove and Install Windshield (Series 50-70) | 13-115 |
| Motor and Pump Assembly, Replace | 13-83 |

N

| | |
|----------------------------------|------|
| Number Plate, Fisher Body | 13-1 |
| Numbers, Fisher Body Style | 13-2 |

P

| | |
|--|-------|
| Paint, Care of | 13-2 |
| Power Seat (Horizontal) Electrical Trouble-Shooting | 13-88 |
| Power Seat (Six-Way) Electrical Trouble-Shooting | 13-92 |
| Power Window Electrical Trouble-Shooting | 13-88 |
| Pump Assembly Operation | 13-84 |

R

Rear Compartment

| | |
|--|--------|
| Hinge, Remove and Install (Series 40-60) | 13-70 |
| Hinge, Remove and Install Lid (Series 50-70) .. | 13-167 |
| Lid, Adjust (Series 40-60) | 13-69 |
| Lid, Adjust (Series 50-70) | 13-167 |
| Lid, Remove and Install (Series 40-60) | 13-69 |
| Lid, Remove and Install (Series 50-70) | 13-167 |
| Lock Cylinder, Remove and Install (Series 40-60) | 13-70 |
| Lock Cylinder, Remove and Install (Series 50-70) | 13-168 |
| Lock, Remove and Install (Series 40-60) | 13-71 |
| Lock, Remove and Install (Series 50-70) | 13-168 |
| Striker, Adjust Lock (Series 40-60) | 13-71 |
| Striker, Adjust Lock (Series 50-70) | 13-169 |
| Striker, Remove and Install Lock (Series 40-60) .. | 13-71 |
| Striker, Remove and Install Lock (Series 50-70) .. | 13-168 |
| Torque Rod, Adjust (Series 40-60) | 13-70 |
| Torque Rod, Adjust (Series 50-70) | 13-168 |
| Weatherstrip, Replace (Series 40-60) | 13-72 |
| Weatherstrip, Replace (Series 50-70) | 13-170 |
| Rear Door | |
| Adjust (Series 40-60) | 13-38 |
| Adjust (Series 50-70) | 13-144 |
| Free-Wheeling, Adjust (Series 40-60) | 13-47 |
| Free-Wheeling, Adjust (Series 50-70) | 13-147 |
| Guide, Remove and Install Window | 13-43 |
| Handle, Disassemble Outside (Series 40-60) | 13-47 |
| Handle, Disassemble Outside (Series 50-70) | 13-147 |
| Handle, Remove and Install Outside (Series 40-60) | 13-47 |
| Handle, Remove and Install Outside (Series 50-70) | 13-147 |
| Lock, Remove and Install (Series 40-60) | 13-45 |
| Lock, Remove and Install (Series 50-70) | 13-145 |
| Motor, Remove and Install Window Regulator (Series 40-60) | 13-44 |
| Motor, Remove and Install Window Regulator (Series 50-70) | 13-152 |
| Regulator, Remove and Install (Series 40-60) .. | 13-43 |
| Regulator, Remove and Install (Series 50-70) .. | 13-151 |
| Remote Control, Adjust | 13-46 |
| Remote Control, Remove and Install (Series 40-60) | 13-45 |
| Remote Control, Remove and Install (Series 50-70) | 13-145 |
| Remove and Install (Series 40-60) | 13-37 |
| Remove and Install (Series 50-70) | 13-143 |
| Run Channel, Remove and Install | 13-40 |
| Trim, Remove and Install | 13-17 |
| Window, Adjust (Series 40-60) | 13-41 |
| Window, Adjust (Series 50-70) | 13-149 |
| Window Frame, Adjust (Series 40) | 13-40 |
| Window, Replace (Series 40-60) | 13-40 |
| Window, Replace (Series 50-70) | 13-148 |
| Rear Quarter | |
| Arm Rest, Remove and Install (Series 40-60) | 13-49 |
| Arm Rest, Remove and Install (Series 50-70) | 13-154 |
| Guide, Remove and Install Window (Series 40-60) | 13-53 |
| Guide, Remove and Install Window (Series 50-70) | 13-157 |
| Molding, Remove and Install Belt Finishing (Series 40-60) | 13-49 |
| Molding, Remove and Install Belt Finishing (Series 50-70) | 13-154 |
| Regulator, Remove and Install Window (Series 40-60) | 13-53 |
| Regulator, Remove and Install Window (Series 50-70) | 13-155 |
| Run Channel, Remove and Install | 13-54 |
| Sealing Procedure, Panel (Series 40-60) | 13-54 |
| Sealing Procedure, Panel (Series 50-70) | 13-158 |
| Sealing Strip, Adjust Window (Series 40-60) .. | 13-54 |
| Sealing Strip, Adjust Window (Series 50-70) .. | 13-158 |
| Sealing Strip, Remove and Install Window (Series 40-60) | 13-54 |
| Sealing Strip, Remove and Install Window (Series 50-70) | 13-157 |

| | |
|---|--------|
| Switch, Remove and Install Window (Series 40-60) | 13-50 |
| Switch, Remove and Install Window (Series 50-70) | 13-154 |
| Trim, Remove and Install (Series 40-60) | 13-49 |
| Trim, Remove and Install (Series 50-70) | 13-154 |
| Window, Adjust (Series 40-60) | 13-51 |
| Window, Adjust (Series 50-70) | 13-156 |
| Window, Replace (Series 40-60) | 13-51 |
| Window, Replace (Series 50-70) | 13-155 |
| Robe Cord, Remove and Install (Series 40-60) .. | 13-66 |
| Robe Cord, Remove and Install (Series 50-70) .. | 13-161 |

S

| | |
|--|--------|
| Sealing Strip, Adjust Side Roof Rail Mechanical .. | 13-134 |
| Sealing Strip, Replace Side Roof Rail Mechanical .. | 13-133 |
| Seat Adjuster, Remove and Install Front (Series 40-60) | 13-59 |
| Seat Adjuster, Remove and Install Front (Series 50-70) | 13-162 |
| Seat, Adjust for Additional Rearward Movement of Front (Series 40-60) | 13-61 |
| Seat, Adjust for Additional Rearward Movement of Front (Series 50-70) | 13-163 |
| Seat, Remove and Install Front (Series 40-60) | 13-59 |
| Seat, Remove and Install Front (Series 50-70) | 13-161 |
| Seat, Remove and Install Horizontal Power | 13-61 |
| Seat, Remove and Install Six-Way Power | 13-62 |
| Side Panel, Remove and Install Front Seat | 13-160 |
| Striker, Adjust Door Lock (Series 40-60) | 13-19 |
| Striker, Adjust Door Lock (Series 50-70) | 13-128 |
| Striker, Remove and Install Door Lock (Series 40-60) | 13-19 |
| Striker, Remove and Install Door Lock (Series 50-70) | 13-128 |
| Switch, Remove and Install Window Control | 13-17 |

T

| | |
|--|--------|
| Trim Assembly, Remove and Install Door (Series 40-60) | 13-16 |
| Trim Assembly, Remove and Install Door (Series 50-70) | 13-126 |
| Trim, Cleaning Fabric | 13-2 |
| Trim, Remove and Install Center Pillar (Series 40-60) | 13-48 |
| Trim, Remove and Install Center Pillar (Series 50-70) | 13-153 |

W

| | |
|--|--------|
| Water Deflector, Remove and Install Door (Series 40-60) | 13-18 |
| Water Deflector, Remove and Install Door (Series 50-70) | 13-127 |
| Weatherstrip, Adjust Side Roof Rail (Series 40-60) .. | 13-23 |
| Weatherstrip, Adjust Side Roof Rail (Series 50-70) .. | 13-133 |
| Weatherstrip, Convertible Top | 13-74 |
| Weatherstrip, Replace Door (Series 40-60) | 13-20 |
| Weatherstrip, Replace Door (Series 50-70) | 13-131 |
| Weatherstrip, Replace Side Roof Rail (Series 40-60) .. | 13-23 |
| Weatherstrip, Replace Side Roof Rail (Series 50-70) .. | 13-133 |
| Window, Remove and Install Back (Series 40-60) .. | 13-67 |
| Window, Remove and Install Back (Series 50-70) .. | 13-165 |
| Windshield | |
| Checking Glass Opening (Series 40-60) | 13-6 |
| Checking Glass Opening (Series 50-70) | 13-116 |
| Glass, Install (Series 40-60) | 13-7 |
| Glass, Install (Series 50-70) | 13-117 |
| Glass, Remove (Series 40-60) | 13-6 |
| Glass, Remove (Series 50-70) | 13-115 |
| Molding, Remove and Install (Series 40-60) | 13-5 |
| Molding, Remove and Install (Series 50-70) | 13-115 |

| | | | |
|---|--------|--|--------|
| Windshield Wiper | | Control, Remove and Install (Series 40-60) | 13-12 |
| Auxiliary Drive, Remove and Install | | Control, Remove and Install (Series 50-70) | 13-121 |
| (Series 40-60) | 13-9 | Motor, Remove and Install (Series 40-60) | 13-9 |
| Auxiliary Drive, Remove and Install | | Motor, Remove and Install (Series 50-70) | 13-118 |
| (Series 50-70) | 13-118 | Transmission, Remove and Install (Series 40-60) | 13-10 |
| Cable, Adjust Transmission (Series 40-60) | 13-11 | Transmission, Remove and Install (Series 50-70) | 13-119 |
| Cable, Adjust Transmission (Series 50-70) | 13-120 | Wiring Diagrams | 13-96 |