

## GROUP 14

# ALPHABETICAL INDEX

<b>A</b>			
Accelerator Pedal, for Starting Engine	3-7	Drum Inspection	9-19
Air Cleaner	3-4	Drum Reboring & Balancing	9-20
Clean and Replace	1-4	Flushing, Filling System	9-13
Air Poise	7-28	Master Cylinder Overhaul	9-21
Compressor Checking Procedures	7-45	Operation, Service Brakes	9-4
Compressor Overhaul	7-45	Parking Brake Adjustment, Lubrication	9-15
Compressor Removal and Replacement	7-45	Parking Brake Controls	9-2
Height Control Valve—Adjustment	7-54	Parking Brake Warning Signal	10-76
Height Control Valve—Overhaul	7-53	Pedal Height, Power	9-24
Height Control Valve—Removal and Replacement	7-44	Pedal Height, Standard	9-14
Manual Override Valve—Adjustment	7-59	Power Brakes	9-23
Manual Override Valve—Overhaul	7-56	Shoe, Reline or Replace	9-18
Manual Override Valve—Removal and Replacement	7-45	Specifications	9-1
Operation	7-29	Testing, Trouble Diagnosis	9-7
Specifications	7-28	Wheel Cylinder Overhaul	9-20
Springs—Removal and Replacement	7-19, 7-42	Button, Horn	10-77
Trim Height—Adjustment	7-58	Button Setting, Radio	11-5
Trouble Diagnosis—General	7-41		
Air Conditioner	11-15	<b>C</b>	
Service Procedures	11-21	Camber, Check & Adjust	7-24
Alignment		Camshaft & Bearings	2-27
Frame	12-1	Carbon Monoxide Warning	11-15
Front Wheels	7-23	Carburetor	
Flywheel Upper Housing, Synchronesh	4-17	Adjustment	3-10
Hood & Fenders	12-8	Calibrations	3-1
Pump & Converter Housing, Dynaflo	5-46	Carter	See Carter
Radio	11-11	Changing Calibrations	3-9
Ammeter	See Charge Indicator	Heat Control Valve	3-10
Antenna Installation, Radio	11-8	Rochester	See Rochester
Antenna Trimmer Adjustment	11-5	Starter Switch	10-35
Anti-Freeze Solutions, Testing	2-37	Stromberg	See Stromberg
Armature Test & Repair	10-26	Throttle Linkage	3-4
Automatic Choke	See Carter, Stromberg or Rochester	Throttle Linkage Adjustment	3-12
Autronic-Eye	10-65	Car Models	0-3
Adjustments	10-70	Car Roughness or Vibration	7-11
Operation	10-67	Carter 2-Barrel Carburetor	3-19
Trouble Diagnosis	10-67	Carter 4-Barrel Carburetor	3-30
Axle Assembly, Rear	See Rear Axle	Carter Climatic Control (Choke)	3-22
Axle Shaft, Remove & Install	6-7	Disassembly, Cleaning, Assembly	3-25
		Fast Idle Cam & Unloader Adjustment	3-24
<b>B</b>			
Back-Up Lamp & Switch	10-37	Thermostat Adjustment	3-11
Balance, Brake Drum	9-20	Caster, Check and Adjust	7-24
Balance Flywheel, Dynaflo	2-42	Charge Indicator	10-83
Balance, Wheel & Tire	7-22	Chains, Tire	7-13
Ball Joint Replacement	7-15	Chassis Lubrication	1-1
Battery	10-11	Chassis Sheet Metal	12-2
High Discharge Test	10-15	Chassis Springs	7-2
Hydrometer Test	10-14	Overload, Rear	7-20
Inspection & Service	10-13	Replacement, Front	7-19
Recharging	10-17	Replacement, Rear	7-17
Registration & Care When New	10-11	Trim Dimensions	7-19
Specifications	10-1	Chassis Wiring Diagram	
Trouble Diagnosis	10-5	Synchronesh	10-93
Battery Cables, Clean and Test	10-16	Dynaflo	10-94
Connecting to Wind Clock	10-17	Choke, Automatic	See Carter or Stromberg
Beam Indicator, Headlight	10-61	Chassis Suspension Specification	7-1
Bearing Adjustment, Front Wheels	7-14	Choke Thermostat Adjustment	3-11
Bearing Lubrication, Rear Wheels	1-9	Cigar Lighters	10-76
Bearing Replacement		Circuit Diagrams, Wiring	10-89
Connecting Rod	2-28	Climatic Control	See Carter
Crankshaft	2-29	Clock Electric	10-84
Differential	6-17	Trouble Diagnosis	10-10
Front Wheel	7-14	Clutch, Dynaflo	5-12
Rear Wheel (Axle Shaft)	6-8	Clutch, Synchronesh	4-1
Bearing Service (Clean, Inspect, etc.)	1-13	Inspect	4-7
Bell Housing Alignment, Dynaflo	5-46	Lubricate Internal Parts	4-5
Breaker Points	See Contact Points	Pedal Adjustment	4-5
Brakes	9-1	Release Mechanism	4-2
Adjustment, Major	9-16	Remove and Install	4-6
Adjustment, Minor	9-14	Specifications	4-1
Bleeding	9-12	Trouble Diagnosis	4-4
		Coil, Ignition	10-46
		Coil, Ignition Test	10-53

	Page		Page
Connecting Rods	2-7	<b>E</b>	
Bearing Dimensions	2-2	Engine	2-1
Bearing Replacement	2-28	Cooling System	2-12
Rod Replacement	2-31	Correction for Unbalance	2-43
Condenser Replacement, Distributor	10-50	Cranking System	10-38
Condenser Tests, Distributor	10-54	Dimensions, Fits, Adjustments	2-2
Contact Points, Distributor		Exhaust Manifold Valve Service	3-10
Adjustment, Replacement	10-50	Fuel & Exhaust System	3-1
Converter Housing, Alignment	5-46	Hard Starting	3-7
Cooling System, Engine	2-12	Ignition System	10-46
Filling, Flushing	2-37	Lubrication System	2-10
Prepare for Anti-Freeze	2-37	Mountings	2-5
Trouble Diagnosis	2-18	Mounting Adjustment	2-41
Crankcase Ventilation	2-12	Oil Recommendations	1-11
Cranking Motor	10-38	Specifications	2-1
Bench Test	10-42	Tune Care, Trouble Diagnosis	2-14
Periodic Inspection	10-40	Ventilation System	2-12
Repairs on Bench	10-43	Exhaust Pipes	3-6
Specifications	10-2	Exhaust Manifold	3-6
Voltage Test	10-40		
Cranking System	10-38	<b>F</b>	
Trouble Diagnosis	10-6	Flight Pitch Dynaflo	Page Facing 5-1
Crankshaft & Bearings	2-7	Flywheel & Ring Replacement	
Bearing Replacement	2-30	Dynaflo	2-42
Dimensions	2-2	Synchronesh	2-42
Oil Seal Replacement	2-31	Flywheel Housing Alignment	4-17
Current Regulator	See Generator Regulator	Frame	12-1
Cut-out Relay	See Generator Regulator	Front Shock Absorbers	See Shock Absorbers
Cylinder Crankcase	2-7	Front Springs	See Chassis Springs
Cylinder Heads	2-8	Front Wheel Suspension	7-1
Removal	2-20	Front Wheels	
Installation	2-22	Alignment	7-23
Cylinder Reboring	2-33	Bearing Adjustment	7-14
		Bearing Replacement, Lubrication	7-14
<b>D</b>		Fuel Consumption, Excessive	3-8
Dash Pot & Throttle Linkage Adjustment	3-12	Fuel Pump	3-15
Defroster, Windshield	11-12	Inspection & Test	3-16
Diagnosis, Trouble		Repairs	3-16
Battery	10-5	Fuel System	3-1
Brakes	9-7	Trouble Diagnosis	3-7
Clutch	4-4	Fuse Block	10-90
Clock & Instruments	10-10	Fuse Specifications	10-3
Cranking System	10-6		
Engine	2-14	<b>G</b>	
Fuel System	3-7	Gasoline Filters & Strainers	3-10
Generating System	10-6	Gasoline Gauge	10-85
Ignition System	10-8	Trouble Diagnosis	10-10
Lighting System	10-9	Gasoline Tank Replacement	3-14
Radio	11-3	Gauge	
Rear Axle	6-4	Gasoline	10-85
Safety Minder	10-87	Pinion Setting	6-19
Shock Absorbers	7-9	Oil Pressure	10-84
Signal Systems	10-9	Temperature	10-84
Steering Action	7-10	Gears, Planetary, Dynaflo	5-12
Steering Gear, Power	8-19	Gear Shift Control Mechanism	4-12
Steering Gear, Manual	8-3	Generator	10-19
Tires	7-6	Inspection, Test, on Car	10-23
Transmission—Dynaflo	5-27	Lubrication	1-3
Transmission—Synchronesh	4-12	Repairs, on Bench	10-26
Differential	See Rear Axle	Specifications	10-1
Dimmer Switch	10-72	Test, on Bench	10-26
Directional Signal Lamps & Switch	10-78	Generator Regulator	10-19
Lamp Circuits	10-80	Specifications	10-2
Switch Adjustment	10-80	Test & Adjust, on Car	10-23
Trouble Diagnosis	10-9	Generating System	10-19
Distributor, Ignition	10-46	Trouble Diagnosis	10-6
Advance Mechanism	10-48	Glove Box Light	10-76
Condenser Tests	10-54	Guide T-3 Aimer	10-63
Contact Points—Condenser, Replace	10-50		
Dwell Angle Adjustment	10-50	<b>H</b>	
Overhaul	10-56	Hard Starting	3-7
Specifications	10-2	Headlamps	10-60
Timing	10-51	Aiming Adjustment	10-62
Dynaflo Transmission (Variable Pitch)	5-1	Sealed Beam Unit, Replace	10-62
Lubricate	1-1	Heater & Defroster	11-12
Dynaflo—Flight Pitch	Page Facing 5-1	Hood	12-5
		Horns, Relay & Button	10-77
		Adjustments	10-77
		Trouble Diagnosis	10-9



	Page		Page
Silencer, Intake	3-4	Fuel & Exhaust Systems	3-1
Shock Absorbers, Front & Rear	7-4	Rear Axle	6-1
Replacement	7-21	Steering Gear, Power	8-1
Trouble Diagnosis	7-9	Steering Gear, Manual	8-1
Solenoid Switch, Test, Adjust	10-41	Transmission, Dynaflow	5-1
Specifications	10-2	Transmission, Synchromesh	4-9
Sonomatic Radio	11-1	Timing	
Spark Plugs	10-52	Camshaft	2-2
Clean & Adjust	10-53	Carburetor Starter Switch	10-3
Spark Timing Control	10-51	Ignition	10-5
Specific Gravity, Battery	10-14	Timing Chain Replacement	2-2
Specifications		Tires	7-4
Battery	10-1	Abnormal Wear	7-6
Brakes	9-1	Inflation	1-4
Car, General	0-3	Inspection, Interchanging	7-1
Chassis Suspension	7-1	Tire & Wheel Balance	7-2
Clutch	4-1	Toe-In, Front Wheels, Check & Adjust	7-2
Cranking System	10-2	Torque Ball	4-1
Engine	2-1	Torque Converter	5-7
Front Wheel Alignment	7-25	Transmission, Dynaflow	5-1
Fuel & Exhaust Systems	3-1	Approved Oils	1-8
Generating Systems	10-1	Drain & Refill	1-8
Ignition System	10-2	Installation of Assembly	5-3
Lighting System	10-3	Manual Control	5-4
Radio Alignment	11-11	Manual Control Linkage Adjust	5-3
Rear Axle	6-1	Pushing Car to Start Engine	5-5
Signal System (Horn, Lights, etc.)	10-4	Removal of Assembly	5-3
Steering Gear, Power	8-10	Specification	5-1
Steering Gear Manual	8-1	Towing Disabled Car	5-5
Steering Gear Lubricare	1-3	Trouble Diagnosis	5-2
Transmission, Dynaflow	5-1	Transmission, Synchromesh	4-9
Transmission, Synchromesh	4-9	Disassembly, Assembly	4-1
Speedometer	10-86	Lubricare	1-1
Gears	4-10	Removal & Installation	4-1
Trouble Diagnosis	10-86	Shift Control Mechanism	4-1
Springs, Chassis	7-2	Specifications	4-9
Stabilizer Link Adjustment	7-14	Trouble Diagnosis	4-1
Starter	10-33	Trim Dimensions, Chassis Spring, F. & R.	7-1
Steering Gear, Power	8-10	Trouble Diagnosis	See Diagnosis
Steering Gear, Manual	8-1		
Steering Gear Lubricare	1-4	<b>U</b>	
Steering Geometry (Turning Angles), Checking	7-27	Universal Joint	
Steering Knuckle, Replace	7-15	Front	4-1
Steering Linkage	8-2	Rear	6-10
Steering Wheel, Replace	8-6	<b>V</b>	
Stop Lights & Switch	10-64	Vacuum Pump, Windshield Wiper	2-40
Stromberg 2-Barrel Carburetor	3-40	Inspect, Test, Repairs	2-40
Strut Rods, Replace	6-7	Vacuum Switch	See Carburetor Starter Switch
Suspension, Chassis	7-1	Valve Mechanism, Engine	2-8
Switch		Checking Timing	2-2
Back Up Light	10-37	Guide Replacement	2-20
Carburetor Starter Switch	10-35	Hydraulic Lifters	2-8
Dimmer	10-61	Hydraulic Lifter Service	2-2
Direction Signal	10-78	Noise	2-1
Ignition	10-59	Reconditioning Valves	2-20
Lighting	10-60	Specifications	2-3
Neutral Safety	10-37	Ventilation, Crankcase	2-1
Stop Light	10-75	Ventilator, Outside Air	11-1
<b>T</b>		Voltage Regulator	10-10
Tail Lamps	10-75	Voltage Test, Cranking Motor	10-40
Tank, Gasoline, Replacement	3-14	<b>W</b>	
Temperature Gauge	10-83	Warning Signal, Park Brake	10-70
Thermo Circuit Breaker	10-60	Warranty	0-2
Thermostat		Water Pump	2-1
Choke Adjustment	3-11	Repairs	2-3
Exh. Manifold Valve	3-10	Wheel Alignment	7-2
Radiator, Test	2-38	Wheel Bearing, Front, Adjust	7-14
Throttle Linkage	3-4	Wheel Bearing Lubrication, Rear	1-9
Adjustment	3-12	Wheel Bearing Replacement, Front	7-14
Tie Rods & Ends	8-3	Wheel Bearing Replacement, Rear	6-7
Adjustment	7-26	Wheel Cylinder, Brake, Overhaul	9-20
Tightening Specifications		Wheel & Tire Balance	7-2
Brakes	9-1	Wheel, Steering, Replace	8-6
Chassis Suspension	7-1	Wheel Suspension	7-2
Clutch	4-1	Windshield Defroster	11-1
Engine	2-1	Wiring Circuit Diagrams	10-80
		Wonderbar Radio	11-1