

## GROUP 14

# ALPHABETICAL INDEX

A	Page	Page	
Accelerator Pedal, for Starting Engine	3-7	Adjustment, Minor	9-14
Air Cleaner	3-4	Bleeding	9-12
Clean and Replace	1-5	Drum Inspection	9-19
Air Ride	7-29	Drum Reboring & Balancing	9-20
Air Leaks		Flushing, Filling System	9-13
External	7-36	Master Cylinder Overhaul	9-21
Internal	7-36	Operation, Service Brakes	9-4
Compressor Checking Procedures	7-36	Parking Brake Adjustment, Lubrication	9-15
Compressor Overhaul	7-38	Parking Brake Controls	9-2
Compressor Removal and Replacement	7-37	Parking Brake Warning Signal	10-76
Height Control Valve—Adjustment	7-44	Pedal Height, Standard	9-14
Height Control Valve—Overhaul	7-42	Power Brakes	9-23
Height Control Valve—Removal and Replacement	7-38	Shoe, Reline or Replace	9-17
Operation	7-30	Specifications	9-1
Specifications	7-29	Testing, Trouble Diagnosis	9-7
Springs—Removal and Replacement	7-18, 7-37	Wheel Cylinder Overhaul	9-20
Trim Height—Adjustment	7-45	Button, Horn	10-77
Trouble Diagnosis—General	7-35	Button Setting, Radio	11-3
Air Conditioner	11-34		
Service Procedures	11-40	<b>C</b>	
Alignment		Camber, Check & Adjust	7-25
Frame	12-1	Camshaft & Bearings	2-26
Front Wheels	7-24	Carburetor	
Flywheel Upper Housing, Synchronesh	4-17	Adjustment	3-11
Hood & Fenders	12-8	Calibrations	3-1
Pump & Converter Housing, Auto Trans.	5-47	Carter	See Carter
Radio	11-12	Changing Calibrations	3-9
Ammeter	See Charge Indicator	Heat Control Valve	3-10
Antenna Installation, Radio	11-7	Rochester	See Rochester
Antenna Trimmer Adjustment	11-5	Starter Switch	10-35
Anti-Freeze Solutions, Testing	2-36	Stromberg	See Stromberg
Armature Test & Repair	10-26	Throttle Linkage	3-4
Automatic Choke	See Carter, Stromberg or Rochester	Throttle Linkage Adjustment	3-12
Auto. Trans.	See Trans.	Car Models	0-3
Autronic-Eye	10-65	Car Roughness or Vibration	7-11
Adjustments	10-68	Carter 2-Barrel Carburetor	3-19
Operation	10-66	Carter 4-Barrel Carburetor	3-30
Trouble Diagnosis	10-67	Carter Climatic Control (Choke)	3-22
Axle Assembly, Rear	See Rear Axle	Disassembly, Cleaning, Assembly	3-25
Axle Shaft, Remove & Install	6-7	Fast Idle Cam & Unloader Adjustment	3-24
		Thermostat Adjustment	3-11
<b>B</b>		Caster, Check and Adjust	7-25
Back-Up Lamp & Switch	10-37	Charge Indicator	10-83
Balance, Brake Drum	9-20	Chains, Tire	7-14
Balance Flywheel, Auto. Trans.	2-43	Chassis Lubrication	1-1
Balance, Wheel & Tire	7-14	Chassis Sheet Metal	12-2
Ball Joint Replacement	7-15	Chassis Springs	7-2
Battery	10-11	Overload, Rear	7-20
High Discharge Test	10-15	Replacement, Front	7-18
Hydrometer Test	10-14	Replacement, Rear	7-20
Inspection & Service	10-13	Trim Dimensions	7-18
Recharging	10-17	Chassis Wiring Diagram	
Registration & Care When New	10-11	Auto. Trans.	10-103
Specifications	10-1	Synchronesh	10-102
Trouble Diagnosis	10-5	Choke, Automatic	See Carter or Stromberg
Battery Cables, Clean and Test	10-16	Chassis Suspension Specification	7-1
Connecting to Wind Clock	10-17	Choke Thermostat Adjustment	3-11
Beam Indicator, Headlight	10-62	Cigar Lighters	10-76
Bearing Adjustment, Front Wheels	7-14	Circuit Diagrams, Wiring	10-89
Bearing Lubrication, Front Wheels	1-7	Climatic Control	See Carter
Bearing Lubrication, Rear Wheels	1-8	Clock Electric	10-84
Bearing Replacement		Trouble Diagnosis	10-10
Connecting Rod	2-27	Clutch, Auto. Trans.	5-12
Crankshaft	2-28	Clutch, Synchronesh	4-1
Differential	6-16	Inspect	4-7
Front Wheel	7-14	Lubricate Internal Parts	4-4
Rear Wheel (Axle Shaft)	6-8	Pedal Adjustment	4-4
Bearing Service (Clean, Inspect, etc.)	1-12	Release Mechanism	4-1
Bell Housing Alignment, Auto. Trans.	5-47	Remove and Install	4-6
Breaker Points	See Contact Points	Specifications	4-1
Brakes	9-1	Trouble Diagnosis	4-4
Adjustment, Major	9-16	Coil, Ignition	10-46
		Coil, Ignition Test	10-54

	Page		Page
Connecting Rods	2-7	Cranking System	10-38
Bearing Dimensions	2-2	Dimensions, Fits, Adjustments	2-2
Bearing Replacement	2-27	Exhaust Manifold Valve Service	3-10
Rod Replacement	2-30	Fuel & Exhaust System	3-1
Condenser Replacement, Distributor	10-51	Hard Starting	3-7
Condenser Tests, Distributor	10-55	Ignition System	10-46
Contact Points, Distributor		Lubrication System	2-9
Adjustment, Replacement	10-50	Mountings	2-4
Converter Housing, Alignment	5-47	Mounting Adjustment	2-41
Cooling System, Engine	2-11	Oil Recommendations	1-10
Filling, Flushing	2-36	Specifications	2-1
Prepare for Anti-Freeze	2-36	Tune Care, Trouble Diagnosis	2-13
Trouble Diagnosis	2-17	Ventilation System	2-11
Crankcase Ventilation	2-11	Exhaust Pipes	3-6
Cranking Motor	10-38	Exhaust Manifold	3-6
Bench Test	10-43		
Periodic Inspection	10-41	<b>F</b>	
Repairs on Bench	10-44	Flywheel & Ring Replacement	
Specifications	10-2	Auto. Trans.	2-41
Voltage Test	10-41	Synchronesh	2-41
Cranking System	10-38	Flywheel Housing Alignment	4-17
Trouble Diagnosis	10-6	Frame	12-1
Crankshaft & Bearings	2-6	Front Shock Absorbers	See Shock Absorbers
Bearing Replacement	2-28	Front Springs	See Chassis Springs
Dimensions	2-2	Front Wheel Suspension	7-1
Oil Seal Replacement	2-30	Front Wheels	
Current Regulator	See Generator Regulator	Alignment	7-24
Cut-out Relay	See Generator Regulator	Bearing Adjustment	7-14
Cylinder Crankcase	2-6	Bearing Replacement, Lubrication	7-14
Cylinder Heads	2-7	Fuel Consumption, Excessive	3-8
Removal	2-19	Fuel Pump	3-15
Installation	2-21	Inspection & Test	3-16
Cylinder Reboring	2-32	Repairs	3-16
		Fuel System	3-1
<b>D</b>		Trouble Diagnosis	3-7
Dash Pot & Throttle Linkage Adjustment	3-12	Fuse Block	10-89
Defroster, Windshield	11-19	Fuse Specifications	10-3
Diagnosis, Trouble			
Air Ride	7-35	<b>G</b>	
Battery	10-5	Gasoline Filters & Strainers	3-10
Brakes	9-7	Gasoline Gauge	10-85
Clutch	4-4	Trouble Diagnosis	10-10
Clock & Instruments	10-10	Gasoline Tank Replacement	3-14
Cranking System	10-6	Gauge	
Engine	2-13	Gasoline	10-85
Fuel System	3-7	Pinion Setting	6-19
Generating System	10-6	Oil Pressure	10-84
Ignition System	10-8	Temperature	10-84
Lighting System	10-9	Gears, Planetary, Auto. Trans.	5-12
Radio	11-1	Gear Shift Control Mechanism	4-12
Rear Axle	6-4	Generator	10-19
Safety Minder	10-87	Inspection, Test, on Car	10-23
Shock Absorbers	7-9	Lubrication	1-3
Signal Systems	10-9	Repairs, on Bench	10-26
Steering Action	7-10	Specifications	10-1
Steering Gear, Power	8-19	Test, on Bench	10-26
Steering Gear, Manual	8-3	Generator Regulator	10-20
Tires	7-6	Specifications	10-2
Transmission—Auto.	5-27	Test & Adjust, on Car	10-23
Transmission—Synchronesh	4-12	Generating System	10-19
Differential	See Rear Axle	Trouble Diagnosis	10-6
Dimmer Switch	10-61	Glove Box Light	10-75
Directional Signal Lamps & Switch	10-79	Guide T-3 Aimer	10-62
Lamp Circuits	10-80		
Switch Adjustment	10-80	<b>H</b>	
Trouble Diagnosis	10-9	Hard Starting	3-7
Distributor, Ignition	10-46	Headlamps	10-60
Advance Mechanism	10-48	Aiming Adjustment	10-62
Condenser Tests	10-55	Sealed Beam Unit, Replace	10-62
Contact Points—Condenser, Replace	10-50	Heater & Defroster	11-20
Dwell Angle Adjustment	10-51	Air Condition	11-23
Overhaul	10-56	Automatic	11-21
Specifications	10-3	Standard	11-18
Timing	10-51	Hood	12-7
		Horns, Relay & Button	10-77
<b>E</b>		Adjustments	10-77
Engine	2-1	Trouble Diagnosis	10-9
Cooling System	2-11		
Correction for Unbalance	2-43		



	Page		Page
Solenoid Switch, Test, Adjust	10-42	Carburetor Starter Switch	10-36
Specifications	10-2	Ignition	10-51
Sonomatic Radio	11-1	Timing Chain Replacement	2-25
Spark Plugs	10-52	Tires	7-4
Clean & Adjust	10-53	Abnormal Wear	7-6
Spark Timing Control	10-51	Inflation	1-4
Specific Gravity, Battery	10-14	Inspection, Interchanging	7-13
Specifications		Tire & Wheel Balance	7-14
Battery	10-1	Toe-In, Front Wheels, Check & Adjust	7-27
Brakes	9-1	Torque Ball	4-11
Car, General	0-3	Torque Converter	5-7
Chassis Suspension	7-1	Transmission, Synchronesh	4-9
Clutch	4-1	Disassembly, Assembly	4-18
Cranking System	10-2	Lubricare	1-1
Engine	2-1	Removal & Installation	4-16
Front Wheel Alignment	7-24	Shift Control Mechanism	4-12
Fuel & Exhaust Systems	3-1	Specifications	4-9
Generating Systems	10-1	Trouble Diagnosis	4-12
Ignition System	10-2	Transmission, Triple Turbine	5-67
Lighting System	10-3	Approved Oils	1-7
Rear Axle	6-1	Disassembly & Assembly	5-106
Signal System (Horn, Lights, etc.)	10-4	Drain & Refill	1-8
Steering Gear, Power	8-10	Lubricare	1-1
Steering Gear Manual	8-1	Manual Control Linkage Adjust.	5-68
Steering Gear Lubricare	1-4	Removal & Installation	5-106
Transmission, Auto. Trans.	5-1	Specification	5-67
Transmission, Syncromesh	4-9	Towing Disabled Car	5-69
Speedometer	10-86	Trouble Diagnosis	5-92
Gears	4-11	Transmission, Twin Turbine	5-1
Trouble Diagnosis	10-86	Approved Oils	1-7
Springs, Chassis	7-2	Drain & Refill	1-8
Stabilizer Link Adjustment	7-14	Installation of Assembly	5-36
Starter	10-33	Manual Control	5-4
Steering Gear, Power	8-10	Manual Control Linkage Adjust.	5-33
Steering Gear, Manual	8-1	Pushing Car to Start Engine	5-5
Steering Gear Lubricare	1-4	Removal of Assembly	5-36
Steering Geometry (Turning Angles), Checking	7-28	Specifications	5-1
Steering Knuckle, Replace	7-15	Towing Disabled Car	5-5
Steering Linkage	8-2	Trouble Diagnosis	5-27
Steering Wheel, Replace	8-6	Trim Dimensions, Chassis Spring, F. & R.	7-18
Stop Lights & Switch	10-75	Trouble Diagnosis	See Diagnosis
Stromberg 2-Barrel Carburetor	3-40		
Strut Rods, Replace	6-7	<b>U</b>	
Suspension, Chassis	7-1	Universal Joint	
Switch		Front	4-11
Back Up Light	10-37	Rear	6-10
Carburetor Starter Switch	10-35	<b>V</b>	
Dimmer	10-61	Vacuum Switch	See Carburetor Starter Switch
Direction Signal	10-79	Valve Mechanism, Engine	2-7
Ignition	10-59	Checking Timing	2-25
Lighting	10-60	Guide Replacement	2-19
Neutral Safety	10-37	Hydraulic Lifters	2-8
Stop Light	10-75	Hydraulic Lifter Service	2-21
		Noise	2-14
<b>T</b>		Reconditioning Valves	2-19
Tail Lamps	10-75	Specifications	2-2
Tank, Gasoline, Replacement	3-14	Ventilation, Crankcase	2-11
Temperature Gauge	10-89	Ventilator, Outside Air	11-25
Thermo Circuit Breaker	10-60	Voltage Regulator	10-20
Thermostat		Voltage Test, Cranking Motor	10-41
Choke Adjustment	3-11	<b>W</b>	
Exh. Manifold Valve	3-10	Warning Signal, Park Brake	10-76
Radiator, Test	2-37	Warranty	0-2
Throttle Linkage	3-4	Water Pump	2-12
Adjustment	3-12	Repairs	2-38
Tie Rods & Ends	8-3	Wheel Alignment	7-24
Adjustment	7-27	Wheel Bearing, Front, Adjust	7-14
Tightening Specifications		Wheel Bearing Lubrication, Front	1-7
Brakes	9-1	Wheel Bearing Lubrication, Rear	1-8
Chassis Suspension	7-1	Wheel Bearing Replacement, Front	7-14
Clutch	4-1	Wheel Bearing Replacement, Rear	6-7
Engine	2-1	Wheel Cylinder, Brake, Overhaul	9-20
Fuel & Exhaust Systems	3-1	Wheel & Tire Balance	7-14
Rear Axle	6-1	Wheel, Steering, Replace	8-6
Steering Gear, Power	8-10	Wheel Suspension	7-2
Steering Gear, Manual	8-1	Vindshield Defroster	11-19
Transmission, Auto.	5-1	Wiring Circuit Diagrams	10-89
Transmission, Synchronesh	4-9	Wonderbar Radio	11-1
Timing			
Camshaft	2-25		