

ALPHABETICAL INDEX

A

- Adjuster, Remove and Install Front Seat
(Bucket) 5-14
- Adjuster, Remove and Install Front
Seat 5-1
- Arm Rest Adjust Center 5-17
- Arm Rest, Remove and Install Center . . 5-17
- Arm Rest, Remove and Install Door . . 2-7

C

- Chrome, Care of 0-2
- Clip, Door Lock Spring 2-5

F

- Folding Top, Adjust 7-9
- Folding Top, Clean 0-3
- Folding Top, Operation of 7-3
- Folding Top, Remove and Install 7-12
- Front Door
 - Adjust 2-13
 - Handle, Disassemble Outside 2-14
 - Handle, Remove and Install Outside . . 2-13
 - Lock Cylinder, Remove and Install . . 2-14
 - Locking Rod, Remove and Install . . . 2-5
 - Lock, Remove and Install 2-13
 - Motor, Remove and Install Window
 - Regulator 2-20
 - Regulator, Adjust Ventilator 2-16
 - Regulator, Remove and Install
 - Ventilator 2-16
 - Regulator, Remove and Install Window. 2-19
 - Run Channel, Remove and Install . . . 2-19
 - Trim, Remove and Install 2-7
 - Ventilator, Adjust 2-16
 - Ventilator, Remove and Install 2-16
 - Window, Adjust 2-18
 - Window, Replace 2-18

H

- Handle, Remove and Install Door Inside . 2-5
- Headlining, Remove and Install 6-1
- Hydro-Lectric Checking Procedure . . . 7-26
- Hydro-Lectric System, Convertible . . . 7-23

I

- Instrument Panel
 - Compartment Door, Adjust 1-27
 - Compartment Door, Remove and
Install 1-27
 - Filler Panel. 1-27
 - Lock Cylinder, Remove and Install
Compartment Door 1-27

L

- Leather, Care of 0-3
- Lift Cylinder, Remove and Install
 - Folding Top 7-29
- Lock, Remove and Install Door 2-4
- Lubrication, When Parts are
 - Accessible 9-3
 - Lubrication, Twice a Year 9-1

M

- Molding, Remove and Install Back
 - Window 4-7
- Molding, Remove and Install
 - Exterior 10-1
- Molding, Remove and Install
 - Windshield 1-1
- Motor and Pump Assembly Replace . . . 7-28

N

- Number Plate, Fisher Body 0-1
- Numbers, Fisher Body Style 0-2

P

- Paint, Care of 0-2
- Power Seat (Horizontal) Electrical
 - Trouble-Shooting 8-10
- Power Seat (Six-Way) Electrical
 - Trouble-Shooting 8-10
- Power Window Electrical Trouble-
Shooting 8-1
- Pump Assembly Operation 7-23

R

Rear Compartment	
Hinge, Remove and Install	4-14
Hinge, Remove and Install Lid	4-14
Lid, Adjust	4-14
Lid, Remove and Install	4-14
Lock Cylinder, Remove and Install	4-15
Lock, Remove and Install	4-15
Striker, Adjust Lock	4-16
Striker, Remove and Install Lock	4-16
Torque Rod, Adjust	4-15
Weatherstrip Replace	4-16
Rear Door	
Adjust	2-26
Handle, Disassemble Outside	2-28
Handle, Remove and Install Outside	2-27
Lock, Remove and Install	2-27
Motor, Remove and Install Window Regulator	2-30
Regulator, Remove and Install	2-29
Remote Control, Remove and Install	2-5
Remove and Install	2-26
Run Channel, Remove and Install	2-29
Trim, Remove and Install	2-7
Window, Adjust	2-31
Rear Quarter	
Arm Rest, Remove and Install	3-6
Guide, Remove and Install Window	3-5
Regulator, Remove and Install Window	3-6
Run Channel, Remove and Install	3-1
Sealing Procedure Panel	3-12
Trim, Remove and Install	3-6
Window, Adjust	3-5
Window, Replace	3-5

S

Seat Adjuster, Remove and Install Front	5-1
Seat, Adjust for Additional Rearward Movement of Front	5-11
Seats (Bucket)	5-13
Seat, Remove and Install Front	5-1
Seat, Remove and Install Horizontal Power	5-2
Seat, Remove and Install Four-Way Power	5-3
Seat, Remove and Install Rear	5-16
Seat, Remove and Install Six-Way Power	5-7
Striker, Adjust Door Lock	2-5
Striker, Remove and Install Door Lock	2-5

T

Trim, Cleaning Fabric	0-2
Trim, Remove and Install Center Pillar	2-35

W

Water Deflector, Remove and Install Door	2-6
Weatherstrip, Adjust Side Roof Rail	2-36
Weatherstrip, Convertible Top	7-7
Weatherstrip, Replace Door	2-1
Weatherstrip, Replace Side Side Roof Rail	2-36
Window, Remove and Install Back	4-1
Windshield	
Checking Glass Opening	1-4
Glass, Install	1-5
Glass, Remove	1-4
Molding, Remove and Install	1-1
Windshield Wiper Two Speed	1-10
Windshield Wiper Single Speed	1-7
Windshield Wiper Adjustments	1-10
Motor, Remove and Install	1-10
Transmission, Remove and Install	1-11
Wiring Diagrams	1-8