

GROUP 14

ALPHABETICAL INDEX

A	Page		Page
Air Cleaner	3-3	Differential	6-12
Clean and Replace	1-5	Front Wheel	7-14
Air Conditioner	11-16	Rear Wheel (Axle Shaft)	6-7
Service Procedures	11-27	Body Construction General	13-67
Evacuation, Leak Testing and		Body Electrical	13-55
Charging	11-34	Breaker Points	10-42
Function Test	11-37	Brakes	9-1
Trouble Diagnosis	11-36	Adjustment	9-16
Alignment		Bleeding	9-14
Front Wheels	7-16	Drum Inspection	9-20
Hood & Fenders	12-1	Drum Reboring & Balancing	9-21
Underbody Checking (Frame)	13-74	Flushing, Filling System	9-14
Ammeter See Generator Indicator		Master Cylinder Overhaul	9-21
Antenna Installation, Radio	11-6	Operation, Service Brakes	9-7
Antenna Trimmer Adjustment	11-6	Parking Brake Adjustment	9-17
Anti-Freeze Solutions, Testing	2-43	Parking Brake Controls	9-3
Armature Test & Repair	10-21	Repair of Linings	9-19
Automatic Choke Adjustment	3-10	Shoe, Reline or Replace	9-17
Auto. Trans	5-1	Specifications	9-1
Description—Operation	5-2	Testing, Trouble Diagnosis	9-10
Disassembly—Assembly	5-42	Wheel Cylinder	9-21
General Specifications	5-1	Button, Horn	10-60
Removal—Replacement	5-40	Button Setting, Radio	11-6
Tightening Specifications	5-1		
Axle Assembly, Rear	6-3	C	
Axle Shaft, Remove & Install	6-7	Camber, Check & Adjust	7-16
		Camshaft & Bearings	2-32
B		Carburetor	
Back-Up Lamp & Switch	10-58	Adjustment	3-9
Balance, Brake Drum	9-21	Calibrations	3-1
Balance, Wheel & Tire	7-7	Changing Calibrations	3-8
Ball Joint Replacement	7-10	Rochester	3-18
Battery	10-5	Throttle Linkage	3-3
Light Load Test	10-8	Throttle Linkage Adjustment	3-11
Hydrometer Test	10-8	Car Models	0-3
Inspection & Service	10-7	Car Roughness or Vibration	7-11
Recharging	10-11	Caster, Check and Adjust	7-16
Registration & Care When New	10-5	Center Support Bearing	6-19
Specifications	10-1	Charge Indicator See Generator Indicator	
Trouble Diagnosis	10-12	Chassis Lubrication	1-1
Battery Cables, Clean and Test	10-10	Chassis Sheet Metal	12-3
Beam Indicator, Headlight	10-54	Chassis Springs	7-13
Bearing Adjustment, Front Wheels	7-9	Replacement, Front	7-13
Bearing Lubrication, Front Wheels	1-8	Replacement, Rear	7-13
Bearing Lubrication, Rear Wheels	1-8	Trim Dimensions	7-13
Bearing Replacement		Chassis Wiring Diagram	10-87
Connecting Rod	2-33	Choke, Automatic	3-22
Crankshaft	2-34	Chassis Suspension Specification	7-1

	Page		Page
Chrome, Care of	13-2	Battery	10-12
Cigar Lighter	10-59	Brakes	9-10
Circuit Diagrams, Wiring	10-77	Clutch	4-3
Clock Electric	10-72	Clock & Instruments	10-71
Clutch, Synchronesh	4-1	Cranking System	10-31
Adjustment & Lubrication	4-4	Engine	2-15
Inspect	4-6	Fuel System	3-6
Lubricate Internal Parts	4-5	Generating System	10-18
Pedal Lash Adjustment	4-4	Heater—Defroster	11-13
Release Mechanism	4-3	Ignition System	10-41
Remove and Install	4-5	Radio	11-2
Specifications	4-1	Rear Axle	6-4
Trouble Diagnosis	4-3	Shock Absorbers	7-2
Coil, Ignition	10-38	Signal Systems	10-60
Coil, Ignition Test	10-45	Steering Action	7-4
Connecting Rods	2-7	Steering Gear, Power	8-22
Bearing Dimensions	2-2	Steering Gear, Manual	8-4
Bearing Replacement	2-33	Tires	7-7
Rod Replacement	2-36	Transmission—Auto.	5-1
Condenser Tests, Distributor	10-46	Transmission—Synchronesh	4-12
Constant Velocity Universal Joint	6-19	Differential	6-3
Contact Points, Distributor		Dimmer Switch	10-53
Adjustment, Replacement	10-42	Directional Signal Lamps & Switch	10-63
Cooling System, Engine	2-13	Lamp Circuits	10-66
Filling, Flushing	2-43	Switch Adjustment	10-65
Prepare for Anti-Freeze	2-43	Trouble Diagnosis	10-64
Trouble Diagnosis	2-19	Distributor, Ignition	10-38
Crankcase Ventilation	2-12	Advance Mechanism	10-39
Cranking Motor	10-27	Condenser Tests	10-46
Bench Test	10-34	Contact Points—Condenser, Replace	10-42
Periodic Inspection	10-32	Dwell Angle Adjustment	10-42
Repairs on Bench	10-35	Overhaul	10-47
Specifications	10-2	Specifications	10-3
Voltage Test	10-32	Timing	10-43
Cranking System	10-27	Doors	13-16
Trouble Diagnosis	10-31	Front Doors	13-16
Crankshaft & Bearings	2-7	Front and Rear Doors	13-22
Bearing Replacement	2-34	Rear Doors	13-27
Dimensions	2-2		
Oil Seal Replacement	2-30		
Current Regulator	10-16	E	
Cut-out Relay	10-16	Engine	2-1
Cylinder Crankcase	2-7	Cooling System	2-13
Cylinder Heads	2-7	Cranking System	10-27
Removal	2-14	Dimensions, Fits, Adjustments	2-2
Installation	2-14	Fuel & Exhaust System	3-2
Cylinder Reboring	2-38	Hard Starting	3-6
		Identification	0-3
D		Ignition System	10-37
Dash Pot & Throttle Linkage		Lubrication System	2-9
Adjustment	3-12	Mountings	2-6
Defroster, Windshield	11-8	Mounting Adjustment	2-49
Diagnosis, Trouble		Oil Recommendations	1-11
Air Conditioner	11-36	Specifications	2-1

	Page		Page
Tune Care, Trouble Diagnosis	2-15	Heater & Defroster	11-8
Ventilation System	2-12	Hood	12-1
Exhaust Pipes	3-5	Horns, Relay & Button	10-60
Exhaust Manifold	3-5	Adjustments	10-63
		Trouble Diagnosis	10-60
		Hydraulic Control System, Auto. Trans	5-24
		Hydraulic Valve Mechanism	2-8
		Hydraulic Valve Lifter Service	2-26
		Hydrometer Test of Battery	10-8
		F	
Flywheel & Ring Replacement			
Auto. Trans	2-49		
Synchronesh	2-49		
Front Shock Absorbers. See Shock Absorbers			
Front Springs See Chassis Springs			
Front Wheel Suspension	7-1		
Front Wheels			
Alignment	7-16		
Bearing Adjustment	7-9		
Bearing Replacement, Lubrication	7-9		
Fuel Consumption, Excessive	3-8		
Fuel Pump	3-14		
Inspection & Test	3-15		
Repairs	3-15		
Fuel System	3-2		
Trouble Diagnosis	3-6		
Fuse Block	10-77		
Fuse Specifications	10-4		
		G	
Gasoline Filters & Strainers	3-3		
Gasoline Gauge	10-73		
Trouble Diagnosis	10-74		
Gasoline Tank Replacement	3-13		
Gear Shift Control Mechanism	4-10		
Generator	10-14		
Inspection, Test, on Car	10-22		
Lubrication	1-3		
Repairs, on Bench	10-26		
Specifications	10-1		
Test, on Bench	10-20		
Generator Indicator	10-14		
Generator Regulator	10-14		
Specifications	10-2		
Test & Adjust, on Car	10-22		
Generating System	10-14		
Trouble Diagnosis	10-18		
Guide T-3 Aimer	10-54		
		H	
Hard Starting	3-6		
Headlamps	10-52		
Aiming Adjustment	10-54		
Sealed Beam Unit, Replace	10-54		
Headlining	13-35		
		I	
		Identification No., Vehicle	0-3
		Ignition Coil	10-38
		Specifications	10-3
		Tests	10-45
		Ignition Distributor	10-38
		Ignition System	10-37
		Trouble Diagnosis	10-41
		Ignition Switch	10-37
		Switch Replace, Lock Repairs	10-50
		Ignition Timing	10-43
		Indicator, Charge	10-69
		Indicator, Headlight Beam	10-54
		Indicator Lights	
		Generator	10-69
		Oil Pressure	10-70
		Water Temperature	10-71
		Indicators, Direction Signal	10-63
		Inflation Pressures, Tire	1-5
		Instrument Panel	13-13
		Compartment	13-13
		Cover Assembly	13-13
		Intake Manifold	3-4
		K	
		King Pin Inclination, Theoretical	7-16
		Knuckle, Steering, Replace	7-10
		L	
		Lamp Bulb Specifications	10-4
		Lamps	
		Back-Up	10-57
		Direction Signal	10-63
		Headlamps	10-52
		License, Rear	10-57
		Park, Signal, Tail, Stop	10-57
		Lash Adjustment, Clutch Pedal	4-4
		Light Load Test of Battery	10-8
		Lighting System	10-52
		Lighters, Cigar	10-59

	Page	P	Page
Lights			
Headlights	10-52	Paint, Care of	13-2
Direction Signal	10-63	Parking Brake Controls	9-3
Instrument Panel Control	10-67	Adjustment	9-17
Linkage Steering	8-3	Parking Lamps	10-57
Lower Control Arm, Rebush, Replace	7-15	Pedal Adjustment, Clutch	4-4
Lubricare (Lubrication)	1-1	Pinion Adjustment, Rear Axle	6-16
Auto. Transmission	1-8	Pinion Setting Gauges	6-15
Body	1-5	Pistons, Pins, Rings	2-36
Chassis	1-1	Dimensions	2-2
Clutch Internal Parts	4-5	Replacement	2-36
Speedometer Cable	10-75	Ring Fitting	2-39
Lubrication System, Engine	2-10	Propeller Shaft	
Specifications	2-1	Assembly	6-22
		Installation	6-23
M		Removal	6-19
Manifold Intake	3-4	Pump, Fuel	3-14
Exhaust	3-5	Pump, Oil Engine	2-10
Marks on Ring Gear & Pinion	6-14	Repairs	2-46
Master Cylinder, Brake	9-7	Pump, Hydraulic Steering	8-16
Filling	9-14	Pump, Water	2-13
Overhaul	9-21	Repairs	2-43
Models, Car	0-3	Push Button Setting, Radio	11-6
Moldings			
Garnish	13-4	R	
Reveal	13-4	Radiator	2-13
Exterior	13-59	Thermostat Test	2-45
Mountings, Engine	2-4	Radio	11-1
Adjustment	2-49	Adjustments on Car	11-6
Muffler	3-5	Antenna Installation	11-6
		Receiver Installation	11-3
N		Trouble Diagnosis	11-2
Neutral Safety Switch	10-29	Rear Axle Assembly	6-1
Numbers, Fisher Body Style	13-1	Disassembly	6-6
		Lubrication	1-11
O		Removal	6-6
Oil Consumption, Excessive	2-15	Specifications	6-1
Oil Recommendation, Engine	1-10	Trouble Diagnosis	6-4
Oil Filter, Engine	2-10	Rear Compartment	13-46
Changing Element	1-1	Rear Quarter	13-33
Oil Pressure Indicator Light	10-70	Trim Removal	13-34
Oil Pump, Engine	2-10	Window	13-34
Repairs	2-46	Rear Universal Joint Angle	
Oil Pump, Steering	8-16	Adjustment	6-23
Oil Seals, R. Wheel Bearings	6-8	Rear Wheel Bearing	
		Lubrication	1-8
		Replacement	6-7
		Rear Wheel Suspension	7-4
		Reboring Cylinders	2-38
		Receiver Installation, Radio	11-3
		Recharging Battery	10-11
		Regulator, Generator	10-14
		Relay, Cut-Out	10-16
		Relay, Horn	10-60
		Release Mechanism, Clutch	4-3

	Page		Page
Ring Gear & Pinion Marks	6-14	Steering Gear, Power	8-12
Ring Gear Replacement	6-14	Steering Gear, Manual	8-1
Rings, Piston See Piston Rings		Steering Gear Lubricare	1-4
Rochester 2-Barrel Carburetor	3-18	Steering Geometry (Turning Angles), Checking	7-27
Rocker Arms, Replacement	2-21	Steering Knuckle, Replace	7-10
S			
Saginaw Oil Pump, Steering	8-16	Steering Linkage	8-3
Sealed Beam Unit, Headlamp	10-53	Steering Wheel, Replace	8-7
Seats		Stop Lights & Switch	10-58
Adjuster	13-37	Suspension, Chassis	7-1
Removal & Installation	13-37	Switch	
Side Panel	13-39	Back Up Light	10-58
Serial Numbers, Car &		Dimmer	10-53
Engine See Identification No., Vehicle		Direction Signal	10-63
Sheet Metal, Chassis	12-1	Ignition	10-37
Shift Control, S-M Transmission	4-10	Lighting	10-52
Signal Lamps	10-63	Neutral Safety	10-29
Shock Absorbers, Front & Rear	7-2	Stop Light	10-58
Replacement	7-13	T	
Solenoid Switch, Test, Adjust	10-33	Tail Lamps	10-58
Specifications	10-2	Tank, Gasoline, Replacement	3-13
Spark Plugs	10-44	Thermo Circuit Breaker	10-52
Clean & Adjust	10-45	Thermostat	
Spark Timing Control	10-39	Choke Adjustment	3-10
Specific Gravity, Battery	10-6	Radiator, Test	2-37
Specifications		Throttle Linkage	3-4
Air Conditioner	11-16	Adjustment	3-13
Battery	10-1	Tie Rods & Ends	8-4
Brakes	9-1	Adjustment	7-27
Car, General	0-3	Tightening Specifications	
Chassis Suspension	7-1	Brakes	9-1
Clutch	4-1	Chassis Suspension	7-1
Cranking System	10-2	Clutch	4-1
Engine	2-1	Engine	2-1
Front Wheel Alignment	7-23	Fuel & Exhaust Systems	3-1
Fuel & Exhaust Systems	3-1	Rear Axle	6-1
Generating Systems	10-1	Steering Gear, Power	8-12
Ignition System	10-3	Steering Gear, Manual	8-1
Lighting System	10-3	Transmission, Auto.	5-2
Rear Axle	6-1	Transmission, Synchromesh	4-7
Signal System (Horn, Lights, etc.)	10-4	Timing	
Steering Gear, Power	8-12	Camshaft	2-31
Steering Gear Manual	8-1	Ignition	10-43
Steering Gear Lubricare	1-4	Timing Chain Replacement	2-30
Steering Linkage	8-2	Tires	7-7
Transmission, Auto.	5-1	Abnormal Wear	7-7
Transmission, Synchromesh	4-7	Inflation	1-5
Speedometer	10-74	Inspection	7-7
Gears	4-8	Interchanging	7-7
Trouble Diagnosis	10-75	Tire & Wheel Balance	7-8
Springs, Chassis	7-13	Toe-In, Front Wheels, Check & Adjust	7-16
Stabilizer Link Adjustment	7-9		
Starter	10-27		

	Page		Page
Torque Converter	5-1	Hydraulic Lifters	2-8
Transmission, Synchronesh	4-7	Hydraulic Lifter Service	2-26
Disassembly, Assembly	4-15	Noise	2-17
Lubricare	1-1	Reconditioning Valves	2-22
Removal & Installation	4-14	Specifications	2-2
Shift Control Mechanism	4-10	Ventilation, Crankcase	2-12
Specifications	4-7	Ventilator, Outside Air	11-15
Trouble Diagnosis	4-12	Voltage Regulator	10-17
Transmission, Automatic	5-1	Voltage Test, Cranking Motor	10-32
Approved Oils	1-8		
Drain & Refill	1-8	W	
Installation of Assembly	5-40	Warranty	0-2
Manual Control	5-3	Water Pump	2-13
Manual Control Linkage Adjust	5-39	Repairs	2-45
Removal of Assembly	5-40	Wheel Alignment	7-23
Specifications	5-1	Wheel Bearing, Front, Adjust	7-9
Towing Disabled Car	5-3	Wheel Bearing Lubrication, Front	1-8
Road Test	5-38	Wheel Bearing Replacement, Front	7-9
Trim Dimensions, Chassis Spring, F. & R.	7-18	Wheel Bearing Replacement, Rear	6-7
Trouble Diagnosis	See Diagnosis	Wheel Cylinder, Brake, Overhaul	9-21
U		Wheel & Tire Balance	7-7
Universal Joint		Wheel, Steering, Replace	8-7
Front	6-22	Wheel Suspension	7-1
Rear	6-22	Windshield	
V		Checking Glass Opening	13-5
Valve Mechanism, Engine	2-8	Defroster	11-8
Checking Timing	2-38	Glass Install	13-5
Guide Replacement	2-22	Glass Removal	13-4
		Washer	13-10
		Wiper	13-7
		Wiring Circuit Diagrams	10-60