

GROUP 14

ALPHABETICAL INDEX

A	Page		Page
Air Cleaner	3-5	Front Wheel	7-14
Clean and Replace	1-3	Rear Wheel (Axle Shaft)	6-8
Air Conditioner	11-22	Breaker Points	10-43
Compressor	11-13	Brakes.	9-1
Service Procedures.	11-59	Adjustment	9-16
Evacuation, Leak Testing and		Bleeding	9-14
Charging.	11-66	Drum Inspection	9-20
Function Test.	11-69	Drum Reboring & Balancing	9-21
Trouble Diagnosis	11-68	Flushing, Filling System	9-14
Alignment		Master Cylinder Overhaul.	9-21
Front Wheels	7-16	Operation, Service Brakes	9-7
Hood	12-1	Parking Brake Adjustment	9-17
Ammeter See Generator Indicator		Parking Brake Controls	9-3
Antenna Installation, Radio.	11-4	Repair of Linings	9-19
Antenna Trimmer Adjustment	11-7	Shoe, Reline or Replace	9-17
Anti-Freeze Solutions, Testing.	2-43	Specifications.	9-1
Armature Test & Repair.	10-22	Testing, Trouble Diagnosis	9-10
Automatic Choke Adjustment.	3-14	Wheel Cylinder	9-21
Auto. Trans	5-1	Power Brake	9-24
Description—Operation	5-2	Button, Horn	10-62
Disassembly—Assembly	5-42	Button Setting, Radio.	11-7
General Specifications	5-1		
Removal—Replacement	5-40	C	
Tightening Specifications	5-1		
Axle Assembly, Rear.	6-3	Camber, Check & Adjust	7-18
Axle Shaft, Remove & Install	6-7	Camshaft & Bearings	2-32
		Carburetor	
B		Adjustment	3-14
Back-Up Lamp & Switch	10-58	Calibrations.	3-1
Balance, Brake Drum	9-21	Changing Calibrations	3-11
Balance, Wheel & Tire.	7-8	Rochester	3-22
Ball Joint Replacement.	7-10	Throttle Linkage	3-5
Battery.	10-6	Throttle Linkage Adjustment	3-15
Light Load Test	10-9	Car Models	0-3
Hydrometer Test	10-9	Car Roughness or Vibration.	7-5
Inspection & Service	10-8	Caster, Check and Adjust	7-16
Recharging	10-12	Center Support Bearing	6-20
Registration & Care When New	10-6	Charge Indicator See Generator Indicator	
Specifications	10-1	Chassis Lubrication	1-6
Trouble Diagnosis	10-13	Chassis Sheet Metal	12-3
Battery Cables, Clean and Test	10-11	Chassis Springs	7-13
Beam Indicator, Headlight	10-55	Replacement, Front	7-13
Bearing Adjustment, Front Wheels	7-9	Replacement, Rear	7-13
Bearing Lubrication, Front Wheels	1-10	Trim Dimensions	7-14
Bearing Lubrication, Rear Wheels	1-11	Chassis Wiring Diagram.	10-113
Bearing Replacement		Choke, Automatic.	3-22
Connecting Rod	2-33	Chassis Suspension Specification	7-1
Crankshaft	2-34	Cigar Lighter.	10-60
Differential	6-11	Circuit Diagrams, Wiring	10-95
		Clock Electric	10-76

	Page		Page
Clutch, Synchronesh	4-1	Battery	10-13
Adjustment & Lubrication	4-4	Brakes	9-10
Inspect	4-6	Power Brake	9-24
Lubricate Internal Parts	4-5	Clutch	4-3
Pedal Lash Adjustment	4-4	Clock & Instruments	10-76
Release Mechanism	4-3	Cranking System	10-31
Remove and Install	4-5	Engine	2-15
Specifications	4-1	Fuel System	3-9
Trouble Diagnosis	4-3	Generating System	10-18
Coil, Ignition	10-39	Heater—Defroster	11-19
Coil, Ignition Test	10-47	Ignition System	10-41
Compressor, Air Conditioner		Radio	11-2
Description	11-34	Rear Axle	6-4
Clutch and Seal Removal	11-41	Shock Absorbers	7-13
Disassembly	11-46	Signal Systems	10-62
Connecting Rods	2-7	Steering Action	7-4
Bearing Dimensions	2-2	Steering Gear, Power & Pump	8-15
Bearing Replacement	2-33	Steering Gear, Manual	8-2
Rod Replacement	2-36	Tires	7-7
Condenser Tests, Distributor	10-48	Transmission—Auto	5-1
Constant Velocity Universal Joint	6-20	Transmission—Synchronesh	4-12
Contact Points, Distributor		Differential	6-9
Adjustment, Replacement	10-43	Dimmer Switch	10-53
Cooling System, Engine	2-13	Directional Signal Lamps & Switch	10-65
Filling, Flushing	2-43	Lamp Circuits	10-68
Prepare for Anti-Freeze	2-43	Switch Adjustment	10-67
Trouble Diagnosis	2-19	Trouble Diagnosis	10-66
Crankcase Ventilation	2-12	Distributor, Ignition	10-38
Cranking Motor	10-27	Advance Mechanism	10-40
Bench Test	10-34	Condenser Tests	10-48
Periodic Inspection	10-32	Contact Points—Condenser, Replace	10-43
Repairs on Bench	10-35	Dwell Angle Adjustment	10-43
Specifications	10-2	Overhaul	10-49
Voltage Test	10-32	Specifications	10-3
Cranking System	10-27	Timing	10-43
Trouble Diagnosis	10-31		
Crankshaft & Bearings	2-7	E	
Bearing Replacement	2-34	Engine	2-1
Dimensions	2-2	Cooling System	2-13
Oil Seal Replacement	2-30	Cranking System	10-27
Current Regulator	10-17	Dimensions, Fits, Adjustments	2-2
Cut-out Relay	10-17	Fuel & Exhaust System	3-5
Cylinder Crankcase	2-7	Hard Starting	3-9
Cylinder Heads	2-7	Identification	0-3
Removal	2-14	Ignition System	10-37
Installation	2-14	Lubrication System	2-9
Cylinder Reboring	2-38	Mountings	2-6
		Mounting Adjustment	2-49
D		Oil Recommendations	1-4
Dash Pot & Throttle Linkage		Specifications	2-1
Adjustment	3-15	Tune Care, Trouble Diagnosis	2-15
Defroster, Windshield	11-13	Ventilation System	2-12
Diagnosis, Trouble		Exhaust Pipes	3-7
Air Conditioner	11-68	Exhaust Manifold	3-7

	Page		Page
Clutch	4-1	Chassis Suspension	7-1
Cranking System	10-2	Clutch	4-1
Engine	2-1	Engine	2-1
Front Wheel Alignment	7-15	Fuel & Exhaust Systems	3-1
Fuel & Exhaust Systems	3-1	Rear Axle	6-1
Generating Systems	10-1	Steering Gear, Power	8-15
Ignition System	10-3	Steering Gear, Manual	8-1
Lighting System	10-3	Transmission, Auto.	5-2
Rear Axle	6-1	Transmission, Synchromesh	4-7
Signal System (Horn, Lights, etc.)	10-4	4-Speed Transmission	4-26
Steering Gear, Power	8-16	Timing	
Steering Gear Manual	8-2	Camshaft	2-31
Steering Gear Lubricare	1-7	Ignition	10-43
Steering Linkage	8-3	Timing Chain Replacement	2-30
Transmission, Auto.	5-1	Tires	7-7
Transmission, Synchromesh	4-7	Abnormal Wear	7-7
4-Speed Transmission	4-26	Inflation	1-8
Speedometer	10-74	Inspection	7-7
Gears	4-8	Interchanging	7-8
Trouble Diagnosis	10-75	Tires & Wheel Balance	7-8
Springs, Chassis	7-13	Toe-In, Front Wheels, Check & Adjust	7-19
Stabilizer Link Adjustment	7-9	Torque Converter	5-1
Starter	10-27	Transmission, Synchromesh	4-7
Steering Gear, Power	8-15	Disassembly, Assembly	4-15
Steering Gear, Manual	8-1	Lubricare	1-6
Steering Gear Lubricare	1-7	Removal & Installation	4-14
Steering Geometry (Turning Angles), Checking	7-21	Shift Control Mechanism	4-10
Steering Knuckle, Replace	7-11	Specifications	4-7
Steering Linkage	8-3	Trouble Diagnosis	4-12
Steering Wheel, Replace	8-5	Transmission, Automatic	5-1
Stop Lights & Switch	10-58	Approved Oils	1-4
Suspension, Chassis	7-1	Drain & Refill	1-4
Switch		Installation of Assembly	5-40
Back Up Light	10-58	Manual Control	5-3
Dimmer	10-53	Manual Control Linkage Adjust	5-38
Direction Signal	10-63	Removal of Assembly	5-40
Ignition	10-37	Specifications	5-1
Lighting	10-52	Towing Disabled Car	5-3
Neutral Safety	10-29	Road Test	5-38
Stop Light	10-58	Trim Dimensions, Chassis Spring, F. & R.	7-14
		Trouble Diagnosis	See Diagnosis
T		U	
Tail Lamps	10-58	Universal Joint	
Tank, Gasoline, Replacement	3-17	Front	6-25
Thermo Circuit Breaker	10-52	Rear	6-25
Thermostat		V	
Choke Adjustment	3-14	Valve Mechanism, Engine	2-8
Radiator, Test	2-37	Checking Timing	2-38
Throttle Linkage	3-5	Guide Replacement	2-22
Adjustment	3-15	Hydraulic Lifters	2-8
Tie Rods & Ends	8-3	Hydraulic Lifter Service	2-26
Tightening Specifications			
Brakes	9-1		

	Page		Page
Noise	2-17	Repairs	2-45
Reconditioning Valves	2-22	Wheel Alignment	7-23
Specifications	2-2	Wheel Bearing, Front, Adjust	7-9
Ventilation, Crankcase	2-12	Wheel Bearing Lubrication, Front	1-10
Ventilator, Outside Air	11-21	Wheel Bearing Replacement, Front	7-9
Voltage Regulator	10-17	Wheel Bearing Replacement, Rear	6-8
Voltage Test, Cranking Motor	10-32	Wheel Cylinder, Brake, Overhaul	9-21
		Wheel & Tire Balance	7-7
		Wheel, Steering, Replace	8-5
		Wheel Suspension	7-1
		Defroster	11-8
		Wiring Circuit Diagrams	10-60
W			
Warranty.	0-2		
Water Pump.	2-13		