

GROUP 14

ALPHABETICAL INDEX

A	Page		Page
Accessories	11-1	Bearing Replacement	
Air Cleaner	3-7	Connecting Rod	2-28
Clean and Replace	1-7	Crankshaft	2-29
Air Conditioner	11-37	Differential	6-10
Service Procedures	11-78	Rear Wheel (Axle Shaft)	6-7
Evacuation, Leak Testing and		Bell Housing Alignment	5-50
Charging	11-105	Breaker Points	See Contact Points
Function Test	11-106	Brakes	9-1
Trouble Diagnosis	11-106	Adjustment	9-15
Alignment		Bleeding	9-14
Front Wheels	7-27	Drum Inspection	9-20
Hood and Fenders	12-3	Drum Reboring and Balancing	9-21
Pump and Converter Housing	5-47	Flushing, Filling System	9-14
Radio	11-1	Lubrication	1-7
Ammeter	See Generator Indicator	Master Cylinder Overhaul	9-21
Antenna Installation, Radio	11-7	Operation, Service Brakes	9-2
Antenna Trimmer Adjustment	11-11	Parking Brake Adjustment	9-16
Automatic Choke Adjustment	3-19	Parking Brake Controls	9-3
Automatic Headlight Beam		Parking Brake Warning Signal	10-52
Control	See Guide-Matic	Power Brakes	9-26
Automatic Transmission	5-1	Repair of Linings	9-18
Description—Operation	5-7	Shoe Reline or Replace	9-18
Disassembly—Assembly	5-39	Specifications	9-1
General Specifications	5-1	Testing Trouble Diagnosis	9-10
Removal—Replacement	5-38	Wheel Cylinder Overhaul	9-21
Tightening Specifications	5-2	Bumper, Front	12-10
Axle Assembly, Rear	6-2	Bumper, Rear	12-19
Axle Shaft, Remove and Install	6-7	Button, Horn	10-53
Axle Assembly, Rear Lubricants	1-10	Button Setting, Radio	11-11
B		C	
Back-Up Lamp and Switch	10-50	Camber, Check and Adjust	7-28
Balance, Brake Drum	9-21	Camshaft and Bearings	2-5
Balance Flywheel	2-46	Carburetor	
Balance, Wheel and Tire	7-15	Adjustment	3-19
Ball Joint Replacement	7-16	Calibrations	3-2
Battery	10-6	Carter	See Carter
Light Load Test	10-8	Heat Control Valve	3-8
Hydrometer Test	10-9	Rochester	See Rochester
Inspection and Service	10-7	Clutch, Specifications	4-1
Recharging	10-11	Description	4-2
Registration and Care When New	10-6	Trouble Diagnosis	4-3
Specifications	10-1	Clutch Adjustment	4-6
Trouble Diagnosis	10-11	Removal	4-6
Battery Cables, Clean and Test	10-10	Alignment of Flywheel Housing	4-9
Bearing Adjustment, Front Wheels	7-15	Throttle Linkage	3-8
Bearing Lubrication, Front Wheels	1-7	Throttle Linkage Adjustment	3-20

	Page		Page
Car Models	0-3	Defroster, Windshield	11-22
Car Roughness or Vibration	7-11	Diagnosis, Trouble	
Carter 4-Barrel Carburetor	3-37	Air Conditioner	11-106
Carter Climatic Control (Choke)	3-40	Battery	10-11
Disassembly, Cleaning Assembly	3-41	Brakes	9-1
Fast Idle Cam and Unloader		Clock	10-65
Adjustment	3-43	Cranking System	10-26
Caster, Check and Adjust	7-28	Engine	2-16
Center Support Bearing	6-28	Fuel System	3-12
Charge Indicator See Generator Indicator		Gasoline Gauge	10-65
Chassis Lubrication	1-4	Generating System	10-19
Chassis Sheet Metal	12-1	Guide-Matic	11-119
Chassis Springs	7-20	Ignition System	10-35
Replacement, Front	7-21	Radio	11-1
Replacement, Rear	7-22	Rear Axle	6-2
Trim Dimensions	7-20	Safety Buzzer	10-67
Choke, Automatic	3-17	Shock Absorbers	7-5
Chassis Suspension Specification	7-1	Steering Action	7-11
Cigar Lighters	10-51	Steering Gear, Power	8-10
Circuit Diagrams, Wiring	10-112	Steering Gear, Manual	8-2
Climatic Control See Carter		Tires	7-7
Clock Electric	10-60	Transmission - Automatic	5-1
Clutch, Automatic Transmission	5-12	Twilight Sentinel	11-130
Coil, Ignition Test	10-40	Differential	6-8
Connecting Rods	2-6	Dimmer Switch	10-47
Bearing Dimensions	2-3	Directional Signal Lamps and Switch	10-55
Bearing Replacement	2-29	Lamp Circuits	10-57
Rod Replacement	2-34	Switch Adjustment	10-56
Condenser Tests, Distributor	10-41	Trouble Diagnosis	10-56
Constant Velocity Universal Joint	6-29	Distributor, Ignition	10-33
Contact Points, Distributor		Advance Mechanism	10-34
Adjustment, Replacement	10-38	Condenser Tests	10-41
Cooling System, Engine	2-36	Contact Points, Replace	10-38
Filling, Flushing	2-36	Dwell Angle Adjustment	10-38
Prepare for Anti-Freeze	2-36	Overhaul	10-42
Trouble Diagnosis	2-19	Specifications	10-3
Crankcase Ventilation	2-12	Timing	10-38
Cranking Motor	10-26		
Bench Test	10-30	E	
Periodic Inspection	10-28	Electro-Cruise	11-140
Repairs on Bench	10-30	Electro-Cruise Maintenance	1-6
Specifications	10-2	Engine	2-1
Voltage Test	10-28	Cooling System	2-36
Cranking System	10-24	Correction for Unbalance	2-44
Trouble Diagnosis	10-26	Cranking System	10-24
Crankshaft and Bearings	2-5	Dimensions, Fits, Adjustments	2-2
Bearing Replacement	2-29	Exhaust Manifold Valve Service	3-17
Dimensions	2-2	Fuel and Exhaust System	3-1
Oil Seal Replacement	2-30	Identification	0-3
Cruise Control	11-140	Ignition System	10-32
Cylinder Crankcase	2-5	Lubrication System	2-11
		Mountings	2-5
D		Mounting Adjustment	2-41
Dash Pot and Throttle Linkage		Oil Recommendations	1-1
Adjustment	3-20		

	Page		Page
Specifications	2-1	Heater and Defroster	11-22
Tune Care, Trouble Diagnosis	2-15	Air Conditioner	11-28
Ventilation System	2-12	Non-Air Conditioner	11-22
Exhaust Pipes	3-9	Horns, Relay and Button	10-53
Exhaust Manifold	3-9	Adjustments	10-55
		Trouble Diagnosis	10-53
		Hydraulic Control System,	
		Automatic Transmission	5-16
		Hydraulic Valve Mechanism	2-10
		Hydraulic Valve Lifter Service	2-23
		Hydrometer Test of Battery	10-9
F		I	
Flywheel and Ring Replacement	2-41	Identification No., Vehicle	0-3
Front Shock		Ignition Coil	10-32
Absorbers See Shock Absorbers		Specifications	10-2
Front Springs See Chassis Springs		Tests	10-40
Front Wheel Suspension	7-2	Ignition System	10-32
Front Wheels		Ignition Switch	10-45
Alignment	7-27	Switch Replace, Lock Repairs	10-45
Bearing Adjustment	7-15	Ignition Timing	10-38
Bearing Replacement, Lubrication	7-15	Indicator, Generator	10-17
Fuel Consumption, Excessive	3-15	Indicator Lights	
Fuel Pump	3-26	Generator	10-61
Inspection and Test	3-27	Oil Pressure	10-62
Repairs	3-27	Water Temperature	10-62
Fuel System	3-7	Indicators, Direction Signal	10-55
Fuse Block	10-115	Inflation Pressures, Tires	1-3
Fuse Specifications	10-4	Instrument Panel Compartment	
		(Glove Box) Light and Switch	10-52
		Intake Manifold	3-8
		Intake Silencer	3-7
G		K	
Gasoline Filters and Strainers	3-7	King Pin Inclination, Theoretical	7-32
Gasoline Gauge	10-65	Knuckle, Steering, Replace	7-19
Trouble Diagnosis	10-65		
Gasoline Tank Replacement	3-21		
Gauge			
Gasoline	10-65		
Pinion Setting	6-13		
Generator	10-13		
Inspection, Test on Car	10-20		
Repairs on Bench	10-13		
Specifications	10-1		
Generator Indicator	10-17		
Generator Regulator	10-16		
Specifications	10-1		
Test and Adjust, on Car	10-21		
Generating System	10-13		
Trouble Diagnosis	10-19		
Glove Box Light	10-52		
Guide-Matic	11-119		
Adjustment	11-122		
Trouble Diagnosis	11-120		
Guide T-3 Aimer	10-48		
		L	
		Lamp Bulb Specifications	10-4
		Lamps	
		Back-Up	10-50
		Direction Signal	10-55
		Headlamps	10-46
		License, Rear	10-50
		Park, Signal, Tail, Stop	10-50
		Light Load Test of Battery	10-8
		Lighting System	10-46
		Lighters, Cigar	10-51
H			
Hard Starting	3-14		
Headlamps	10-53		
Aiming Adjustment	10-57		

	Page		Page
Lights		Pinion Adjustment, Rear Axle	6-15
Headlights	10-46	Pinion Setting Gauges	6-13
Direction Signal	10-55	Pistons, Pins, Rings	2-6
Instrument Panel Control	10-46	Dimensions	2-3
Linkage, Steering	8-44	Replacement	2-31
Lower Control Arm, Rebush, Replace	7-24	Ring Fitting	2-34
Lubrication	1-1	Positive Traction Differential	6-18
Automatic Transmission	1-5	Propeller Shaft	
Body	1-8	Assembly	6-22
Chassis	1-4	Installation	6-33
Speedometer Cable	10-67	Removal	6-28
Lubrication System, Engine	2-11	Pump, Fuel	3-26
Specifications	2-2	Pump, Oil Engine	2-11
		Repairs	2-11
M		Pump, Hydraulic Steering	8-14
Manifold Heat Control	3-8	Pump, Water	2-14
Valve Service	3-17	Repairs	2-39
Manifold Intake	3-8	Push Button Setting, Radio	11-11
Exhaust	3-9		
Marks on Ring Gear and Pinion	6-13	R	
Master Cylinder, Brake	9-6	Radiator	2-13
Filling	9-14	Thermostat Test	2-38
Gauging, Cylinder Piston	9-39	Radio	11-1
Overhaul	9-24	Adjustments on Car	11-11
Models, Car	0-3	Antenna Installation	11-7
Mountings, Engine	2-5	Receiver Installation	11-6
Adjustment	2-41	Trouble Diagnosis	11-3
Muffler	3-9	Rear Axle Carrier Assembly	6-8
		Disassembly	6-8
N		Lubrication	1-10
Neutral Safety Switch	10-50	Removal	6-8
		Specifications	6-1
O		Trouble Diagnosis	6-4
Oil Consumption, Excessive	2-16	Rear Universal Joint Angle	
Oil Recommendation, Engine	1-1	Adjustment	6-39
Oil Filter, Engine	2-11	Rear Wheel Bearing	6-7
Changing Element	1-4	Rear Wheel Suspension	7-4
Oil Pressure Indicator Light	10-62	Reboring Cylinders	2-35
Oil Pump, Engine	2-11	Receiver Installation, Radio	11-6
Repairs	2-39	Recharging Battery	10-11
Oil Pump, Steering	8-14	Regulator, Generator	10-16
Oil Seals, Rear Axle Shaft	6-7	Relay, Horn	10-53
		Ring Gear and Pinion Marks	6-13
P		Ring Gear Replacement	6-8
Parking Brake Controls	9-3	Rings, Piston	See Piston Rings
Adjustment, Lubrication	9-16	Rochester 4-Barrel Carburetor	3-45
Release Warning Signal	10-52	Rochester 2-Barrel Carburetor	3-29
Parking Lamps	10-50	Rocker Arms, Replacement	2-22
Power Brakes	9-27		
Power Headlight Control	See Guide-Matic	S	
		Safety Buzzer	10-67
		Saginaw Oil Pump, Steering	8-14
		Seat Belts	11-155

	Page		Page
Serial Number, Car and		Neutral Safety	10-51
Engine See Identification No., Vehicle		Stop Light	10-51
Sheet Metal, Chassis	12-1		
Signal, Parking, Brake Release	10-52	T	
Silencer, Intake	3-7	Tank, Gasoline, Replacement	3-21
Shock Absorbers, Front and Rear	7-5	Thermo Circuit Breaker	10-46
Replacement	7-26	Thermostat	
Trouble Diagnosis	7-26	Choke Adjustment	3-19
Solenoid Switch, Test, Adjust	10-29	Exhaust Manifold Valve	3-18
Specifications	10-2	Radiator Test	2-37
Sonomatic Radio	11-1	Throttle Linkage	3-8
Spark Plugs	10-39	Adjustment	3-20
Spark Timing Control	10-34	Tie Rods and Ends	8-44
Specific Gravity, Battery	10-9	Adjustment	7-29
Specifications		Tightening Specifications	
Air Conditioner	11-37	Brakes	9-1
Battery	10-1	Chassis Suspension	7-1
Brakes	9-1	Engine	2-1
Car, General	0-3	Fuel and Exhaust Systems	3-1
Chassis Suspension	7-1	Rear Axle	6-1
Cranking System	10-2	Steering Gear, Power	8-10
Engine	2-1	Steering Gear, Manual	8-1
Front Wheel Alignment	7-27	Transmission, Automatic	5-1
Fuel and Exhaust Systems	3-1	Tilt Steering Wheel	8-54
Generating Systems	10-1	Timing	
Ignition System	10-2	Camshaft	2-27
Lighting System	10-3	Ignition	10-38
Rear Axle	6-1	Timing Chain Replacement	2-27
Signal System (Horn, Lights, etc.)	10-4	Transmission, 4-Speed	4-11
Steering Gear, Power	8-10	Description	4-12
Steering Gear, Manual	8-1	Trouble Diagnosis	4-14
Steering Gear, Lubrication	1-5	Linkage Adjustment	4-15
Steering Linkage	8-44	Disassembly	4-17
Transmission, Automatic	5-1	Assembly	4-22
Speedometer	10-67	Tires	7-13
Trouble Diagnosis	10-67	Abnormal Wear	7-7
Springs, Chassis	7-20	Inflation	1-3
Spring, Hood Hinge	12-7	Inspection	7-13
Stabilizer Link	7-15	Interchanging	7-14
Starter	10-24	Runout	7-12
Steering Gear, Power	8-10	Tire and Wheel Balance	7-15
Steering Gear, Manual	8-1	Toe-In, Front Wheels, Check and	
Steering Gear Lubrication	1-5	Adjust	7-29
Steering Geometry (Turning Angles),		Torque Converter	5-5
Checking	7-32	Transmission, Automatic	5-1
Steering Knuckle, Replace	7-19	Approved Oils	1-8
Steering Linkage	8-44	Drain and Refill	1-8
Steering Wheel, Removal	8-5	Installation of Assembly	5-38
Stop Lights and Switch	10-51	Manual Control	5-4
Suspension, Chassis	7-1	Manual Control Linkage Adjust	5-33
Switch		Pushing Car to Start Engine	5-5
Back-Up Light	10-51	Removal of Assembly	5-38
Dimmer	10-47	Specifications	5-2
Direction Signal	10-55	Towing Disabled Car	5-5
Ignition	10-32		
Lighting	10-46		

	Page		Page
Trim Dimensions, Chassis		Voltage Regulator	10-16
Spring, F. and R	7-20	Voltage Test, Cranking Motor	10-28
Trouble Diagnosis	See Diagnosis		
Twilight Sentinel	11-130	W	
Trouble Shooting	11-132	Warning Signal, Parking Brake	10-52
Adjustments	11-132	Warranty	0-2
		Water Pump	2-13
U		Repairs	2-41
Universal Joints		Wheel Alignment	7-27
Checking & Adjusting Angles—4700	6-35	Wheel Bearing, Front, Adjust	7-15
Constant Velocity	6-29	Wheel Bearing Lubrication, Front	1-7
Front and Rear	6-30	Wheel Bearing Replacement, Front	7-15
		Wheel Bearing Replacement, Rear	6-7
V		Wheel Cylinder, Brake, Overhaul	9-24
Vacuum Trunk Release	11-126	Wheel and Tire Balance	7-15
Checking Timing	2-27	Wheel and Tire Runout	7-12
Guide Replacement	2-2	Wheel Steering, Replace	8-5
Hydraulic Lifters	2-10	Wheel Suspension	7-2
Hydraulic Lifter Service	2-23	Windshield Defroster	11-22
Noise	2-17	Windshield Washer	10-106
Reconditioning Valves	2-21	Windshield Wiper, Single Speed	10-92
Specifications	2-2	Disassembly and Assembly	10-95
Ventilation, Crankcase	2-12	Trouble-Shooting	10-92
Ventilator, Outside Air	11-34	Windshield Wiper, Two Speed	10-96
		Disassembly and Assembly	10-103
		Removal and Replacement	10-106
		Trouble-Shooting	10-99
		Wiring Circuit Diagrams	10-112
		Wonderbar Radio	11-1