

GROUP 8 BRAKES

SECTIONS IN GROUP 8

Section	Subject	Page	Section	Subject	Page
8-A	Brake Specifications, Description, Operation, Service Recommendations	8-1	8-C	Brake Service and Adjustment Procedures	8-11
8-B	Brake Trouble Diagnosis	8-8	8-D	Brake Replacement and Repair Procedures	8-17

SECTION 8-A

BRAKE SPECIFICATIONS, DESCRIPTION, OPERATION, SERVICE RECOMMENDATIONS

CONTENTS OF SECTION 8-A

Paragraph	Subject	Page	Paragraph	Subject	Page
8-1	Brake Specifications	8-1	8-3	Operation of Hydraulic Service Brakes	8-5
8-2	Description of Brakes	8-2	8-4	Service Recommendations	8-6

SERVICE BULLETIN REFERENCE

Bulletin No.	Page No.	SUBJECT

8-1 BRAKE SPECIFICATIONS

a. Tightening Specifications

Use a reliable torque wrench to tighten the parts listed, to insure proper tightness without

straining or distorting parts. These specifications are for *clean and lightly lubricated threads only*; dry or dirty threads produce increased friction which prevents accurate measurement of tightness.

Part	Name	Thread Size	Torque-Ft. Lbs.
Nut	Backing Plate to Steering Knuckle Bolt	7/16-20	45-50
Nut	Backing Plate to Axle Housing Bolt	7/16-20	35-40
Bolt	Wheel Cylinder to Backing Plate	5/16-18	10-15
Nut	Brake Anchor Pin	5/8-18	65-70
Bolt	Brake Drum to Axle Shaft	5/16-18	10-15
Stud	Brake Drum to Axle Shaft (Pilot)	5/16-18	10-15
Nut	Master Cylinder to Frame Bolt	7/16-20	45-50
Nut	Master Cylinder Filler Cap	1 1/4-18	15-20
Nut	Master Cylinder Push Rod Lock	3/8-24	20-25
Bolt	Pedal Shaft Bracket to Frame	3/8-16	20-25
Screw	Pedal Shield to Frame Member	5/16-18	10-15
Nut	Brake Pipe Distributor Fitting	5/16-24	10-15
Nut	Brake Hose Bracket to Frame	5/16-24	10-15
Screw	Brake Pipe Tee Fitting to Strut Rod	5/16-18	10-15
Bolt	Brake Lever to Dash Brace	5/16-18	10-15

b. General Specifications

Items	Series 40-50	Series 70
Operating Mechanism, Service Brakes	← Hydraulic →	← Hydraulic →
Parking Brakes	← Lever and Cables →	← Lever and Cables →
Operation of Service Brakes Independent of Parking Brakes	Yes	Yes
Wheels Braked, Service	← Front and Rear →	← Front and Rear →
Parking	← Rear Only →	← Rear Only →

Items	Series 40-50	Series 70
Percentage of Total Braking Power on—		
Front Wheel Brakes	53	53
Rear Wheel Brakes	47	47
Static Pressure in Hydraulic System when Brakes are Released	6-8 lbs.	6-8 lbs.

c. Adjustment Specifications

Brake Pedal Clearance at Toeboard, with Push Rod Against Stop	1"	1"
Clearance at Both Ends of Secondary Lining with Primary Shoe Seated Against Drum	← .015" ± .002" →	
Adjusting Screw Setting, from Point where Wheels Can Just be Turned by Hand	← Back Off → ← 15-17 Notches →	

d. Brake Drums

Brake Drum Material	← C.I. Rim Fused to Steel Flange →	
Inside Diameter	← 11.997" to 12.003" →	
Maximum Allowable Rebore	← .060" oversize →	
Maximum Allowable Runout of Braking Surface, New or After Rebore	.005"	.005"
Maximum Allowable Out-of-Round, Before Rebore	.010"	.010"
Maximum Allowable Out-of-Balance	← 6 in. oz. →	

e. Hydraulic Brake System

Approved Hydraulic Brake Fluid	← G.M. or Delco Super No. 9 →	
Fluid Level, Below Top of Filler Opening	← 1/2" to 1" →	
Master Cylinder Size	1"	1"
Wheel Cylinder Size, Front	1 1/8"	1 1/8"
Rear	1"	1"

f. Brake Shoes and Linings

Number of Brake Shoes at Each Wheel	2	2
Brake Shoe Type	← Self Energizing, Internal Expanding →	← Molded →
Brake Lining, Type	Molded	Molded
Width and Thickness	1 3/4" x 3/16"	2 1/4" x 3/16"
Length—Primary	9 15/16"	10"
Length—Secondary	12 3/4"	12 15/16"
Total Area/Car (sq. in.)	158.7	206.4
Maximum Allowable Space Between Lining and Shoe Rim After Riveting	.005"	.005"
Maximum Allowable Space Between Lining and Drum when Shoe is Tested in Drum	.004"	.004"

8-2 DESCRIPTION OF BRAKES

The brake mechanism includes a hydraulically operated service brake system and a mechanically operated parking brake system. The hydraulic service brake system simultaneously applies the brake shoes at all four wheels; the parking brake system applies the brake shoes at rear wheels only. Either brake system can be operated independently of the other. See figure 8-2.

a. Wheel Brake Assembly

The brake assembly at each wheel uses a primary (front) and a secondary (rear) brake shoe of welded steel construction with molded lining attached by tubular rivets. The rim of each brake shoe is slotted near the edge to prevent squeaks. See figure 8-1.

The brake shoes are retained at the upper ends by an anchor pin and shoe guide mounted on the brake backing plate, and heavy coil

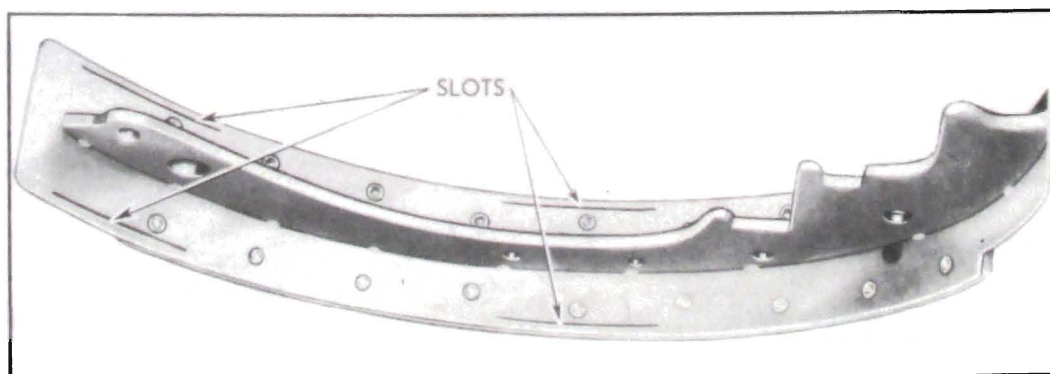


Figure 8-1—Slotted Brake Shoe

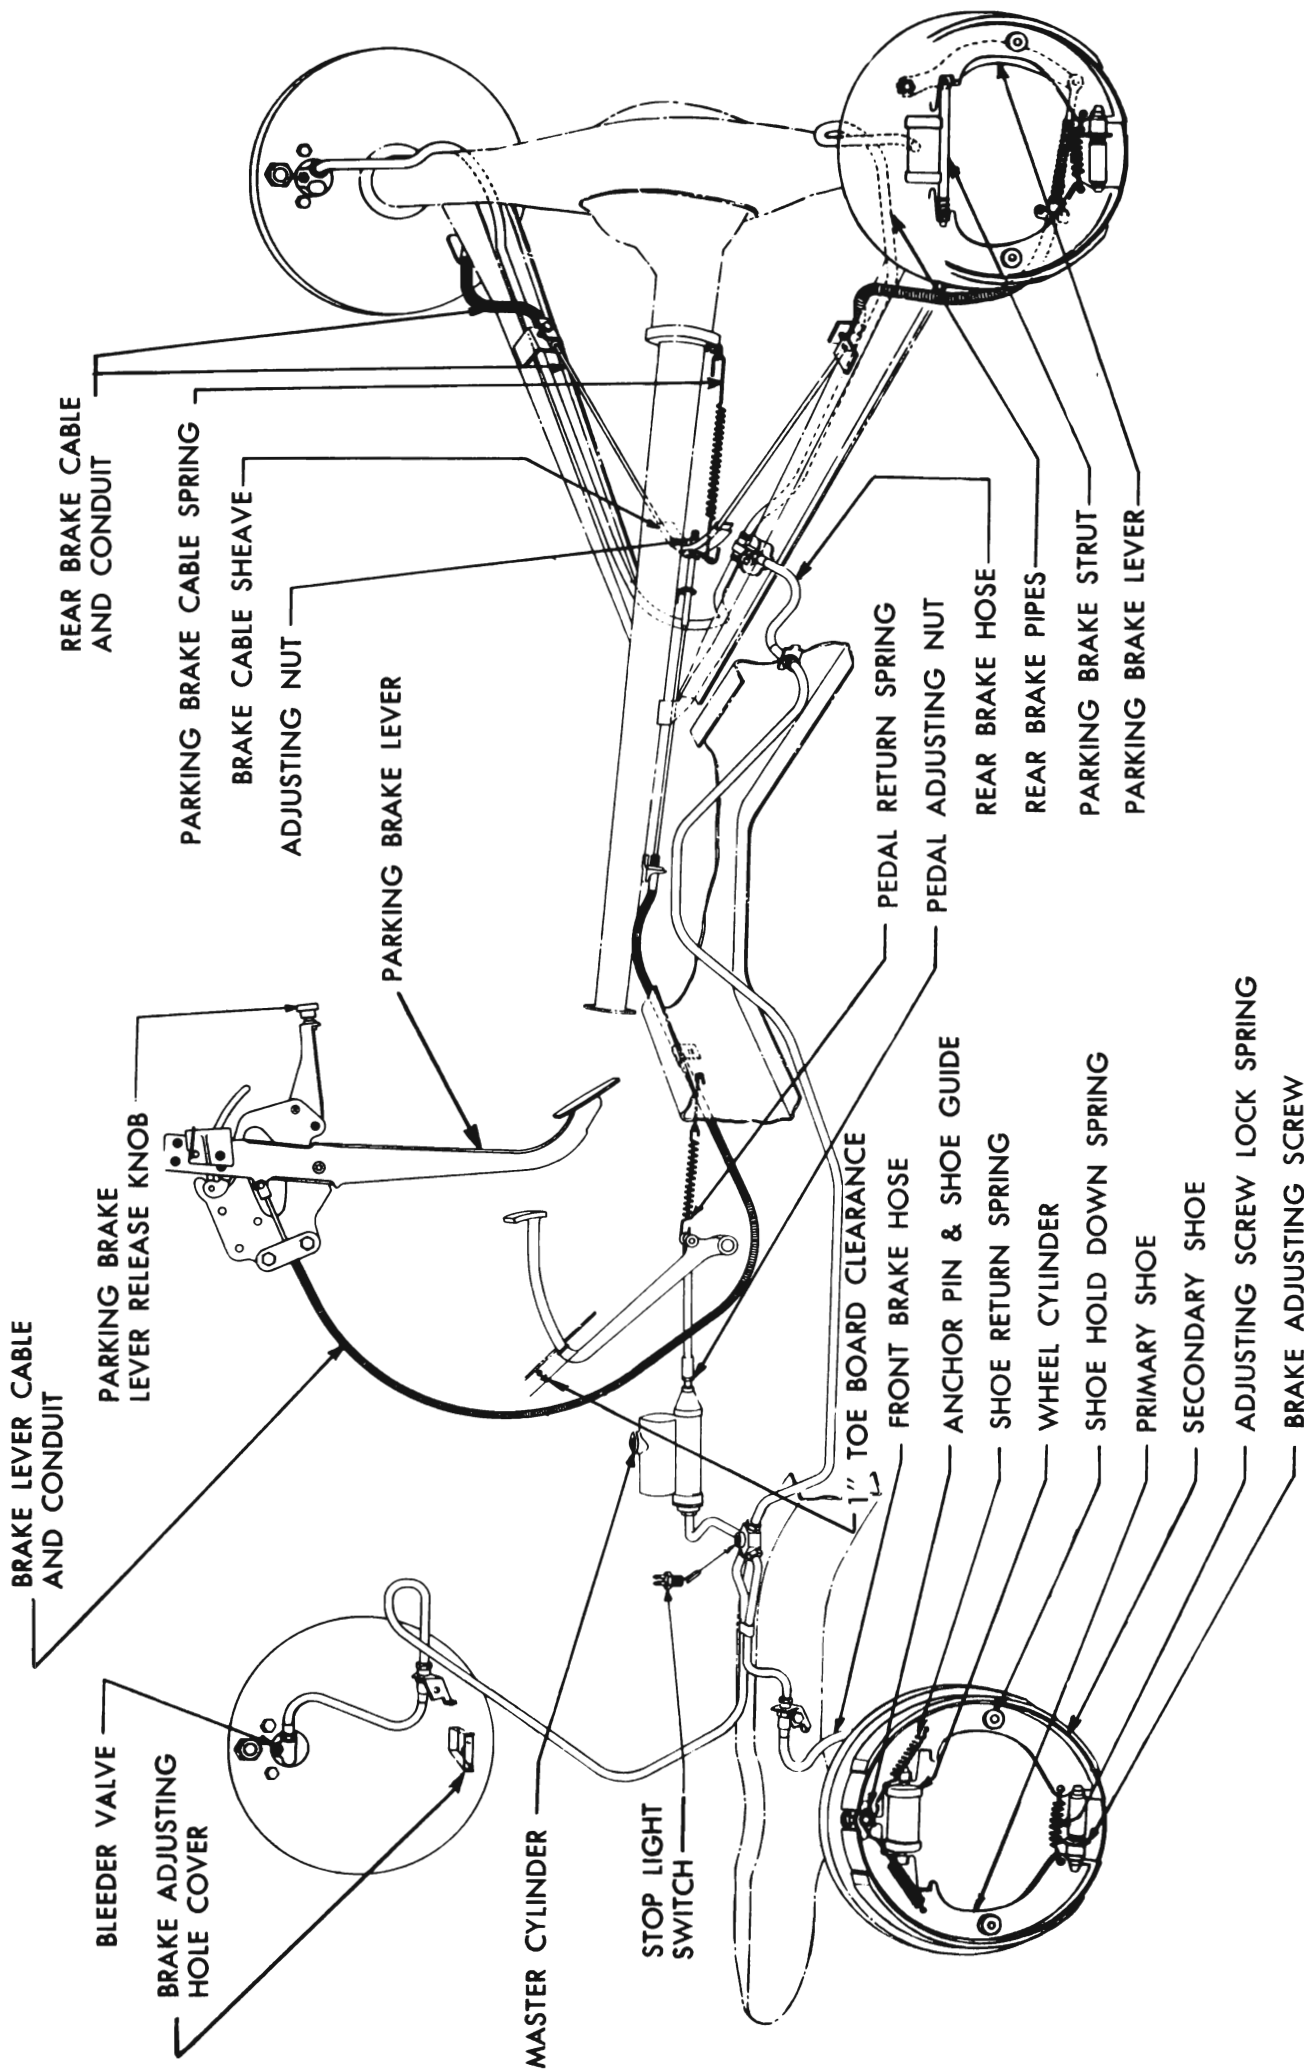


Figure 8-2—Brake Mechanism Layout

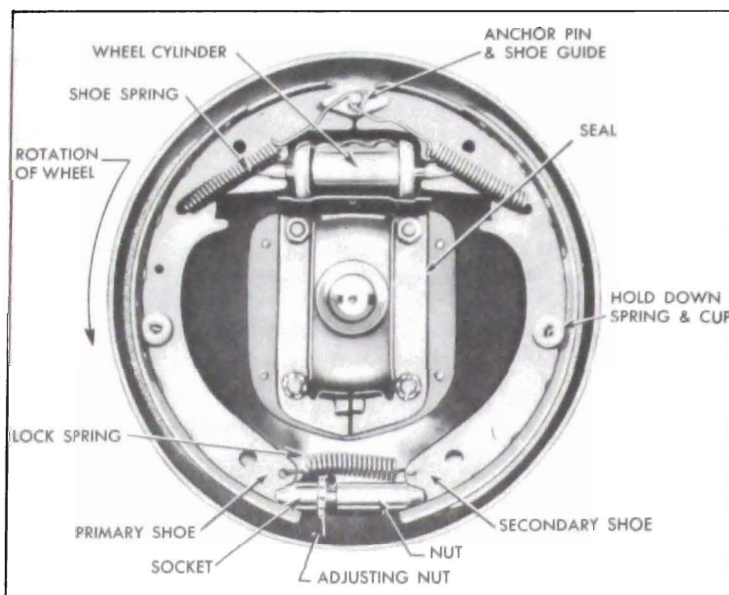


Figure 8-3—Front Wheel Brake Assembly—Left

springs hold the shoes to the anchor pin. A hold-down spring near the middle holds each shoe against the backing plate while allowing free movement of the shoe. The lower ends of the brake shoes are joined together by an adjusting screw and spring but are free to float since they are not attached to the backing plate. See figure 8-3.

A hydraulic brake wheel cylinder (fig. 8-4), which is mounted on brake backing plate between upper ends of brake shoes, expands the brake shoes in each brake assembly during application of the service brakes. During application of parking brakes, a strut and brake lever expands the brake shoes in each rear brake assembly only. The upper end of brake lever is pivoted to the web of the secondary shoe, the strut connects brake lever to the primary shoe, and the rear brake cable is attached to lower end of brake lever. The coil springs which connect brake shoes to the anchor pin retract the shoes when either the service or parking brakes are released. See figure 8-13.

b. Hydraulic Brake Wheel Cylinders

Each wheel cylinder contains two pistons and two rubber cups which are held in contact with the pistons by a central coil spring to provide a fluid-tight seal. The inlet port for brake fluid is located between the pistons so that when fluid pressure is applied both pistons move outward toward the ends of wheel cylinder. The pistons impart movement to the brake shoes by means of connecting links which seat in pistons and bear against webs of shoes. Rubber boots enclose both ends of cylinder to exclude foreign matter. A valve for bleeding the brake pipes and wheel cylinder is located above the inlet port. See figure 8-4.

c. Brake Drums

The brake drums consist of cast iron rims fused to pressed steel flanges. The cast iron rims provide ideal braking surfaces and increased brake lining life. An external web around the circumference prevents distortion and aids in dissipation of heat.

d. Hydraulic Brake Master Cylinder

The master cylinder performs three functions. (1) It maintains a constant volume of fluid in the hydraulic system at all times, regardless of expansion due to heat or contraction due to cold. (2) It transmits the pressure of the brake pedal equally to the wheel cylinders (and brake shoes) at all wheels through fluid pressure built up in its cylinders. (3) It acts as a pump during bleeding of the hydraulic system.

The master cylinder is mounted on the inside of left front frame side rail and is operated by the brake pedal through an adjustable push rod. See figure 8-2.

The master cylinder body (A) consists of a fluid reservoir cast integral with a cylinder barrel (S) which is machined to house the work-

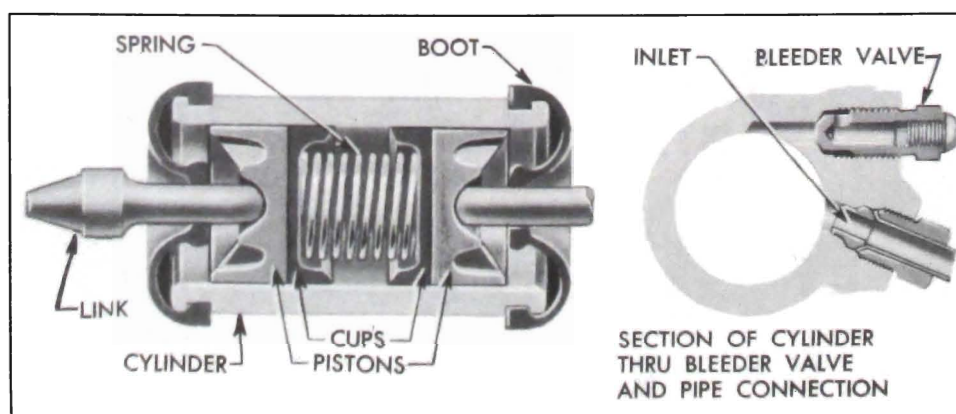


Figure 8-4—Wheel Cylinder—Sectional View

ing parts. See figure 8-5. A breather port (G) and a compensating port (H) permit passage of fluid between reservoir and cylinder barrel under certain operating conditions. The reservoir is closed at the top by a gasket (B) and a vented filler cap nut (C) containing a baffle (E) to prevent loss of fluid through the vent holes (D).

The outlet end of the cylinder barrel is closed by a head nut (J) and gasket (I). The opposite end of cylinder barrel is closed by a stop plate (L) through which a push rod (K) extends to actuate the piston (O). The outer end of the double-headed piston is provided with a rubber cup (N) to provide a fluid-tight seal, and a rubber boot (F) closes the end of the cylinder barrel to exclude foreign matter. A check valve (T) is held in place against a rubber washer (U) on the head nut by a coil spring (R) which also holds a rubber cup (Q) against the inner end of the piston. See figure 8-5.

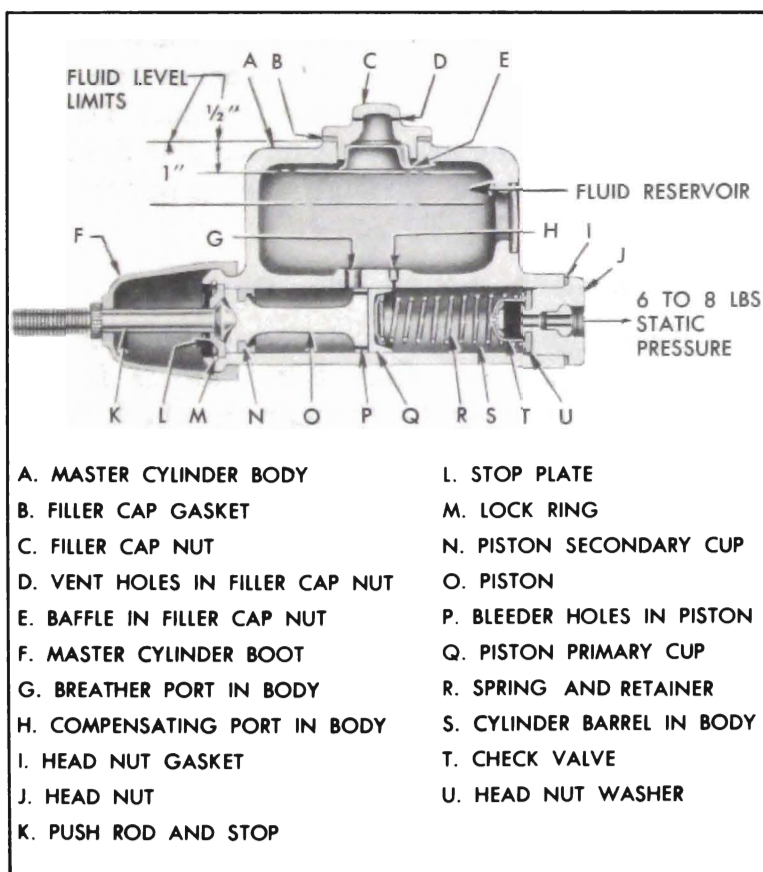


Figure 8-5—Master Cylinder—Sectional View

e. Parking Brake Lever and Cables

The parking brake mechanism consists of a foot operated lever and cables which operate the rear wheel brake shoes only. The parking brake lever, located on left side of body cowl, will automatically lock when the release knob is pushed forward and the lever is pushed forward by foot to apply the brakes. The lever is

released by pulling the release knob on the lever.

A conduit enclosed cable extends from the parking brake lever to a sheave or equalizer located near the rear end of torque tube. Another cable runs through the sheave to the brake lever in each rear brake assembly so that when the parking brakes are applied the rear brake cable applies equal pressure to the brake shoes at both rear wheels. An adjustment to take up slack is provided where the brake lever cable passes through the brake cable sheave. A spring attached to the sheave pulls the cables rearward to assure full release when parking brake lever is in released position. See figure 8-2.

8-3 OPERATION OF HYDRAULIC SERVICE BRAKES

a. When Brakes are Released

When the brake pedal is in fully released position the master cylinder piston (O) is held against the stop plate (L) by the coil spring (R) which also holds the check valve (T) against the rubber washer (U) on head nut (J) with sufficient pressure to maintain 6 to 8 pounds static pressure in brake pipes and wheel cylinders. With piston against stop plate the compensating port (H) is not covered by the piston primary cup (Q) and the breather port (G) is also open, so that the cylinder barrel (S) is completely filled with fluid from the reservoir. See figure 8-5.

The static pressure maintained in the lines and wheel cylinders is not sufficient to operate the brake shoes, therefore the shoes are fully released and held in contact with the anchor pins by the brake shoe springs. See figure 8-3.

b. Application of Brakes

When the brake pedal is depressed to apply service brakes, the push rod (K) forces the master cylinder piston (O) and primary cup (Q) toward the head nut (J). As soon as the primary cup covers the compensating port (H), pressure is built up in the cylinder barrel (S) and fluid is forced through holes in the check valve (T) into the pipes leading to all wheel cylinders. See figure 8-5.

The brake fluid enters each of the wheel cylinders (fig. 8-4) causing the cylinder pistons and connecting links to move outward and force the brake shoes into contact with the drums. This part of the brake action is accomplished with very light pressure on the pedal. Since the pressure must be equal in all parts of the hy-

draulic system, no braking action can take place until all of the shoes are in contact with the drums; therefore, the system is self-equalizing. As pressure on brake pedal is increased, greater hydraulic pressure is built up within the master cylinder barrel and wheel cylinders, and consequently greater force is exerted against all brake shoes.

As the brake shoes come in contact with the drums, on forward motion, the energy of the turning drums is imparted to the primary shoes which then actuate the secondary shoes so that all shoes are forced against the drums with greater pressure than that provided by the hydraulic system. This self-energizing principle gives maximum braking power at the wheels with relatively light pressure on the brake pedal.

When the car is being slowed down by the brakes, a transfer of weight takes place from the rear to the front end of car. The quicker the stop the greater the transfer of weight. This transfer of weight to the front wheels tends to keep the front wheels turning, consequently more braking power is required at front wheels in order to equalize the braking effect at front and rear wheels. To provide greater braking power at the front wheels, the front wheel cylinders are larger in diameter than the rear wheel cylinders. Braking power at front wheels is approximately 53% and at rear wheels approximately 47%.

c. Slow Release of Brakes

As the brake pedal is released the pedal and push rod are retracted by pedal return spring, thereby relieving pressure on master cylinder piston and consequently relieving pressure in the master cylinder barrel, brake pipes, and wheel cylinders.

The master cylinder spring (R) forces the piston (O) and piston primary cup (Q) to follow the retracting push rod (K). See figure 8-5. At the same time, the brake shoe springs pull the shoes clear of brake drums thereby forcing wheel cylinder pistons inward, which forces fluid out of cylinders back to the master cylinder.

Returning fluid pushes check valve (T) away from the rubber washer (U) on head nut (J) as it enters master cylinder barrel (S), however, the master cylinder spring (R) maintains sufficient pressure on the check valve to provide 6 to 8 pounds static pressure in brake pipes and wheel cylinders after brakes are fully released.

When brakes are fully released, the master cylinder piston must bear against the stop plate (L) so that the compensating port (H) will not be covered by the piston primary cup (Q). The open compensating port permits a flow of fluid from reservoir into the cylinder barrel in the event that fluid was lost by leakage during brake application.

d. Quick Release of Brakes

The action in quick release is generally the same as in the slow release described above, except for a compensating action in the master cylinder.

The piston (D) and primary cup (Q) return to the "released" position much faster than the fluid in brake pipes returns to master cylinder barrel (S). A momentary vacuum is created in the space between primary cup and head nut which causes additional fluid to flow into and fill this space through the bleeder holes (P) in piston and past the lip of primary cup. This additional fluid is supplied through the breather port (G). When the piston reaches the stop plate (L) and the compensating port (H) is uncovered by the primary cup, surplus fluid returns to reservoir through the compensating port.

e. Action During Bleeding Operation

When brake pedal is depressed during the bleeding operation (par. 8-9) fluid is forced out of master cylinder through the check valve (T), through brake pipes to wheel cylinder being bled. Since no pressure is built up in wheel cylinder there is no return of fluid to master cylinder when brake pedal is released. The master cylinder barrel (S) is replenished with fluid which flows from reservoir through breather port (G), through bleeder holes in piston (P), and past edges of primary cup (Q). See figure 8-5.

8-4 SERVICE RECOMMENDATIONS

a. Break-In of New Brake Shoe Linings

Under no circumstances should the brakes be severely applied on a new car or immediately after installation of new brake shoes or linings. Severe applications may permanently injure new brake linings and may score brake drums. When linings are new they must be given moderate use for several days until nicely burnished.

b. Maintaining Fluid Level

The fluid level must be maintained at specified level in master cylinder reservoir at all times. Low fluid level may permit air to be pumped into the hydraulic system, which will necessitate a bleeding operation and may possibly result in failure of service brakes. Checking fluid level every 1000 miles is included in Periodic Lubricare Instructions (par. 1-1). Instructions for filling master cylinder are given in paragraph 8-8.

c. Brake Shoe Inspection and Adjustment

Brakes should be promptly adjusted or otherwise corrected whenever the action becomes unduly severe, erratic, or uneven. Prompt attention will prevent damage to brake linings or other parts.

For average driving conditions, brakes should be adjusted for wear whenever the brake pedal goes to within 2" of toeboard. If car is habitually driven at high speed, however, ad-

justment should be made when pedal pad goes to within 3" of toeboard. This extra travel is necessary because heat generated on high speed stops expands the brake drums, causing the pedal to travel closer to the toeboard.

Brake shoe linings should not be permitted to wear down until rivet heads contact drums because drums will be scored, necessitating re-boring of drums and installation of oversize lining. As car mileage approaches the point at which relining may be required, it is advisable to remove a front and rear brake drum so that lining can be inspected for wear, to avoid the possibility of damage to drums.

d. Periodic Flushing of Hydraulic System

It is recommended that the entire hydraulic system be thoroughly flushed and new fluid installed every 15,000 miles, or whenever new parts are installed in hydraulic system, or new shoes or linings are installed. For flushing procedure see paragraph 8-10.