

## SECTION 10-J

### WIRING CIRCUIT DIAGRAMS

#### CONTENTS OF SECTION 10-J

Figure	Wiring Circuit Diagram	Page	Figure	Wiring Circuit Diagram	Page
10-110	Dome Lamp—Series 40 and Models 56C, 56S, 76C, 76S....	10-94	10-118	Body—Models 46, 46D, 46S, 56S, 76S—Styles 4407B, 4407D, 4407, 4507, 4707.....	10-100
10-111	Dome Lamp—Models 51, 52, 71, 72.....	10-94	10-119	Body—Models 51, 71—Styles 4569, 4769.....	10-100
10-112	Chassis—First Series 40 Without Direction Signals.....	10-95	10-120	Body—Models 52, 72—Styles 4519, 4719.....	10-101
10-113	Chassis—First Series 40 With Direction Signals.....	10-96	10-121	Body and Hydro-Lectric—Models 52, 72—Styles 4519, 4719.....	10-101
10-114	Chassis—Second Series 40 Without Direction Signals.....	10-97	10-122	Body and Hydro-Lectric—Models 56C, 76C—Styles 4567, 4767.....	10-102
10-115	Chassis—Second Series 40 With Direction Signals, All Series 50-70.....	10-98	10-123	Body—Model 56R—Style 4537.....	10-102
10-116	Body—Models 41, 41D—Styles 4469, 4469D.....	10-99	10-124	Body and Hydro-Lectric—Model 76R—Style 4737.....	10-103
10-117	Body—Models 43, 43D—Styles 4408, 4408D.....	10-99	10-125	Body—Models 59, 79.....	10-103

#### SERVICE BULLETIN REFERENCE

Bulletin No.	Page No.	SUBJECT

### 10-69 CIRCUIT DIAGRAMS, INSPECTION HOLE, AND FUSE BLOCK

This Section contains all the necessary wiring circuit diagrams for chassis and body. The wiring may be easily traced by paying attention to the color code on each wire and the color code indicated on the diagrams.

Many of the wiring connections use a push-pull type terminal. The terminal plug on the wire requires a hard push to seat it in the socket. A hard steady pull on the wire is required to detach the terminal plug from the socket. If an exceptionally hard pull is required, it is advisable to start the terminal plug by prying against the rim with a screwdriver.

An inspection hole is located in the left side

of dash panel. The cover, which is attached by screws, may be quickly removed for inspection and for working on the wiring connections to instruments on forward side of instrument panel.

A central fuse block is mounted under the cowl near the steering column and to rear of the inspection hole in cowl. It is not necessary, however, to remove the inspection hole cover to replace a fuse or to disconnect wires. The fuse block serves as a convenient junction point for a number of wiring circuits, provides a mounting for the direction signal flasher, and contains the fuses shown in figure 10-109. The "Direction Signal" fuse also protects the stop light circuits. The "Dome Lamp" fuse also protects the luggage compartment and glove box lamp circuits.

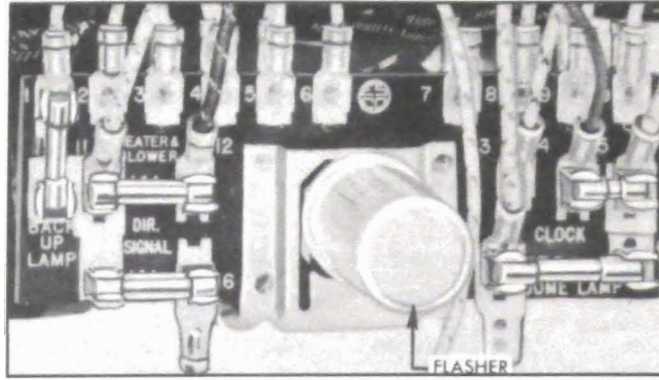


Figure 10-109—Fuse Block—Series 40-50-70

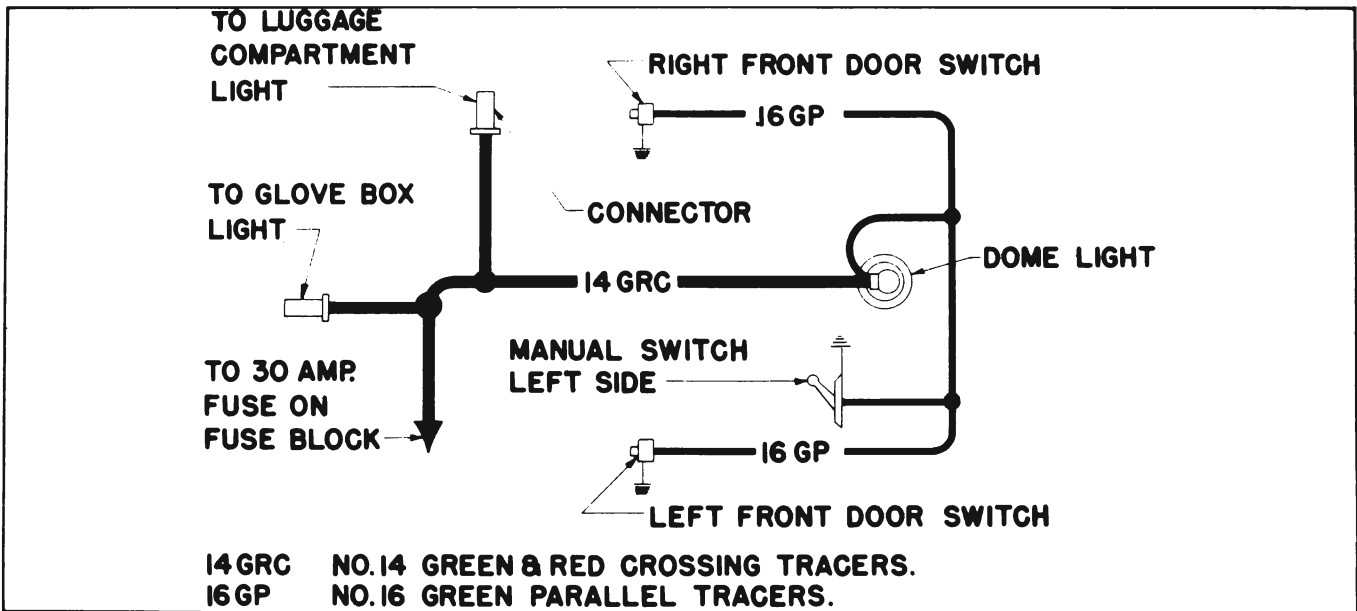


Figure 10-110—Dome Lamp Wiring Circuit Diagram—Series 40 and Models 56C, 56S, 76C, 76S

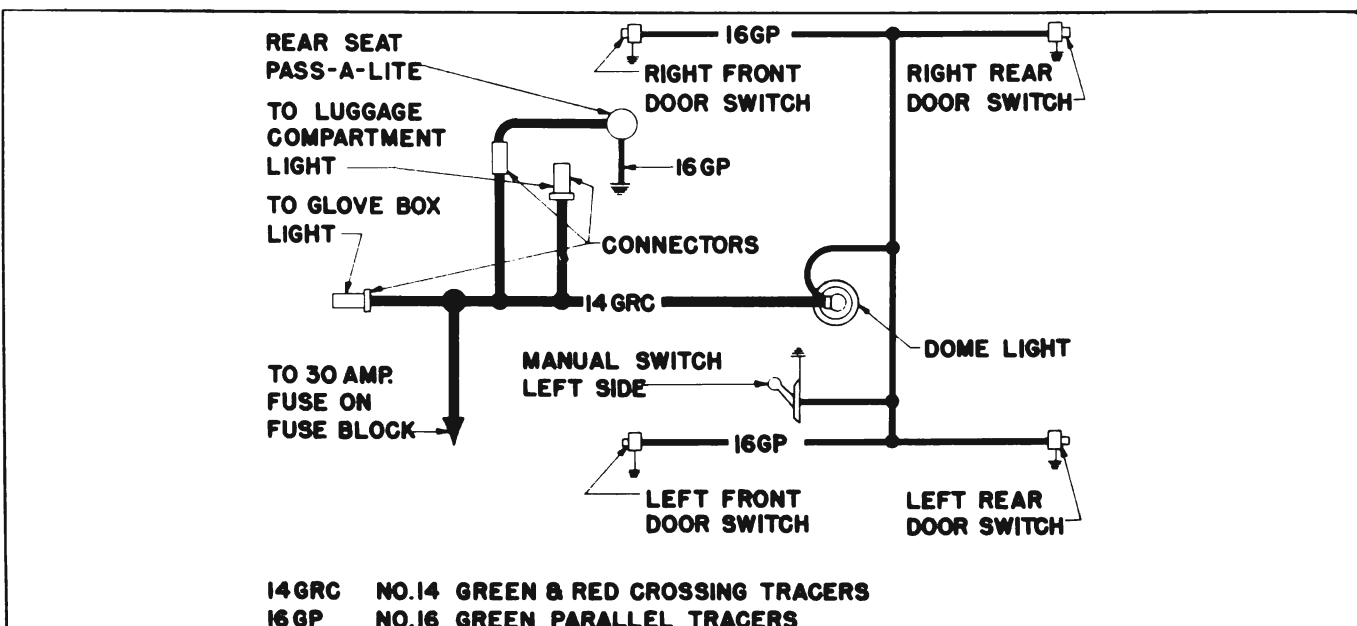


Figure 10-111—Dome Lamp Wiring Circuit Diagram—Models 51, 52, 71, 72

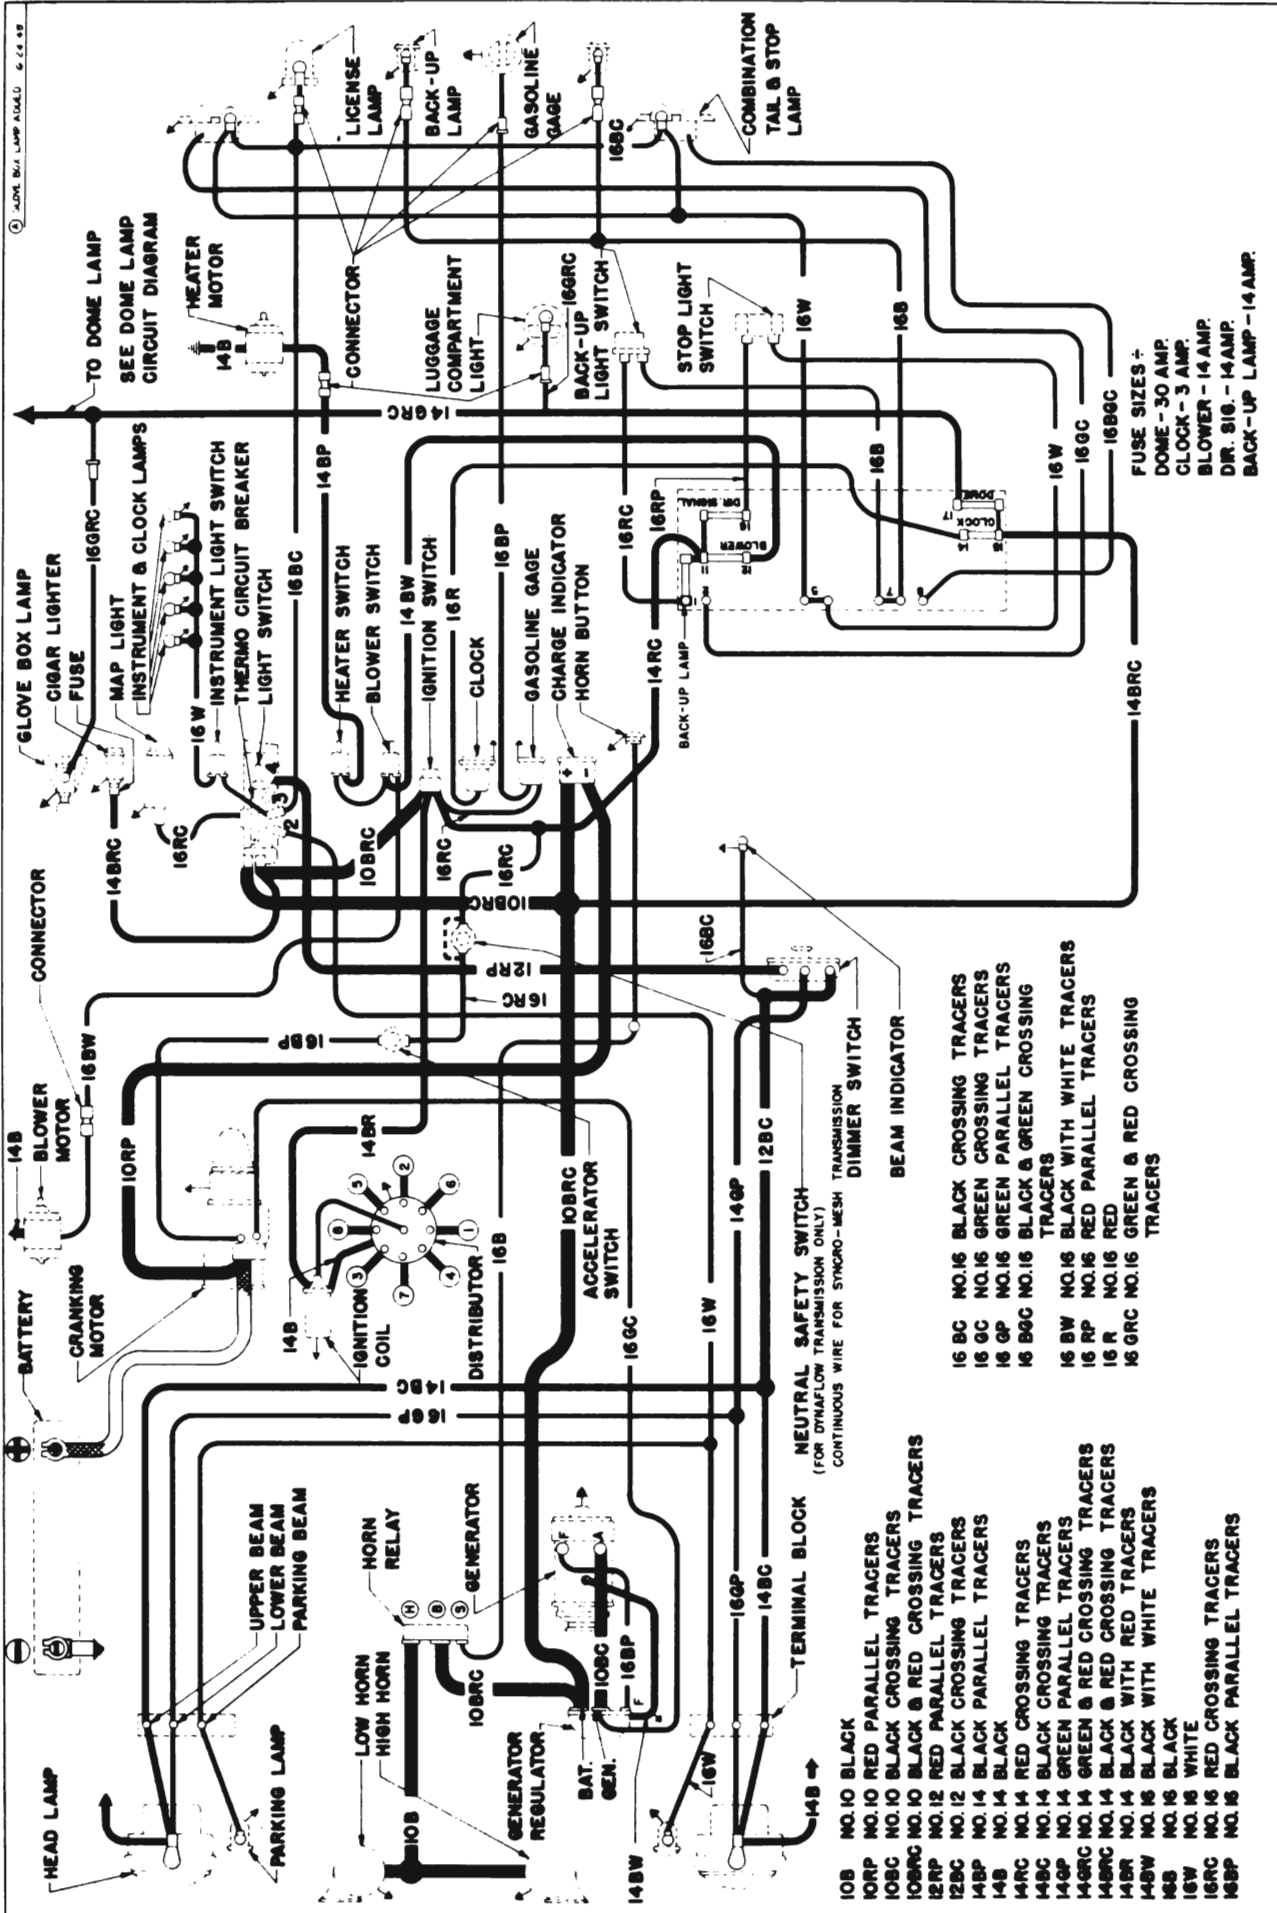


Figure 10-112—Chassis Wiring Circuit Diagram—First Series 40 Without Direction Signals

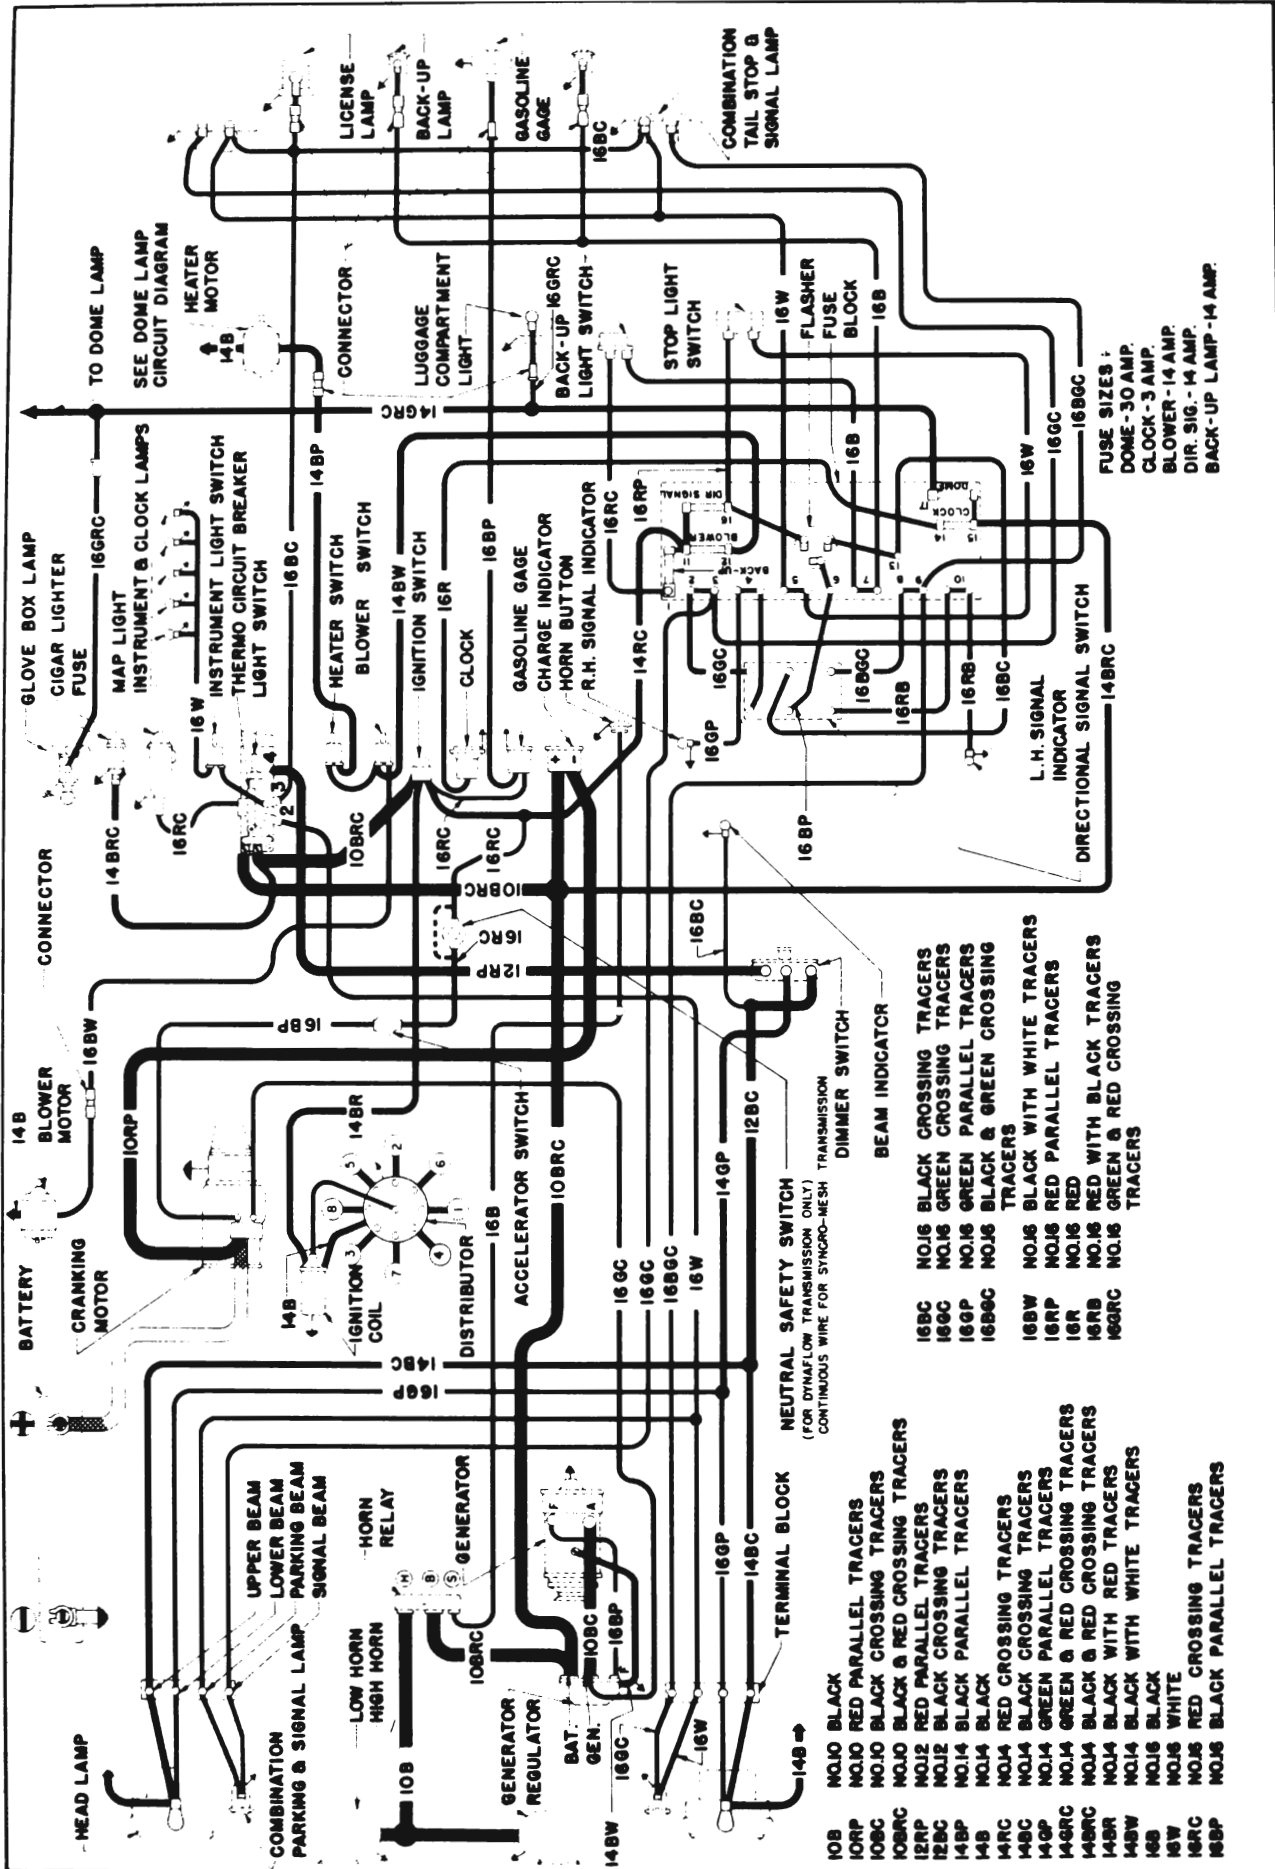


Figure 10-113—Chassis Wiring Circuit Diagram—First Series 40 with Direction Signals

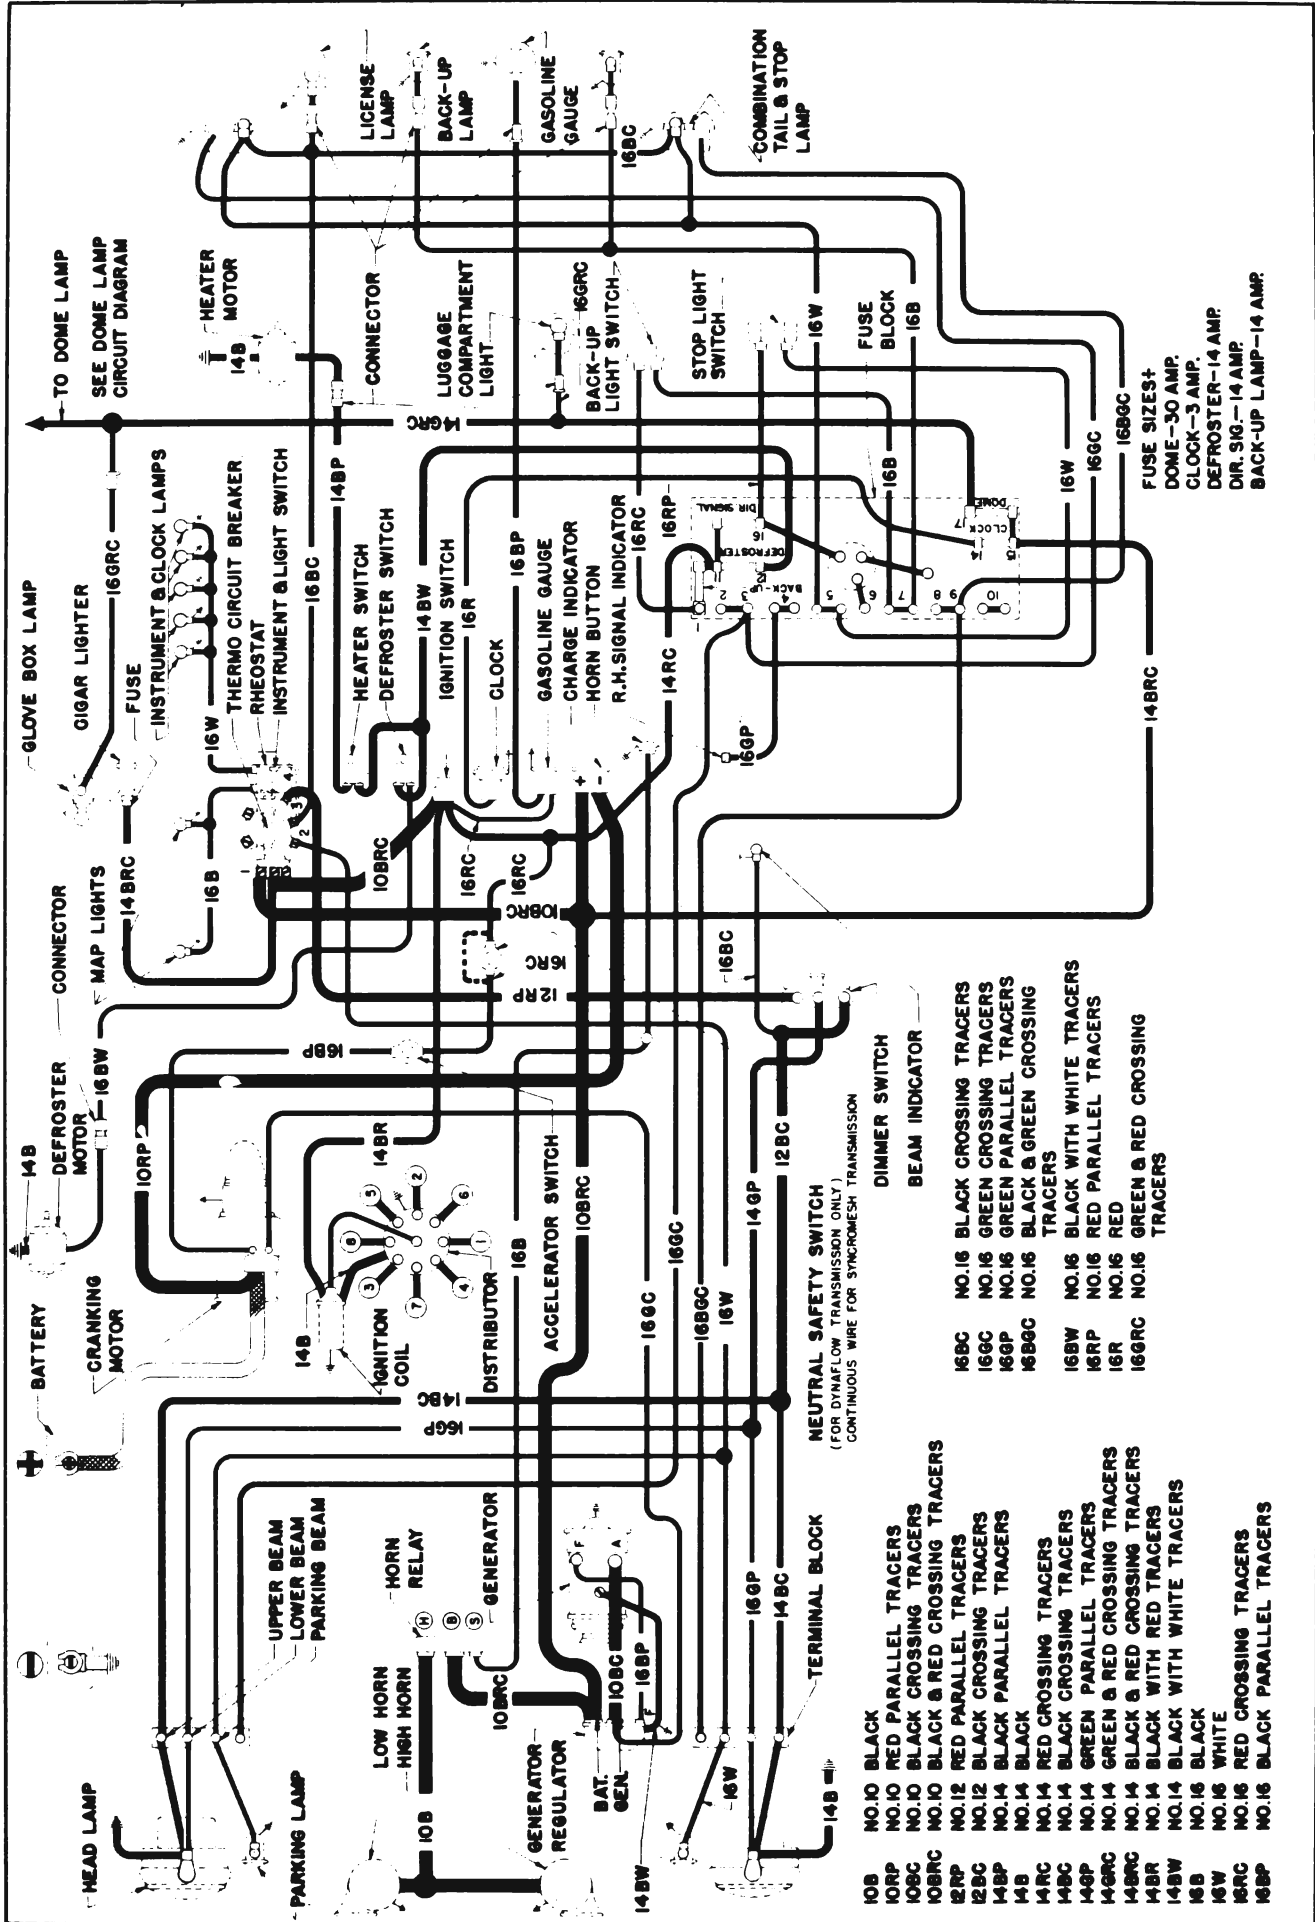


Figure 10-114—Chassis Wiring Circuit Diagram—Second Series 40 Without Direction Signals

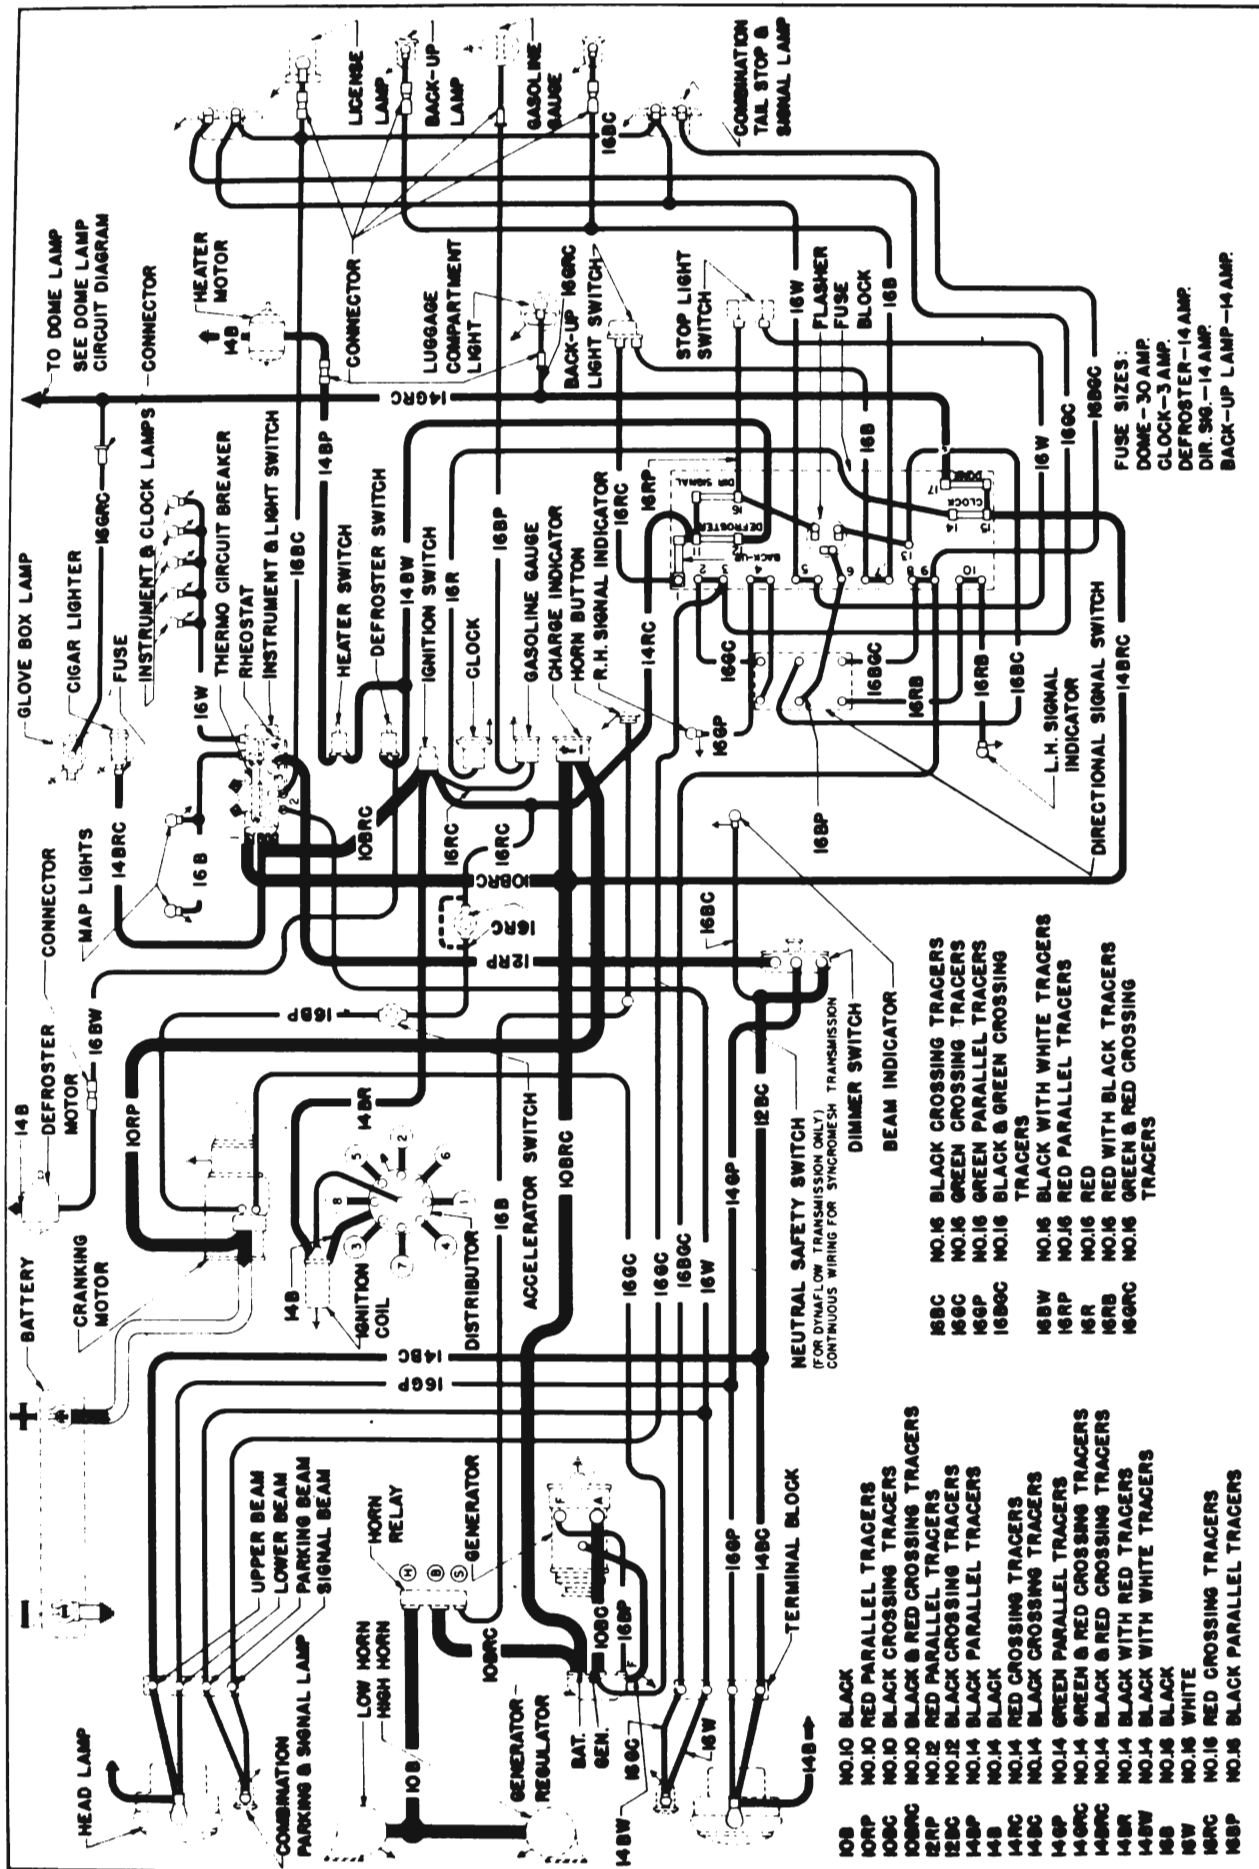


Figure 10-115—Chassis Wiring Circuit Diagrams—Second Series 40 with Direction Signals, All Series 50-70

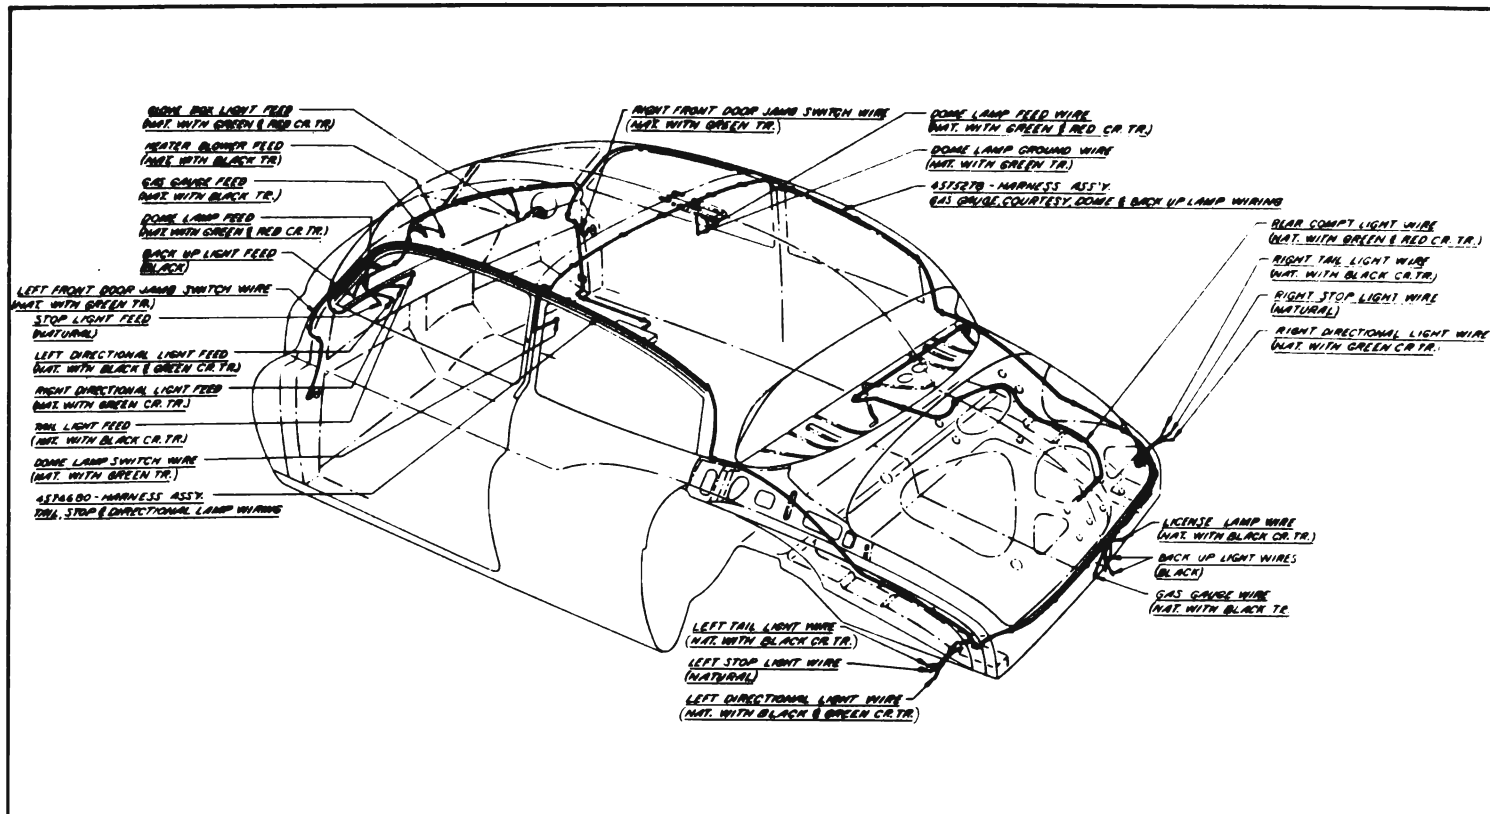


Figure 10-116—Body Wiring Circuit Diagram—Models 41, 41D—Styles 4469, 4469D

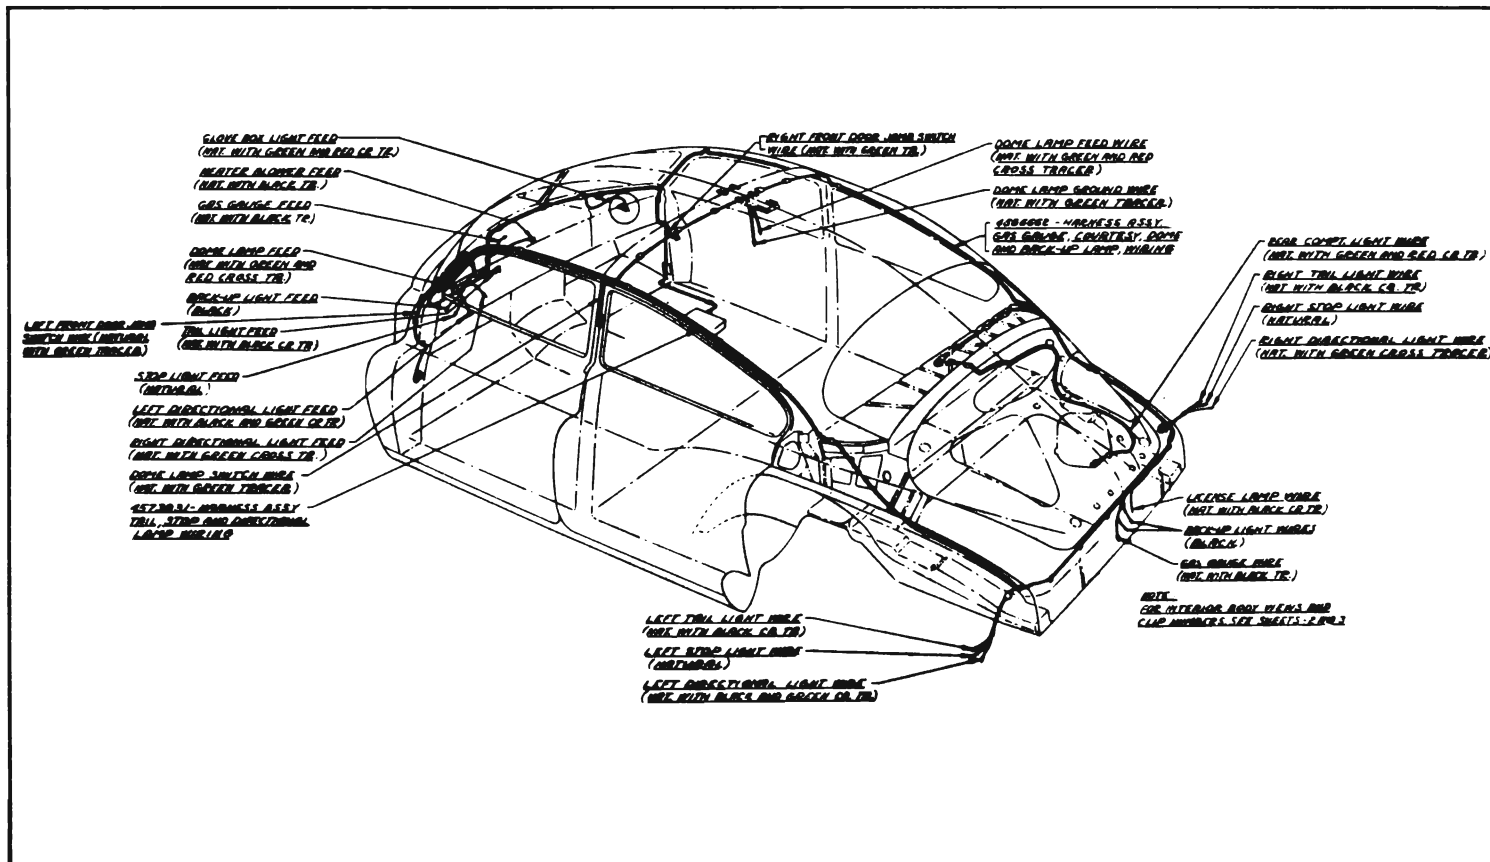


Figure 10-117—Body Wiring Circuit Diagram—Models 43, 43D—Styles 4408, 4408D

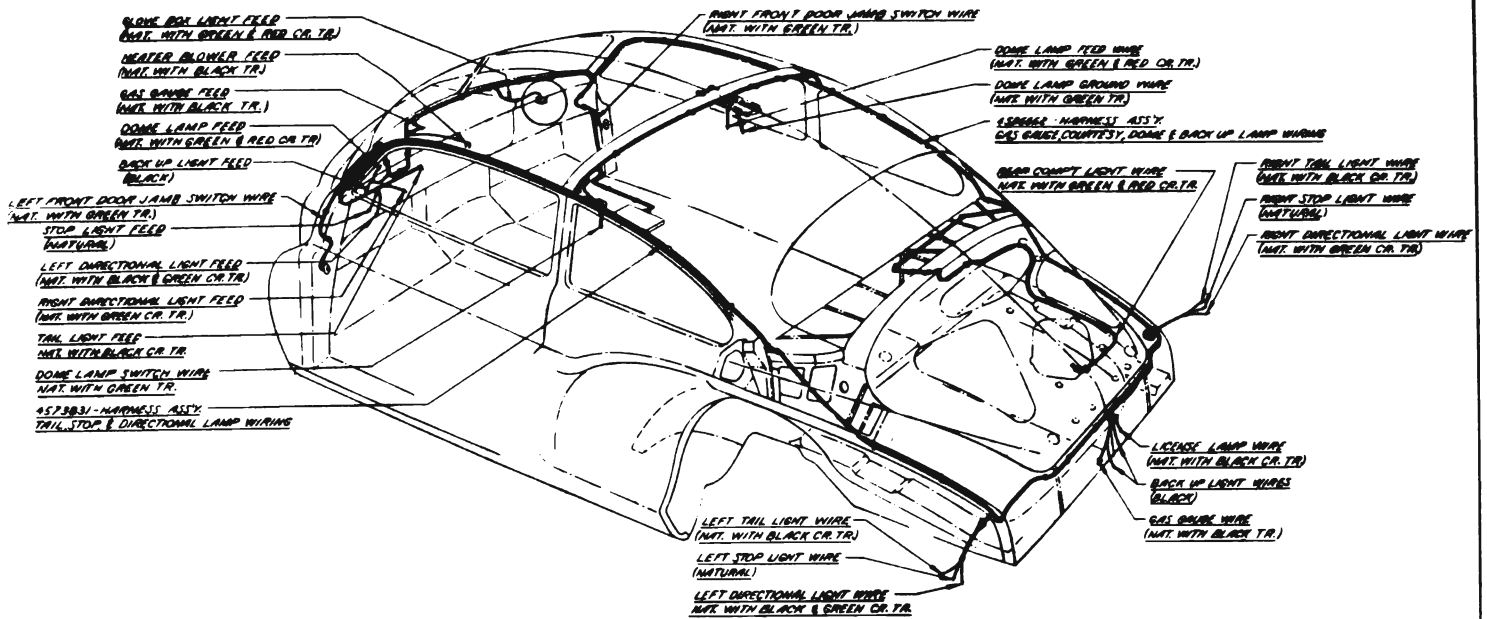


Figure 10-118—Body Wiring Circuit Diagram—Models 46, 46D, 46S, 56S, 76S—Styles 4407B, 4407D, 4407, 4507, 4707

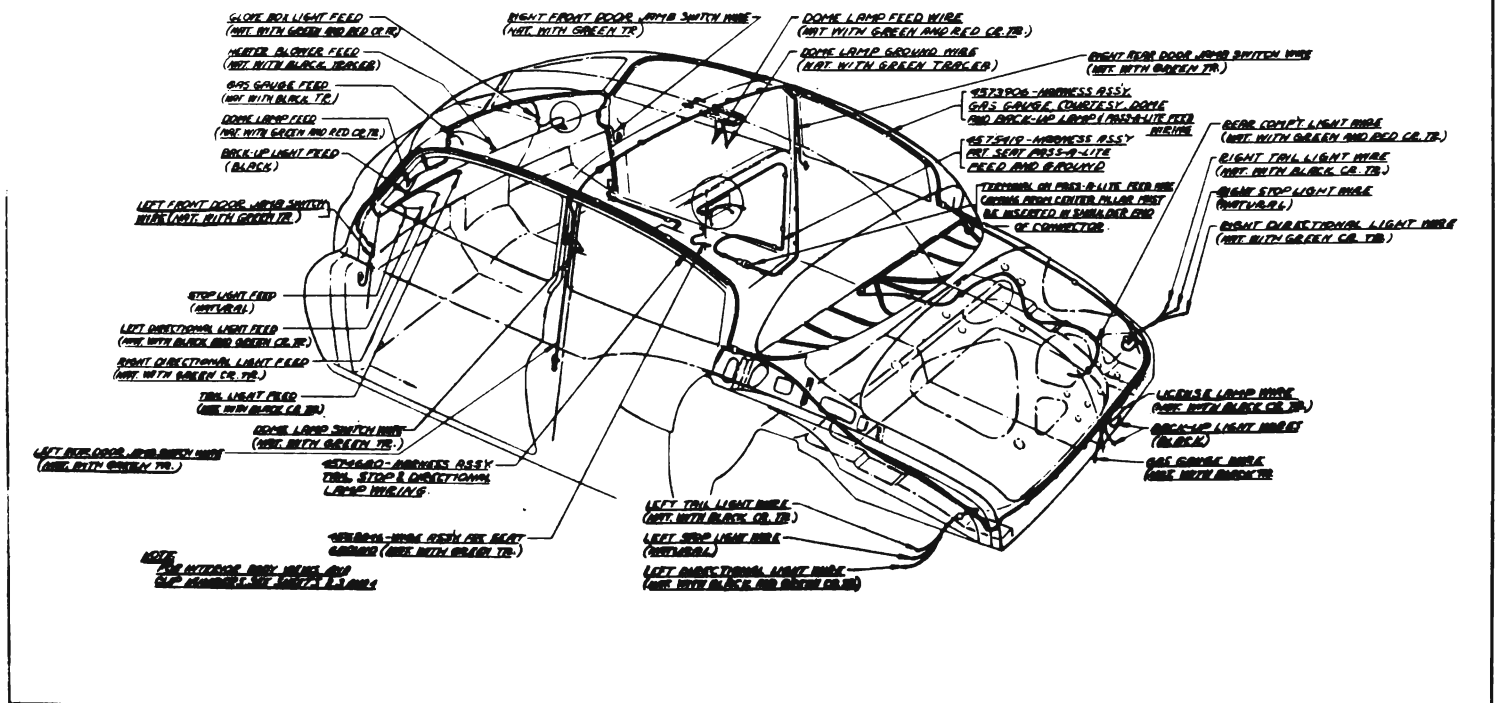


Figure 10-119—Body Wiring Circuit Diagram—Models 51, 71—Styles 4569, 4769



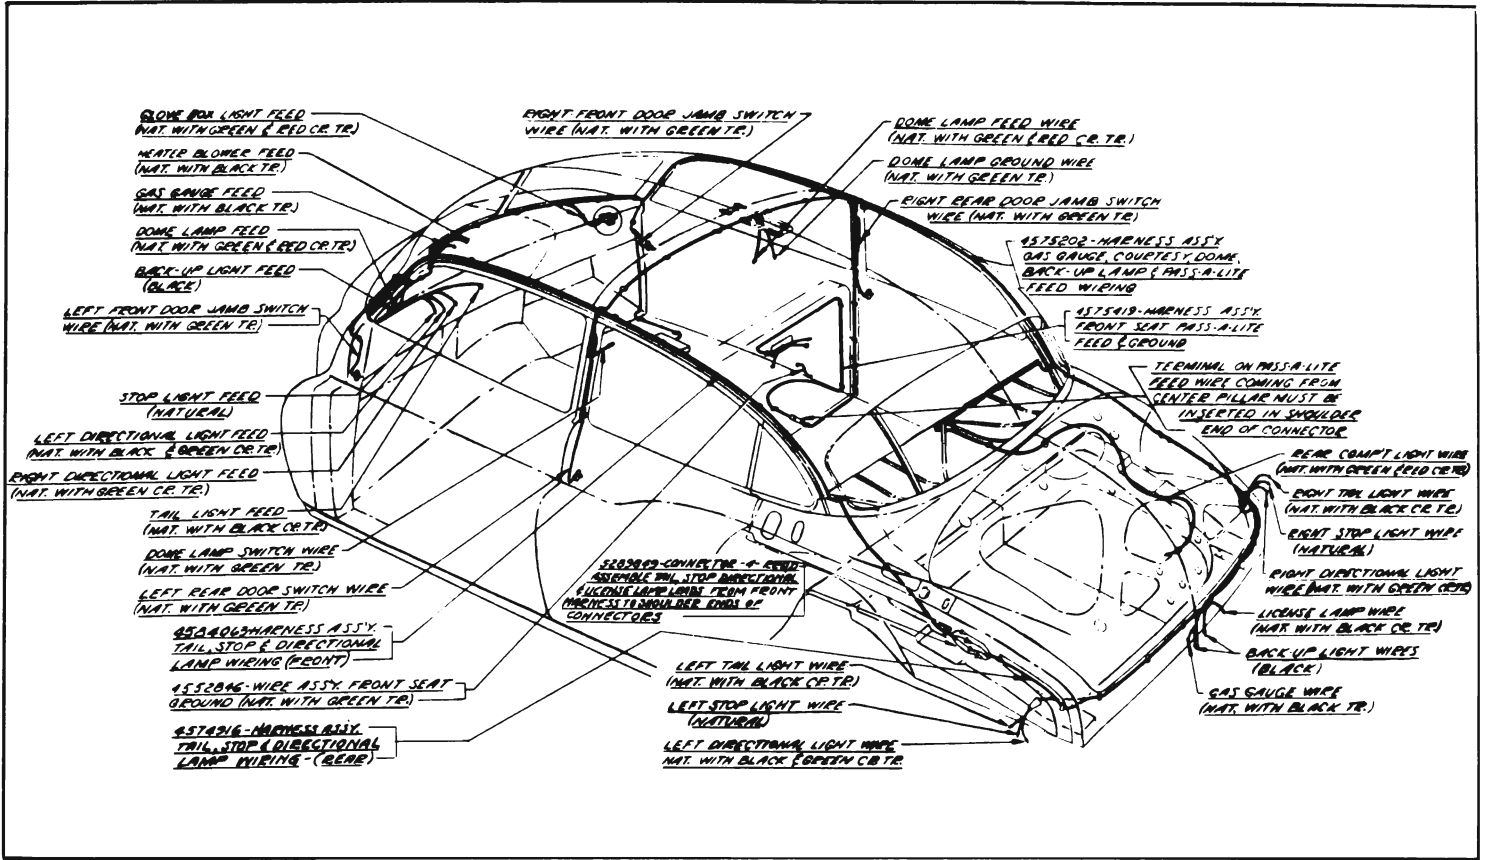


Figure 10-120—Body Wiring Circuit Diagram—Models 52, 72—Styles 4519, 4719

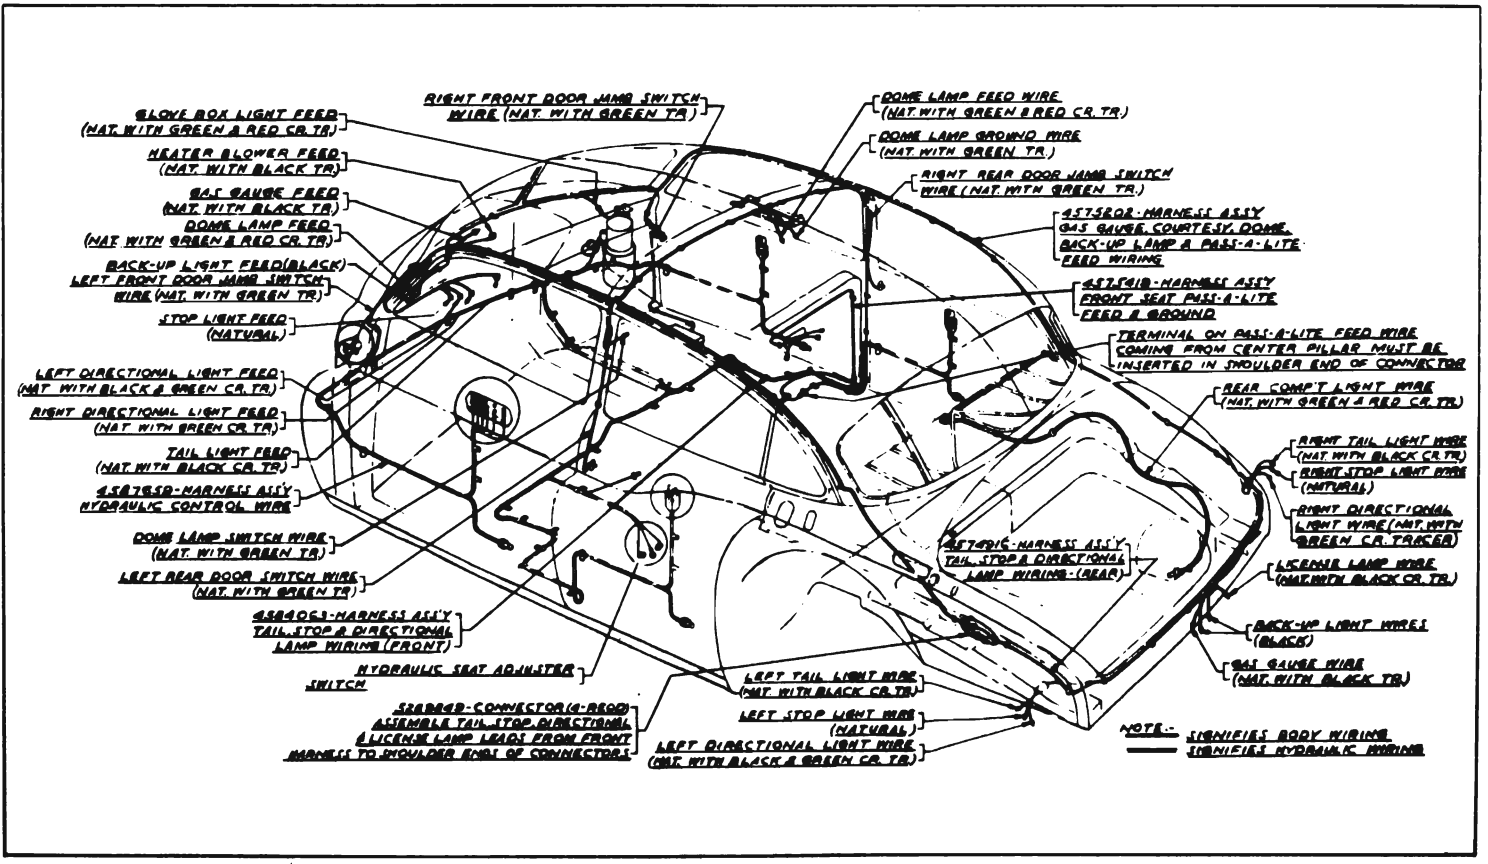


Figure 10-121—Body and Hydro-Electric Wiring Circuit Diagram—Models 52, 72—Styles 4519, 4719

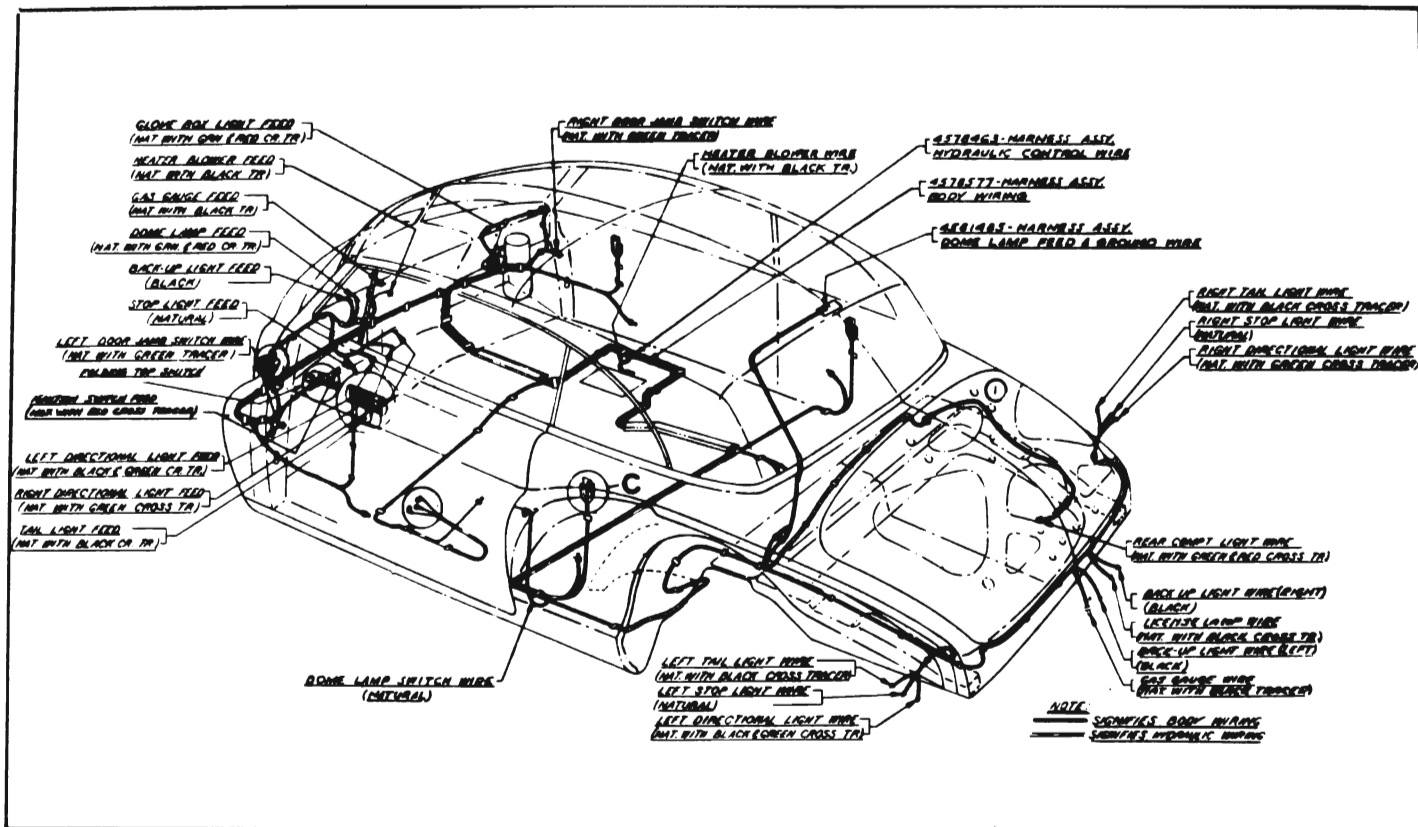


Figure 10-122—Body and Hydro-Lectro Wiring Circuit Diagram—Models 56C, 76C—Styles 4567, 4767

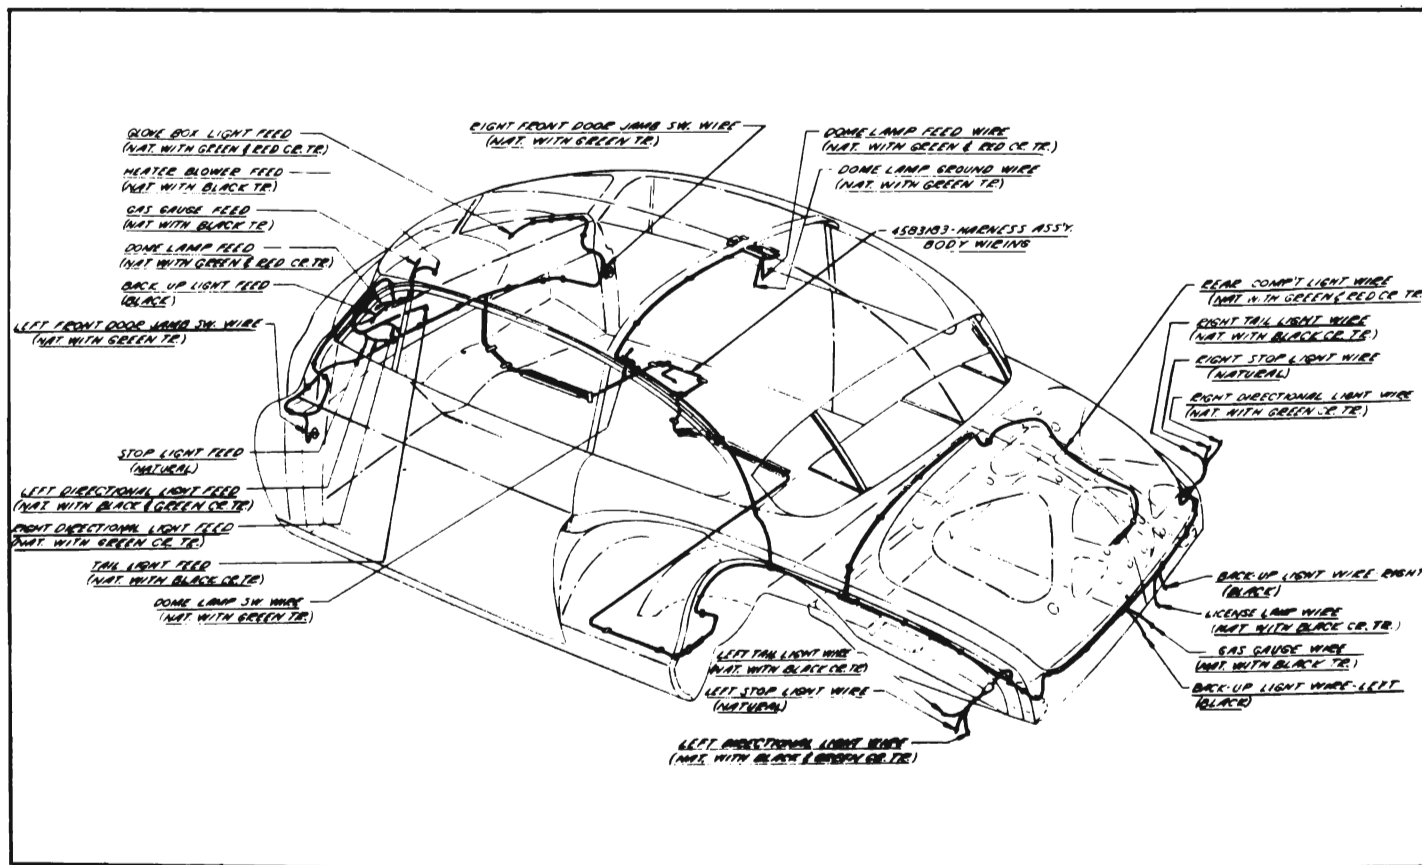


Figure 10-123—Body Wiring Circuit Diagram—Model 56R—Style 4537

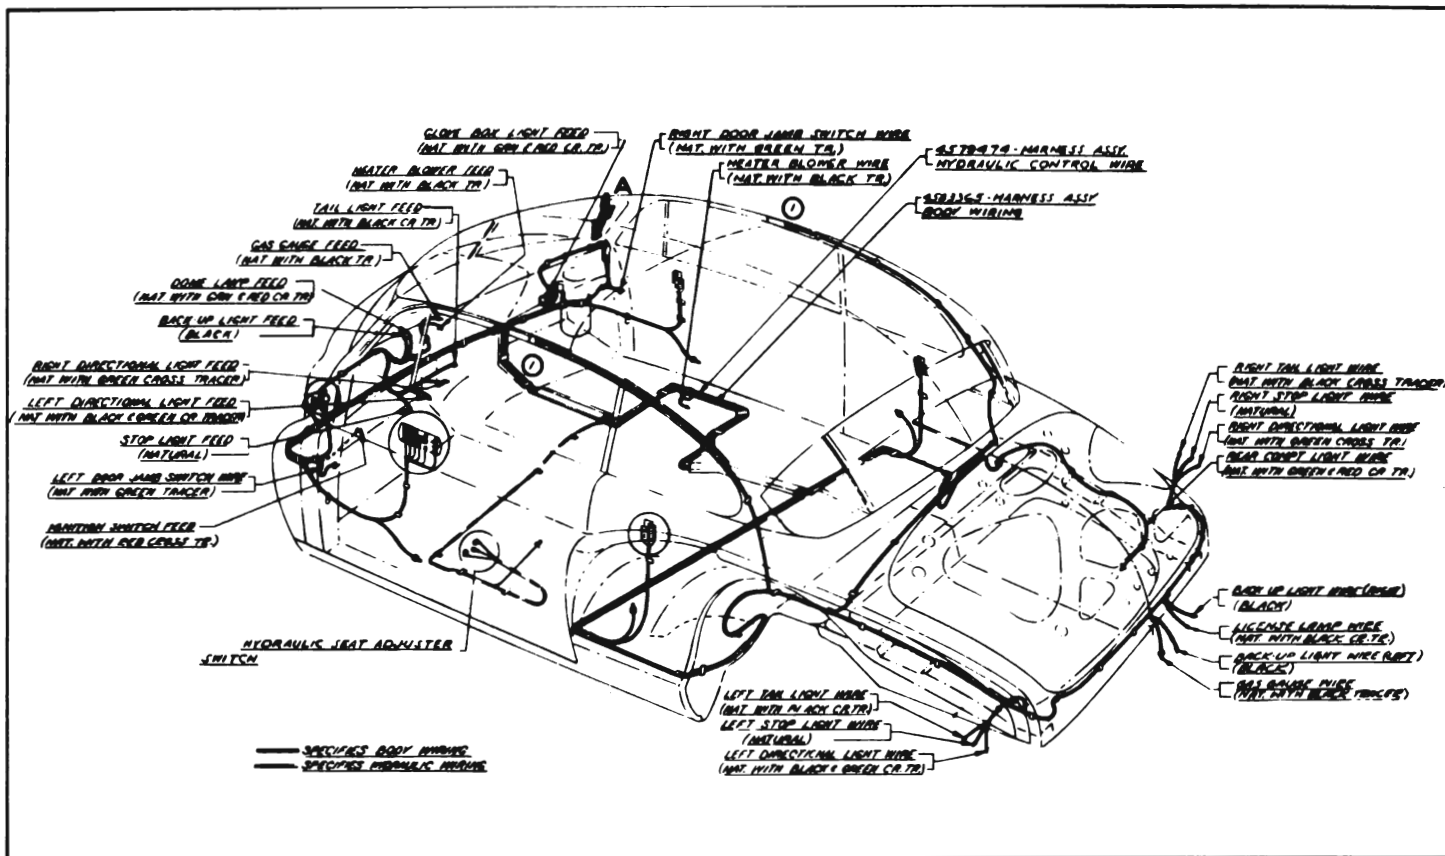


Figure 10-124—Body and Hydro-Electric Wiring Circuit Diagram—Model 76R—Style 4737



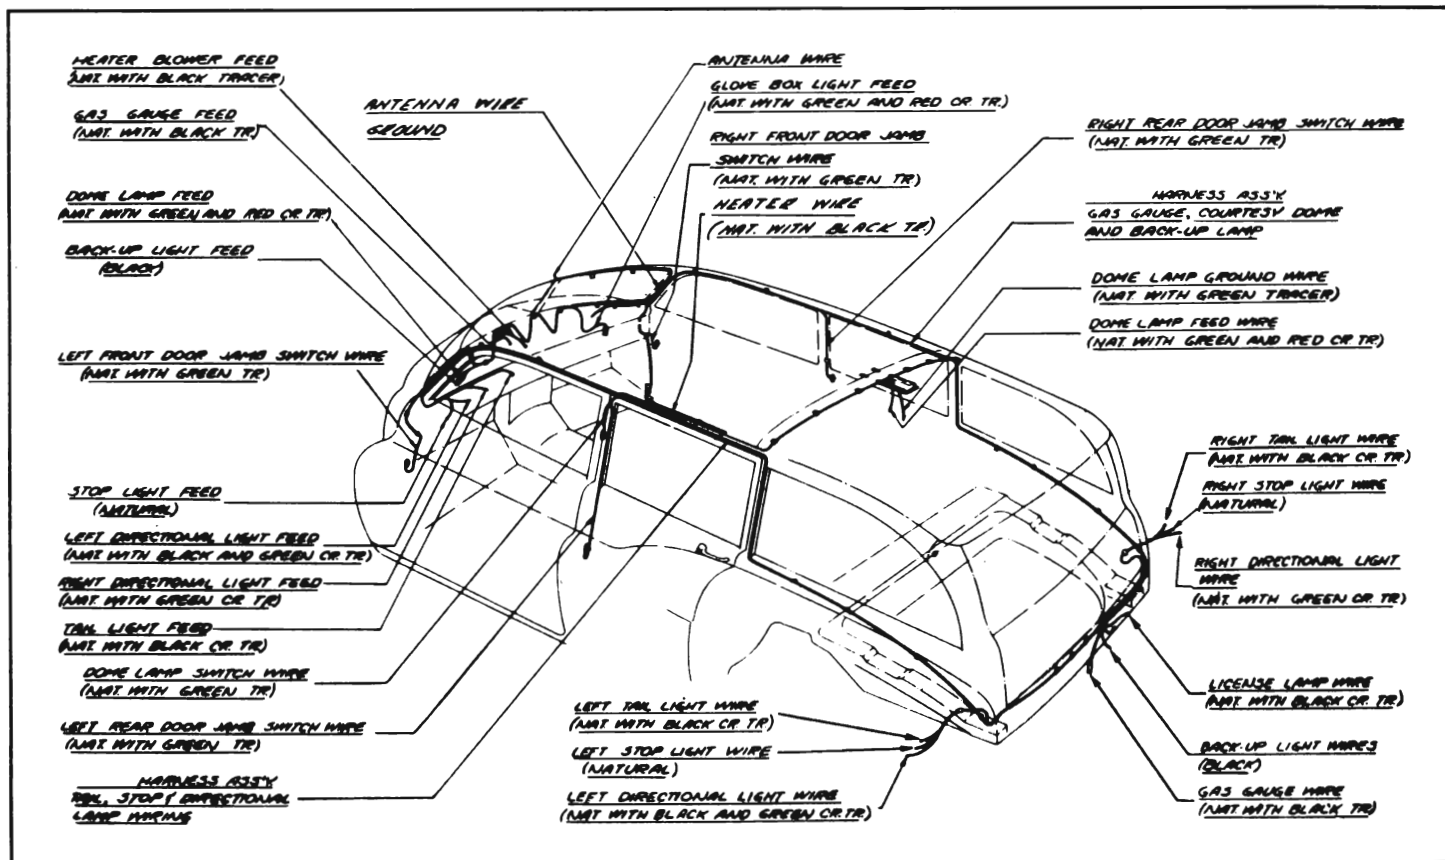


Figure 10-125—Body Wiring Circuit Diagram—Models 59,79

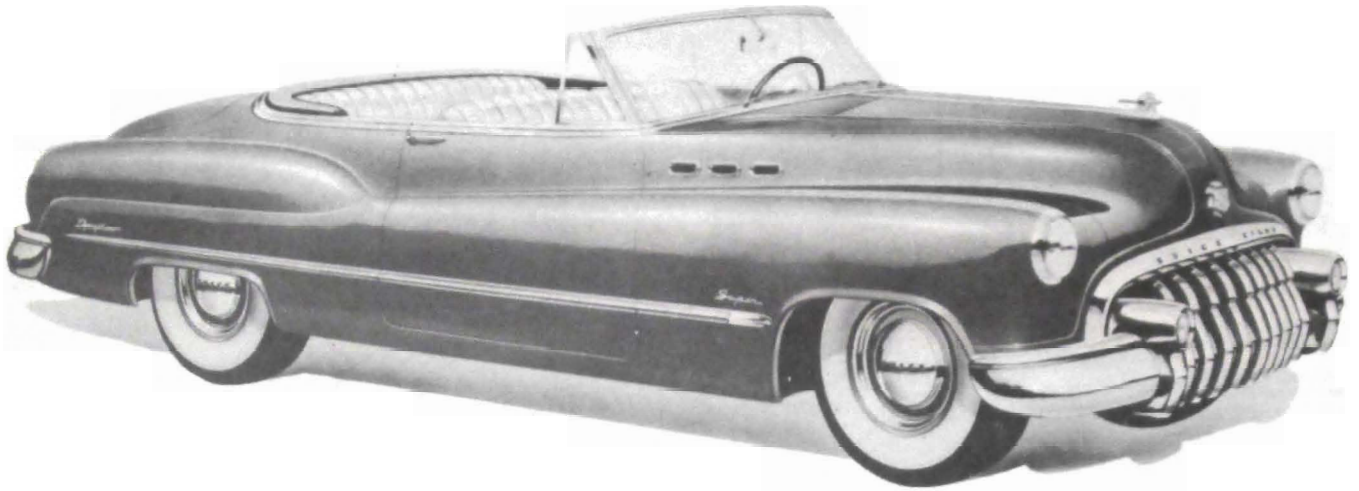

**Model 56C**

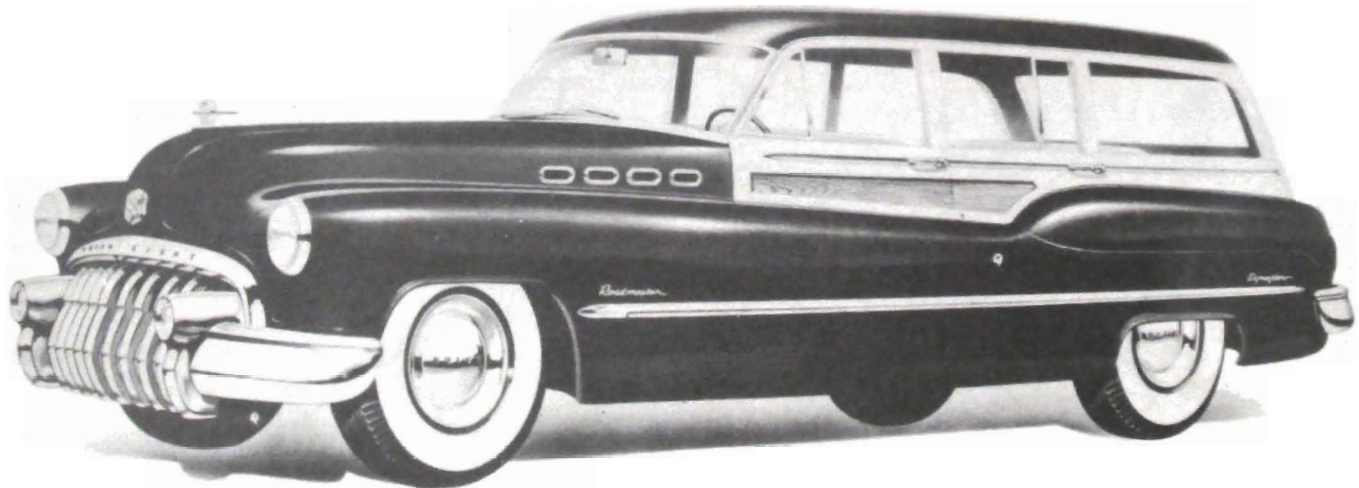

**Model 79**