

	Page	D	Page
Center Pillar Trim	13-35	Dash Pot & Throttle Linkage Adjustment.....	3-11
Charge Indicator	10-88	Defroster, Windshield	11-1
Chains, Tire	6-8	Diagnosis, Trouble	
Chart, Headlamp Aiming	10-74	Battery	10-5
Chassis Lubrication	1-1	Brakes	8-7
Chassis Sheet Metal	12-1	Clutch	4-3
Chassis Springs	6-5	Clock & Instruments	10-10
Overload, Rear	6-20	Cranking System	10-7
Replacement, Front	6-18	Engine	2-17
Replacement, Rear	6-20	Fuel System	3-6
Trim Dimensions, Front	6-18	Generating System	10-6
Trim Dimensions, Rear	6-19	Hydro-Lectric Power System	13-48
Chassis Suspension Specifications	6-1	Ignition System	10-8
Check Links, Door, Adjust, Replace	13-12	Lighting System	10-9
Choke, Automatic	See Carter or Stromberg	Radio	11-10
Choke Thermostat Adjustment	3-14	Rear Axle	5-5
Chrome Plated Parts, Care of	13-3	Shock Absorbers	6-12
Cigar Lighters	10-76	Signal Systems	10-9
Circuit Diagrams, Wiring	10-93	Steering Action	6-13
Cleaning		Steering Gear	7-4
Body Trim Fabric	13-3	Tires	6-9
Folding Top	13-4	Transmission—Dynaflow	4-28
Leather Seats	13-4	Transmission—Synco-Mesh	4-15
Climatic Control	See Carter	Differential	See Rear Axle
Clock Electric	10-89	Dimmer Switch	10-72
Trouble Diagnosis	10-10	Directional Signal Lamps & Switch	10-81
Clutch	4-1	Lamp Circuits	10-83
Assemble	4-8	Switch Timing Adjustment	10-83
Disassemble, Inspect	4-6	Switch Parts Replacement	10-84
Lubricate Internal Parts	4-4	Trouble Diagnosis	10-9
Pedal Adjustment	4-4	Distributor, Ignition	10-53
Release Mechanism	4-3	Advance Mechanism	10-55
Remove and Install	4-5	Condenser Tests	10-64
Specifications	4-1	Contact Points, Adjust	10-58
Trouble Diagnosis	4-3	Contact Points—Condenser, Replace	10-60
Coil, Ignition	10-53	Lubrication	1-2 & 1-4
Connecting Rods	2-10	Overhaul	10-65
Bearing Dimensions	2-4	Periodic Inspection	10-56
Bearing Replacement	2-29	Specifications	10-3
Rod Replacement	2-32	Timing	10-61
Condenser Replacement, Distributor	10-60	Division Channel, Door Window, Replace	13-28
Condenser Tests, Distributor	10-64	Dome Lamp & Switches	10-76
Contact Points, Distributor		Doors, Body	
Adjustment	10-58	Alignment	13-10
Inspection	10-56	Checks & Hold-Open Devices	13-12
Replacement	10-60	Handle Replacement	13-8
Convertible Coupe Bodies	13-37	Hinge Adjustment	13-11
Cooling System, Engine	2-14	Lock Replacement	13-8
Filling	2-38	Lock Free-Wheel Adjustment	13-7
Flushing	2-39	Trim Pad Removal & Installation	13-31
Prepare for Anti-Freeze	2-40	Weatherstrips	13-9
Trouble Diagnosis	2-19	Door Ventilators, Closed Bodies	13-29
Crankcase Ventilation	2-14	Door Ventilators, Convertible Bodies	13-40
Cranking Motor	10-44	Door Windows, Closed Bodies	13-27
Bench Test	10-50	Door Windows, Convertible Bodies	13-40
Lubrication	1-2	Dynaflow Transmission	4-26
Periodic Inspection	10-46	Lubricate	1-5
Repairs on Bench	10-51	Dynamic Balance, Wheel & Tire	6-24
Specifications	10-2		
Voltage Test	10-47	E	
Cranking System	10-36	Engine	2-1
Specifications	10-2	Cooling System	2-14
Trouble Diagnosis	10-7	Correction for Unbalance	2-47
Crankshaft & Bearings	2-11	Cranking System	10-36
Bearing Replacement	2-30	Dimensions, Fits, Adjustments	2-4
Dimensions	2-4	Fuel & Exhaust System	3-2
Oil Seal Replacement	2-27	Hard Starting	3-6
Current Regulator	See Generator Regulator	Ignition System	10-53
Cut-Out Relay	See Generator Regulator	Lubrication System	2-12
Cylinder Head & Gasket	2-9	Mountings	2-8
Remove & Install	2-23	Mounting Adjustment	2-44
Cylinder Reboring	2-34		

	Page		Page
Lamps,		O	
Auxiliary (Fog)	11-6	Oil Consumption, Excessive	2-18
Back-Up	11-4	Oil Recommendation, Engine	1-7
Direction Signal	10-74	Oil Filter	2-13
Dome	10-76	Changing Element	1-5
Headlamps	10-71	Oil Pressure Gauge	10-89
License, Rear	10-75	Oil Pump	2-12
Park, Signal, Tail, Stop	10-74	Dimensions of Parts	2-5
Safety, (Spot)	11-5	Repairs	2-42
Leather Seats, Cleaning	13-4	Oil Seal C/S R. Bearing	2-31
Lid, Rear Compt. (Trunk)	13-12	Oil Seals, R. Wheel Bearings	5-11
Lighting Switch & Circuit Breaker	10-70		
Test, Replace	10-71	P	
Lighting System	10-70	Pad, Door Trim	13-31
Trouble Diagnosis	10-9	Paint, Care of	13-2
Lighters, Cigar	10-76	Parking Brake Lever & Cables	8-5
Lights,		Adjustment, Lubrication	8-14
Headlights	10-71	Parking Lamps	10-74
Diretcion Signal	10-81	Pedal Adjustment, Brake	8-12
Instrument Panel	10-75	Pedal Adjustment, Clutch	4-4
Instrument Panel Compt. (Glove Box)	10-76	Pillar Trim, Center	13-35
Luggage Compt.	10-76	Pinion Adjustment, Rear Axle	5-23
Map (Inst. Panel)	10-76	Pinion Setting Gauges	5-21
Safety (Spot)	11-5	Pistons, Pins, Rings	2-9
Lock, Inst. Panel Compt. (Glove Box)	13-14	Dimensions	2-4
Lock, Door	13-7	Replacement	2-32
Free-Wheel Adjustment	13-7	Ring Fitting	2-35
Replacement	13-8	Pipes, Exhaust & Tail	3-4
Lower Control Arm, Rebush, Replace	6-18	Pivot Pin & Bushing, Replace	6-17
Lubricare (Lubrication)	1-1	Plate, Clutch Driven	4-2
Body	1-4	Plugs, Spark	10-54
Chassis	1-1	Power Unit, Hydro-Lectric	13-43
Clutch Internal Parts	4-5	Propeller Shaft	
Dynaflow Transmission	1-5	Assembly & Straightening	5-18
Parking Brake Cables	8-14	Installation & Adjustment	5-19
Speedometer Cable	10-91	Removal & Disassembly	5-13
Hydro-Lectric Power System	1-6	Product Report	0-4
Lubrication System, Engine	2-12	Pump, Fuel & Vacuum	See Fuel Pump
Specifications	2-3	Pump, Oil	2-12
Luggage Compt. Light	10-76	Repairs	2-42
		Pump, Water	2-15
M		Seal Replacement	2-41
Manifold Heat Control	3-4	Push Button Setting, Radio	11-12
Valve Service	3-12		
Manifold, Int. & Exh.	3-4	R	
Replacement	3-15	Radiator	2-15
Map Light Switch	10-76	Mounting Strap Adjustment	12-7
Marks on Ring Gear & Pinion	5-20	Thermostat Test	2-41
Master Cylinder, Brake	8-4	Radio	11-8
Filling	8-10	Adjustments on Car	11-11
Overhaul	8-20	Alignment Procedure	11-17
Models, Car	0-3	Antenna Install, Closed Body	11-13
Moldings, Belt, Header, Reveal	13-17	Antenna Install, Convertible & Riviera	11-16
Moldings, Door Garnish & Inside Belt	13-27	Antenna Operating Instructions	11-8
Mountings, Body	13-5	Foot Control Switch, Selectronic	11-12
Mountings, Engine	2-8	Receiver Installation	11-12
Adjustment	2-44	Service Parts Lists	11-25
Muffler	3-4	Trouble Diagnosis	11-10
		Radius Rod, Rebush, Replace	6-20
N		Rear Axle Assembly	5-4
Neutral Safety Switch	10-43	Draining & Flushing	1-8
Noise		Removal & Disassembly Procedures	5-9
Clutch	4-3	Specifications	5-1
Engine	5-5	Trouble Diagnosis	5-5
Front Wheel Bearing	5-5	Rear Compartment (Trunk) Lid	
Hood	12-2	Hinge & Lock Adjustment, Replacement	13-13
Radio	11-10	Weatherstrip	13-9
Rear Axle, Road, Tire	5-5	Rear Quarter Arm Rest & Trim	13-35
Transmission	4-15 & 5-5	Rear Quarter Windows, Closed Body	13-27
Numbers, Body Style	13-2	Rear Quarter Windows, Convertible Body	13-39
		Rear Shock Absorbers	See Shock Absorbers

	Page	U	Page
Direction Signal Switch Cam.....	10-83	Universal Joint	4-12
Ignition	10-61	V	
Stromberg Accel. Vac. Switch	10-41	Vacuum Pump	3-17
Timing Chain Replacement	2-27	Inspect and Test	3-16
Tires & Tubes	6-7	Repairs	3-20
Abnormal Wear	6-9	Vacuum Switch, Carter	10-38
Chains, Use of.....	6-8	Checking Switch Timing	10-39
Inflation	6-7	Cleaning & Timing	10-39
Inspection, Interchanging	6-8	Vacuum Switch, Stromberg	10-40
Replacement	6-22	Checking Switch Timing	10-41
Tire & Wheel Balance	6-24	Cleaning, Setting Timing	10-42
Toe-In, Front Wheel	6-26	Valve Mechanism, Engine	2-11
Check & Adjust	6-29	Checking Timing	2-26
Torque Ball	4-12	Guide Replacement	2-25
Adjustment	4-17	Hydraulic Lifters	2-11
Top, Folding, Convertible Body		Hydraulic Lifter Adjust.....	2-22
Adjustments	13-38	Lash Adjustment	2-21
Care of Top	13-38	Noise	2-17
Cleaning	13-3	Reconditioning	2-24
Operation	13-37	Specifications	2-3 & 2-4
Transmission, Dynaflow	4-26	Valves Shock Absorber, Replace	6-21
Approved Oils	1-6	Ventilation, Crankcase	2-14
Band Adjustments	4-30	Ventilators, Door	13-29
Drain & Refill	1-6	Ventilator, Outside Air	12-2
Installation of Assembly	4-32	Voltage Regulator	See Generator Regulator
Manual Control	4-27	Voltage Test, Cranking Motor.....	10-47
Manual Control Linkage Adjust.....	4-28	W	
Pushing Car to Start Engine.....	4-28	Warranty	0-5
Removal of Assembly.....	4-31	Washer, Windshield	11-3
Specifications	4-26	Water Pump	2-15
Towing Disabled Car	4-28	Seal Replacement	2-41
Trouble Diagnosis	4-28	Weatherstrips, Door & R. Compt.....	13-9
Transmission, Syncro-Mesh	4-10	Wheel Alignment Factors	6-26
Assembly	4-24	Wheel Alignment Procedure	6-27
Cleaning & Inspection	4-23	Wheel Bearing, Front, Adjust.....	6-16
Disassembly	4-21	Wheel Bearing Lubrication, Rear.....	1-7
Lubricare	1-1	Wheel Bearing Replacement, Front.....	6-15
Removal & Installation	4-20	Wheel Bearing Replacement, Rear.....	5-11
Shaft Upper Bearing, Replace	7-8	Wheel Cylinder, Brake, Overhaul.....	8-19
Shift Control Mechanism & Adjustment... 4-12 & 4-17		Wheel & Tire Balance	6-24
Shift Mechanism in Transmission.....	4-11	Wheel, Steering, Replace	7-7
Specifications	4-9	Wheel Suspension, F & R.....	6-3 & 6-4
Trouble Diagnosis	4-15	Window Glass Replace.....	See Glass Replace
Torque Ball Adjustment	4-17	Window Regulator, Hydraulic.....	13-45
Transmission, W/S Wiper	13-16	Windshield Defroster	11-1
Trim, Center Pillar	13-35	Windshield Glass Replace	See Glass Replace
Trim, Cleaning	13-3	Windshield Washer	11-3
Trim Dimensions, Chassis Spring, F & R.... 6-18 & 6-19		Windshield Wipers	13-15
Trim Pad, Door, Removal	13-31	Wiring Circuit Diagrams	10-93
Trouble Diagnosis	See Diagnosis	Wood Parts Refinishing, Estate Wagon.....	13-2
Trunk	See Rear Compt.		