

## GROUP 14

### ALPHABETICAL INDEX

A	Page		Page
Accelerator Pedal, for Starting Engine	3-6	Steering Shaft	7-8
Accelerator Vacuum Switch—Carter	10-38	Trans. Control Shaft, Upper	7-7
Check Timing, Cleaning	10-39	Bearing Service (Clean, Inspect, etc.)	1-9
Accelerator Vacuum Switch—Stromberg	10-40	Bell Housing Alignment, Dynaflow	2-47
Checking Switch Timing	10-41	Belt Moldings	
Cleaning & Setting Timing	10-42	Inside Finishing	13-26
Accessories		Outside Chrome	13-18
Auxiliary (Fog) Lamps	11-6	Body	13-1
Back-Up Lamps	11-4	Lubricare	1-3
Heater and Defroster	11-1	Breaker Points	See Contact Points
Radio	11-8	Brakes	8-2
Safety (Spot) Light	11-5	Adjustment, Major	8-14
Windshield Washer	11-3	Adjustment, Minor	8-12
Adjuster, Front Seat		Bleeding	8-10
Hydraulic	13-45	Drum Inspection	8-18
Manual	13-33	Drum Reboring & Balancing	8-19
Air Cleaner	3-3	Flushing	8-12
Clean & Fill	1-4	Master Cylinder Filling	8-10
Air Ventilator, Outside	12-2	Master Cylinder Overhaul	8-20
Alignment		Operation, Service Brakes	8-5
Bell Housing, Dynaflow	2-47	Parking Brake Adjustment	8-13
Doors	13-11	Parking Brake Cable Lubrication	8-13
Front Wheels	6-26	Parking Brake Lever & Cables	8-5
Flywheel Housing, Synchromesh	2-45	Service Recommendations	8-6
Frame	9-1	Shoe, Reline or Replace	8-16
Hood & Fenders	12-2	Specifications	8-1
Radio	11-18	Testing, Trouble Diagnosis	8-7
Ammeter	See Charge Indicator	Wheel Cylinder Overhaul	8-19
Antenna Installation, Radio		Button, Horn	10-77
Closed Bodies	11-12	Button Setting, Radio	11-11
Convertible & Riviera	11-15		
Antenna Trimmer Adjustment	11-11	<b>C</b>	
Anti-Freeze Solutions, Testing	2-40	Camber, Definition	6-26
Armature Test & Repair	10-27	Check & Adjust	6-28
Automatic Choke	See Carter or Stromberg	Camshaft & Bearings	2-28
Axle Assembly, Rear	See Rear Axle	Carbon Monoxide Warning	11-2
Axle Shaft, Remove & Install	5-11	Carburetor	
		Adjustment	3-13
<b>B</b>		Calibrations	3-2
Back-Up Lamp & Switch	11-4	Carter	See Carter
Balance, Brake Drum	8-19	Changing Calibrations	3-9
Balance Flywheel, Dynaflow	2-48	Heat Control Valve	3-12
Balance, Wheel & Tire	6-24	Stromberg	See Stromberg
Battery	10-11	Throttle Linkage	3-3
High Discharge Test	10-15	Throttle Linkage Adjustment	3-11
Hydrometer Test	10-14	Care of	
Importance of Keeping Charged	10-12	Body Trim Fabric	13-3
Inspection & Service	10-13	Chrome Plated Parts	13-3
Recharging	10-19	Folding Top	13-36
Registration & Care When New	10-11	Leather Seats	13-4
Specifications	10-1	Paint	13-2
Trouble Diagnosis	10-5	Wood Parts, Estate Wagon	13-2
Battery Cables	10-11	Car Models	0-3
Clean and Test	10-16	Car Roughness or Vibration	6-14
Connecting to Wind Clock	10-18	Carter Carburetor	3-25
Beam Indicator, Headlight	10-72	Assembly & Adjustment	3-34
Bearing Adjustment, Front Wheels	6-16	Calibrations	3-2
Bearing Lubrication, Rear Wheels	1-7	Disassemble, Clean, Inspect	3-32
Bearing Replacement		Identification Numbers	3-25
Connecting Rod	2-29	Metering Rod Adjustment	3-37
Crankshaft	2-30	Carter Climatic Control (Choke)	3-28
Differential	6-16	Disassembly, Cleaning, Assembly	3-31
Front Wheel	6-15	Fast Idle Cam & Unloader Adjustment	3-30
Rear Wheel (Axle Shaft)	5-11	Thermostat Adjustment	8-14

	Page		Page
Caster, Definition .....	6-26	Crankshaft & Bearings .....	2-10
Check and Adjust .....	6-28	Bearing Replacement .....	2-30
Cements, Body .....	13-4	Crankshaft Replacement .....	2-49
Center Pillar Trim .....	13-35	Dimensions .....	2-4
Charge Indicator .....	10-85	Oil Seal Replacement .....	2-27
Chains, Tire .....	6-8	Current Regulator .....	See Generator Regulator
Chart, Headlamp Aiming .....	10-73	Cut-Out Relay .....	See Generator Regulator
Chassis Lubrication .....	1-1	Cylinder Head & Gasket .....	2-9
Chassis Sheet Metal .....	12-1	Remove & Install .....	2-23
Chassis Springs .....	6-5	Cylinder Reboring .....	2-34
Overload, Rear .....	6-20		
Replacement, Front .....	6-18	<b>D</b>	
Replacement, Rear .....	6-20	Dash Pot & Throttle Linkage Adjustment .....	3-11
Trim Dimensions, Front .....	6-18	Defroster, Windshield .....	11-1
Trim Dimensions, Rear .....	6-19	Diagnosis, Trouble	
Chassis Suspension Specifications .....	6-1	Battery .....	10-5
Check links, Door, Adjust, Replace .....	13-13	Brakes .....	8-7
Choke, Automatic .....	See Carter or Stromberg	Clutch .....	4-3
Choke Thermostat Adjustment .....	3-14	Clock & Instruments .....	10-10
Chrome Plated Parts, Care of .....	13-3	Cranking System .....	10-7
Cigar Lighters .....	10-75	Engine .....	2-17
Circuit Diagrams, Wiring .....	10-89	Fuel System .....	3-6
Cleaning		Generating System .....	10-6
Body Trim Fabric .....	13-3	Hydro-Electric Power System .....	13-47
Folding Top .....	13-4	Ignition System .....	10-8
Leather Seats .....	13-4	Lighting System .....	10-9
Climatic Control .....	See Carter	Radio .....	11-9
Clock Electric .....	10-86	Rear Axle .....	5-5
Trouble Diagnosis .....	10-10	Shock Absorbers .....	6-12
Clutch, Dynaflo .....	4-38	Signal Systems .....	10-9
Clutch, Synchronesh .....	4-1	Steering Action .....	6-13
Assemble .....	4-8	Steering Gear .....	7-4
Disassemble, Inspect .....	4-6	Tires .....	6-9
Lubricate Internal Parts .....	4-4	Transmission-Dynaflo .....	4-50
Pedal Adjustment .....	4-4	Transmission-Syncro-Mesh .....	4-15
Release Mechanism .....	4-3	Differential .....	See Rear Axle
Remove and Install .....	4-5	Dimmer Switch .....	10-71
Specifications .....	4-1	Directional Signal Lamps & Switch .....	10-79
Trouble Diagnosis .....	4-3	Lamp Circuits .....	10-81
Coil, Ignition .....	10-53	Switch Timing Adjustment .....	10-81
Connecting Rods .....	2-10	Switch Parts Replacement .....	10-82
Bearing Dimensions .....	2-4	Trouble Diagnosis .....	10-9
Bearing Replacement .....	2-29	Distributor, Ignition .....	10-53
Rod Replacement .....	2-32	Advance Mechanism .....	10-55
Condenser Replacement, Distributor .....	10-59	Condenser Tests .....	10-63
Condenser Tests, Distributor .....	10-63	Contact Points, Adjust .....	10-58
Contact Points, Distributor		Contact Points-Condenser, Replace .....	10-59
Adjustment .....	10-58	Lubrication .....	1-2 & 1-4
Inspection .....	10-56	Overhaul .....	10-65
Replacement .....	10-59	Periodic Inspection .....	10-56
Control System, Dynaflo .....	4-40	Specifications .....	10-3
Converter, Torque, Dynaflo .....	4-32	Timing .....	10-60
Convertible Coupe Bodies .....	13-36	Division Channel, Door Window, Replace .....	13-27
Cooling System, Engine .....	2-14	Dome Lamp & Switches .....	10-75
Filling .....	2-38	Doors, Body	
Flushing .....	2-39	Alignment .....	13-11
Prepare for Anti-Freeze .....	2-40	Checks & Hold-Open Devices .....	13-13
Trouble Diagnosis .....	2-19	Handle Replacement .....	13-8
Crankcase Ventilation .....	2-13	Hinge Adjustment .....	13-11
Cranking Motor .....	10-44	Lock Replacement .....	13-8
Bench Test .....	10-50	Lock Free-Wheel Adjustment .....	13-7
Lubrication .....	1-2	Trim Pad Removal & Installation .....	13-30
Periodic Inspection .....	10-46	Weatherstrips .....	13-9
Repairs on Bench .....	10-51	Door Ventilators, Closed Bodies .....	13-28
Specifications .....	10-2	Door Ventilators, Convertible Bodies .....	13-40
Voltage Test .....	10-46	Door Windows, Closed Bodies .....	13-26
Cranking System .....	10-36	Door Windows, Convertible Bodies .....	13-39
Specifications .....	10-2	Dynaflo Transmission .....	4-26
Trouble Diagnosis .....	10-7	Lubricate .....	1-5
		Dynamic Balance, Wheel & Tire .....	6-24

	Page		Page
<b>E</b>			
Engine .....	2-1	Generator .....	10-20
Cooling System .....	2-14	Inspection, Test, on Car .....	10-24
Correction for Unbalance, Dynaflo .....	2-49	Lubrication .....	1-3
Correction for Unbalance, Synchronesh .....	2-46	Repairs, on Bench .....	10-26
Cranking System .....	10-36	Specifications .....	10-1
Dimensions, Fits, Adjustments .....	2-4	Test, on Bench .....	10-25
Fuel & Exhaust System .....	3-2	Generator Regulator .....	10-22
Hard Starting .....	3-6	Repairs on Bench .....	10-34
Ignition System .....	10-53	Specifications .....	10-2
Lubrication System .....	2-12	Test & Adjust, on Car .....	10-28
Mountings .....	2-8	Generating System .....	10-20
Mounting Adjustment .....	2-44	Trouble Diagnosis .....	10-6
Oil Recommendations .....	1-7	Glass Replacement .....	
Specifications .....	2-1	Back Window .....	13-24
Tune Up, Trouble Diagnosis .....	2-16	Door Window, Sliding .....	13-27
Ventilation System .....	2-13	Door Window, Stationary .....	13-28
Estate Wagon Wood Parts, Refinishing .....	13-2	Windshield .....	13-22
Exhaust Manifold .....	3-4	Glass Run Channel, Closed Body .....	13-26
Replacement .....	3-15	Glass Run Channel, Convertible .....	13-39
Valve Service .....	3-12	Glove Box Lid & Lock .....	13-15
Exhaust Pipes .....	3-4	Glove Box Light .....	10-75
<b>F</b>			
Fan Belt, Adjust or Replace .....	2-41		
Fastener Adjustment, Hood .....	12-4		
Fender & Hood Alignment .....	12-2		
Fender Skirt Mounting Adjustment .....	12-6		
Filler, Gas Tank, Replace .....	3-15		
Filters, Gasoline .....	3-10		
Flywheel & Ring Replacement .....			
Dynaflo .....	2-48		
Synchronesh .....	2-44		
Flywheel Housing Alignment, Synchronesh .....	2-45		
Flywheel Housing Replacement, Dynaflo .....	2-47		
Fog Lamps .....	11-6		
Folding Top, Convertible Body .....	See Top		
Frame .....	9-1		
Front Shock Absorbers .....	See Shock Absorbers		
Front Springs .....	See Chassis Springs		
Front Wheel Suspension .....	6-3		
Front Wheels .....			
Alignment .....	6-26		
Bearing Adjustment .....	6-16		
Bearing Lubrication .....	1-5		
Bearing Replacement .....	6-15		
Fuel Consumption, Excessive .....	3-8		
Fuel Pump .....	3-17		
Filter Cleaning .....	3-10		
Inspection & Test .....	3-18		
Repairs .....	3-20		
Fuel System Trouble Diagnosis .....	3-6		
Fuse Block .....	10-89		
Fuse Specifications .....	10-4		
<b>G</b>			
Gasoline Filters & Strainers .....	3-10		
Gasoline Gauge .....	10-87		
Trouble Diagnosis .....	10-10		
Gasoline Tank .....	3-2		
Replacement .....	3-15		
Gauge .....			
Gasoline .....	10-87		
Pinion Setting .....	5-20		
Oil Pressure .....	10-86		
Temperature .....	10-85		
Gears, Planetary, Dynaflo .....	4-37		
Gear Shift Control Mechanism .....	4-12		
Gear Tooth Contact, Rear Axle .....	5-7		
<b>H</b>			
Handles & Door Locks .....	13-7		
Hard Starting .....	3-6		
Headlamps .....	10-70		
Aiming Adjustment .....	10-72		
Aiming Chart, Use of .....	10-78		
Sealed Beam Unit, Replace .....	10-72		
Header Moldings .....	13-19		
Headling, Cleaning .....	13-3		
Removal & Installation .....	13-31		
Heater & Defroster .....	11-1		
Hinge Adjustment, Door .....	13-11		
Hood .....	12-1		
Adjustment for Width .....	12-5		
Alignment with Fenders & Doors .....	12-3		
Hinge & Fastener Adjustments .....	12-4		
Noises & Flutter .....	12-3		
Horns, Relay & Button .....	10-76		
Adjustments .....	10-78		
Trouble Diagnosis .....	10-9		
Hydraulic Control System, Dynaflo .....	4-40		
Hydraulic Valve Mechanism .....	2-11		
Adjust & Clean Lifters .....	2-22		
Hydro-Lectric Power System .....	13-41		
Fluid Level & Seasonal Change .....	13-46		
Folding Top System .....	13-42		
Power Unit Assembly .....	13-42		
Service Operations .....	13-49		
Tests .....	13-48		
Trouble Diagnosis .....	13-47		
Window & Seat Systems .....	13-44		
Hydrometer Test of Battery .....	10-14		
<b>I</b>			
Ignition Coil .....	10-53		
Inspection .....	10-57		
Specifications .....	10-3		
Tests .....	10-63		
Ignition Distributor .....	See Distributor		
Ignition System .....	10-53		
Periodic Inspection .....	10-56		
Trouble Diagnosis .....	10-8		
Ignition Switch .....	10-53		
Switch Replace, Lock Repairs .....	10-68		
Ignition Timing .....	10-61		
Indicator, Charge .....	10-85		
Indicator, Headlight Beam .....	10-72		
Indicators, Direction Signal .....	10-79		

	Page		Page
Inflation Pressures, Tire .....	6-7	Mountings, Engine .....	2-8
Instrument Panel Compt. (Glove Box)		Adjustment .....	2-44
Door & Lock .....	13-15	Muffler .....	3-4
Light & Switch .....	10-75		
Intake Manifold .....	3-4	<b>N</b>	
Replacement .....	3-15	Neutral Safety Switch .....	10-43
Intake Silencer .....	3-3	Noise	
Interchanging Tires .....	6-8	Clutch .....	4-3
		Dynaflow Transmission .....	4-54
<b>K</b>		Engine .....	5-5
King Pin Inclination, Definition .....	6-26	Front Wheel Bearing .....	5-5
Checking K.P.I. ....	6-29	Hood .....	12-3
Knuckle, Steering, Rebush, Replace .....	6-16	Radio .....	11-10
		Rear Axle, Road, Tire .....	5-5
<b>L</b>		Synchromesh Transmission .....	4-15
Lamp Bulb Specifications .....	10-4	Numbers, Body Style .....	13-2
Lamps,			
Auxiliary (Fog) .....	11-6	<b>O</b>	
Back-Up .....	11-4	Oil Consumption, Excessive .....	2-18
Direction Signal .....	10-73	Oil Recommendation, Engine .....	1-7
Dome .....	10-75	Oil Filter .....	2-12
Headlamps .....	10-70	Changing Element .....	1-4
License, Rear .....	10-74	Oil Pressure Gauge .....	10-86
Park, Signal, Tail, Stop .....	10-73	Oil Pump .....	2-12
Safety, (Spot) .....	11-5	Dimensions of Parts .....	2-5
Leather Seats, Cleaning .....	13-4	Repairs .....	2-42
Lid, Rear Compt. (Trunk) .....	13-13	Oil Seal C/S R. Bearing .....	2-31
Lighting Switch & Circuit Breaker .....	10-69	Oil Seals, R. Wheel Bearings .....	5-11
Lighting System .....	10-69		
Trouble Diagnosis .....	10-9	<b>P</b>	
Lighters, Cigar .....	10-75	Pad, Door Trim .....	13-30
Lights,		Paint, Care of .....	13-2
Headlights .....	10-70	Parking Brake Lever & Cables .....	8-5
Direction Signal .....	10-79	Adjustment, Lubrication .....	8-13
Instrument Panel .....	10-74	Parking Lamps .....	10-73
Instrument Panel Compt. (Glove Box) .....	10-75	Pedal Adjustment, Brake .....	8-12
Luggage Compt. ....	10-75	Pedal Adjustment, Clutch .....	4-4
Map (Inst. Panel) .....	10-75	Pillar Trim, Center .....	13-35
Safety (Spot) .....	11-5	Pinion Adjustment, Rear Axle .....	5-22
Lock, Inst. Panel Compt. (Glove Box) .....	13-15	Pinion Setting Gauges .....	5-20
Lock, Door .....	13-7	Pistons, Pins, Rings .....	2-9
Free-Wheel Adjustment .....	13-7	Dimensions .....	2-4
Replacement .....	13-8	Replacement .....	2-32
Lower Control Arm, Rebush, Replace .....	6-18	Ring Fitting .....	2-35
Lubricare (Lubrication) .....	1-1	Pipes, Exhaust & Tail .....	3-4
Body .....	1-3	Pivot Pin & Bushing, Replace .....	6-17
Chassis .....	1-1	Planetary Gears, Dynaflow .....	4-37
Clutch Internal Parts .....	4-5	Plate, Clutch Driven .....	4-2
Dynaflow Transmission .....	1-5	Plugs, Spark .....	10-54
Parking Brake Cables .....	8-13	Power Unit, Hydro-Lectric .....	13-42
Speedometer Cable .....	10-88	Propeller Shaft	
Hydro-Lectric Power System .....	1-6	Assembly & Straightening .....	5-17
Lubrication System, Engine .....	2-12	Installation & Adjustment .....	5-19
Specifications .....	2-3	Removal & Disassembly .....	5-13
Luggage Compt. Light .....	10-75	Product Report .....	0-4
		Pump, Fuel & Vacuum .....	See Fuel Pump
<b>M</b>		Pump, Oil .....	2-12
Manifold Heat Control .....	3-4	Repairs .....	2-42
Valve Service .....	3-12	Pump, Water .....	2-15
Manifold, Int. & Exh. ....	3-4	Seal Replacement .....	2-41
Replacement .....	3-15	Push Button Setting, Radio .....	11-11
Map Light Switch .....	10-74		
Marks on Ring Gear & Pinion .....	5-19	<b>R</b>	
Master Cylinder, Brake .....	8-4	Radiator .....	2-15
Filling .....	8-10	Mounting Strap Adjustment .....	12-6
Overhaul .....	8-20	Thermostat Test .....	2-41
Models, Car .....	0-3	Radio .....	11-7
Moldings, Belt, Header, Reveal .....	13-18	Adjustments on Car .....	11-11
Moldings, Door Garnish & Inside Belt .....	13-26	Alignment Procedure .....	11-16
Mountings, Body .....	13-5	Antenna Install, Closed Body .....	11-12

	Page		Page
Antenna Install, Convertible & Riviera	11-15	Specifications	
Antenna Operating Instructions	11-7	Battery	10-1
Foot Control Switch, Selectronic	11-12	Brakes	8-1
Receiver Installation	11-11	Car, General	0-3
Service Parts Lists	11-24	Chassis Suspension	6-1
Trouble Diagnosis	11-9	Clutch	4-1
Radius Rod, Rebush, Replace	6-20	Cranking System	10-2
Rear Axle Assembly	5-4	Engine	2-1
Draining & Flushing	1-8	Fuel & Exhaust Systems	3-1
Removal & Disassembly Procedures	5-9	Generating System	10-1
Specifications	5-1	Ignition System	10-3
Trouble Diagnosis	5-5	Lighting System	10-3
Rear Compartment (Trunk) Lid		Radio Alignment	11-18
Hinge & Lock Adjustment, Replacement	13-13	Rear Axle	5-1
Weatherstrip	13-9	Signal System (Horn, Lights, etc.)	10-4
Rear Quarter Arm Rest & Trim	13-35	Steering Gear	7-1
Rear Quarter Windows, Closed Body	13-26	Transmission, Dynaflo	4-26
Rear Quarter Windows, Convertible Body	13-39	Transmission, Synchromesh	4-9
Rear Shock Absorbers	See Shock Absorbers	Speedometer	10-88
Rear Wheel Bearing		Gears	4-10 & 4-12
Lubrication	1-7	Trouble Diagnosis	10-10
Noise	5-5	Spot Light	11-5
Replacement	5-11	Springs, Chassis	See Chassis Springs
Rear Wheel Suspension	6-4	Stabilizer Link Adjustment	6-15
Reboring Brake Drums	8-19	Starter	See Cranking Motor
Reboring Cylinders	2-34	Static Balance, Wheel & Tire	6-24
Receiver Installation, Radio	11-11	Steering Gear Assembly	7-2
Recharging Battery	10-19	Adjustment	7-5
Refinishing Wood Parts, Estate Wagon	13-2	Assembly	7-10
Regulator, Generator	10-22	Disassembly	7-9
Regulator, Window, Replace	13-27	Inspection of Parts	7-9
Regulator, Ventilator	13-29	Installation	7-8
Relay, Cut-Out	10-22	Lubricate	1-5
Relay, Horn	10-76	Removal	7-8
Relay, Solenoid Switch, Test & Adjust	10-47	Shaft Bearing Replacement	7-8
Release Mechanism, Clutch	4-3	Specifications	7-1
Reline Brake Shoes	8-16	Trouble Diagnosis	7-4
Reveal Moldings	13-18	Steering Geometry (Turning Angles)	6-26
Ring Gear & Pinion Marks	5-19	Checking	6-30
Ring Gear Replacement	5-15	Steering Knuckle, Rebush, Replace	6-16
Rings, Piston	See Piston Rings	Steering Tie Rods & Ends	7-3
Rocker Arms, Assembly of	2-25	Steering Wheel, Replace	7-6
Rust Preventives, Cooling System	2-39	Stop Lights & Switch	10-76
		Trouble Diagnosis	10-9
		Stromberg Carburetor	3-38
<b>S</b>		Assembly & Adjustment	3-47
Safety (Spot) Light	11-5	Calibrations	3-2
Sealed Beam Unit, Headlamp	10-70	Disassembly, Clean, Inspect	3-42
Sealing Compounds	13-4	Identification Numbers	3-38
Sealing Strip, Front Doors	13-10	Strut Rods, Replace	5-10
Seat Adjuster, Hydraulic	13-45	Style Numbers, Body	13-2
Seat & Adjuster, Front, Closed Body	13-33	Switch	
Seat & Back Removal, Rear	13-35	Dimmer	10-71
Seat Cushion & Back Spring Stiffening	13-33	Direction Signal	10-79
Selector Control, S-M Transmission	4-13	Ignition	10-53
Serial Numbers, Car & Engine	0-3	Lighting	10-69
Sheet Metal, Chassis	12-1	Map Light	10-74
Shift Control, S-M Transmission	4-12	Neutral Safety	10-43
Adjustment	4-17	Stop Light	10-76
Signal Lamps	10-73		
Silencer, Intake	3-3	<b>T</b>	
Shock Absorbers, Front & Rear	6-5 & 6-6	Tail Lamps	10-73
Check for Leaks	6-21	Tail Pipe	3-4
Filling	6-20	Tank, Gasoline	3-2
Replacement of Valve or Shock	6-21	Replacement	3-15
Trouble Diagnosis	6-12	Temperature Gauge	10-85
Solenoid Switch & Relay, Test, Adjust	10-47	Trouble Diagnosis	10-10
Specifications	10-2	Thermo Circuit Breaker	10-69
Spark Plugs	10-54	Thermostat	
Clean & Adjust	10-62	Choke, Adjustment	3-14
Spark Timing Control	10-55		
Specific Gravity, Battery	10-15		

	Page		Page
Exh. Manifold Valve .....	3-12	Trouble Diagnosis .....	4-15
Radiator, Test .....	2-41	Torque Ball Adjustment .....	4-17
Third Member Housing, Replace .....	5-16	Transmission, W/S Wiper .....	13-17
Throttle Linkage .....	3-3	Trim, Center Pillar .....	13-35
Adjustment .....	3-11	Trim, Cleaning .....	13-3
Tie Rods & Ends .....	7-3	Trim Dimensions, Chassis Spring, F & R....	6-18 & 6-19
Adjustment .....	7-5	Trim, Pad, Door, Removal .....	13-30
Tightening Specifications		Trouble Diagnosis .....	See Diagnosis
Brakes .....	8-1	Trunk .....	See Rear Comp't.
Chassis Suspension .....	6-1		
Clutch .....	4-1	<b>U</b>	
Engine .....	2-1	Universal Joint .....	4-12
Fuel & Exhaust Systems .....	3-1		
Rear Axle .....	5-1	<b>V</b>	
Steering Gear .....	7-1	Vacuum Pump .....	3-17
Transmission, Dynaflo .....	4-26	Inspect and Test .....	3-16
Transmission, Synchro-Mesh .....	4-9	Repairs .....	3-20
Timing		Vacuum Switch, Carter .....	10-38
Camshaft & Valve .....	2-27	Checking Switch Timing .....	10-39
Carter Accel. Vac. Switch .....	10-39	Cleaning & Timing .....	10-39
Direction Signal Switch Cam .....	10-81	Vacuum Switch, Stromberg .....	10-40
Ignition .....	10-61	Checking Switch Timing .....	10-41
Stromberg Accel. Vac. Switch .....	10-41	Cleaning, Setting Timing .....	10-42
Timing Chain Replacement .....	2-27	Valve Mechanism, Engine .....	2-11
Tires & Tubes .....	6-7	Checking Timing .....	2-26
Abnormal Wear .....	6-9	Guide Replacement .....	2-25
Chains, Use of .....	6-8	Hydraulic Lifters .....	2-11
Inflation .....	6-7	Hydraulic Lifter Adjust. ....	2-22
Inspection, Interchanging .....	6-8	Lash Adjustment .....	2-21
Replacement .....	6-22	Noise .....	2-17
Tire & Wheel Balance .....	6-24	Reconditioning .....	2-24
Toe-In, Front Wheel .....	6-26	Specifications .....	2-3 & 2-4
Check & Adjust .....	6-29	Valves Shock Absorber, Replace .....	6-21
Top, Folding, Convertible Body		Ventilation, Crankcase .....	2-13
Adjustments .....	13-38	Ventilators, Door .....	13-28
Care of Top .....	13-37	Ventilator, Outside Air .....	12-2
Cleaning .....	13-3	Voltage Regulator .....	See Generator Regulator
Operation .....	13-36	Voltage Test, Cranking Motor .....	10-46
Torque Ball .....	4-12		
Adjustment .....	4-17	<b>W</b>	
Torque Converter, Dynaflo .....	4-32	Warranty .....	0-5
Transmission, Dynaflo .....	4-26	Washer, Windshield .....	11-3
Approved Oils .....	1-5	Water Pump .....	2-15
Band Adjustments .....	4-85	Seal Replacement .....	2-41
Drain & Refill .....	1-5	Weatherstrips, Door & R. Compt. ....	13-9
Installation of Assembly .....	4-59	Wheel Alignment Factors .....	6-26
Manual Control .....	4-29	Wheel Alignment Procedure .....	6-27
Manual Control Linkage Adjust. ....	4-55	Wheel Bearing, Front, Adjust. ....	6-16
Pushing Car to Start Engine .....	4-30	Wheel Bearing Lubrication, Rear .....	1-7
Removal of Assembly .....	4-58	Wheel Bearing Replacement, Front. ....	6-15
Specifications .....	4-26	Wheel Bearing Replacement, Rear. ....	5-11
Towing Disabled Car .....	4-30	Wheel Cylinder, Brake, Overhaul .....	8-19
Trouble Diagnosis .....	4-50	Wheel & Tire Balance .....	6-24
Transmission, Synchro-Mesh .....	4-10	Wheel, Steering, Replace .....	7-6
Assembly .....	4-24	Wheel Suspension, F & R .....	6-3 & 6-4
Cleaning & Inspection .....	4-23	Window Glass Replace. ....	See Glass Replace
Disassembly .....	4-21	Window Regulator, Hydraulic .....	13-44
Lubricare .....	1-1	Windshield Defroster .....	11-1
Removal & Installation .....	4-20	Windshield Glass Replace .....	See Glass Replace
Shaft Upper Bearing, Replace .....	7-8	Windshield Washer .....	11-3
Shift Control Mechanism & Adjustment. ....	4-12 & 4-17	Windshield Wipers .....	13-16
Shift Mechanism in Transmission .....	4-11	Wiring Circuit Diagrams .....	10-89
Specifications .....	4-9	Wood Parts Refinishing, Estate Wagon. ....	13-2