

SECTION 10-J

WIRING CIRCUIT DIAGRAMS

DIAGRAMS IN SECTION 10-J

| Figure | Wiring Circuit Diagram | Page | Figure | Wiring Circuit Diagram | Page |
|--------|--|-------|--------|--|-------|
| 10-88 | Chassis—Series 40 | 10-84 | 10-95 | Body Wiring Circuit Diagram— Models 56 R—Style 4537 | 10-88 |
| 10-89 | Chassis—Series 50 Synchromesh | 10-85 | 10-96 | Body Wiring Circuit Diagram— Models 52, 72 R—Styles 4519, 4719 | 10-89 |
| 10-90 | Chassis—Series 50-70 Dynaflo | 10-86 | 10-97 | Body and Hydro-Lectric Wiring Circuit Diagram—Models 52, 72 R —Styles 4519 X, 4719 X | 10-89 |
| 10-91 | Dome Lamp Wiring Circuit Dia- gram—Series 40 | 10-87 | 10-98 | Body and Hydro-Lectric Wiring Circuit Diagram—Model 76 R— Style 4737 X | 10-90 |
| 10-92 | Dome Lamp Wiring Circuit Dia- gram—Models 56 C, 56 R, 76 C, 76 R | 10-87 | 10-99 | Body Wiring Circuit Diagram— Models 59, 79 R—Styles 4581, 4781 | 10-90 |
| 10-93 | Dome Lamp Wiring Circuit Dia- gram—Models 52 and 72 R | 10-87 | | | |
| 10-94 | Body and Hydro-Lectric Wiring Circuit Diagram—Model 46 C— Style 4367 X | 10-88 | | | |

SERVICE BULLETIN REFERENCE

| Bulletin No. | Page No. | SUBJECT |
|--------------|----------|---------|
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |

10-59 CIRCUIT DIAGRAMS, INSPECTION HOLE, AND FUSE BLOCK

This Section contains all the necessary wiring circuit diagrams for chassis and body. The wiring may be easily traced by paying attention to the color code on each wire and the color code indicated on the diagrams.

Many of the wiring connections use a flat push-pull type terminal. The terminal on the wire requires a straight hard push to seat it in the socket. A hard steady pull on the wire is required to detach the terminal from the socket.

An inspection hole located on left side of dash panel is closed by a cover attached with screws. Removal of this cover permits inspection and aids in working on wiring connections of instruments on instrument panel. When cover is reinstalled it should be well sealed with 3-M Autobody Sealer.

A central fuse block is mounted under the

cowl near the steering column and to rear of the inspection hole in cowl. The fuse block serves as a convenient junction point for a number of wiring circuits, provides a mounting for the direction signal flasher, and contains the fuses shown in figure 10-87. The "Direction Signal" fuse also protects the stop light circuits. The "Dome Lamp" fuse also protects the luggage compartment and glove box lamp circuits.

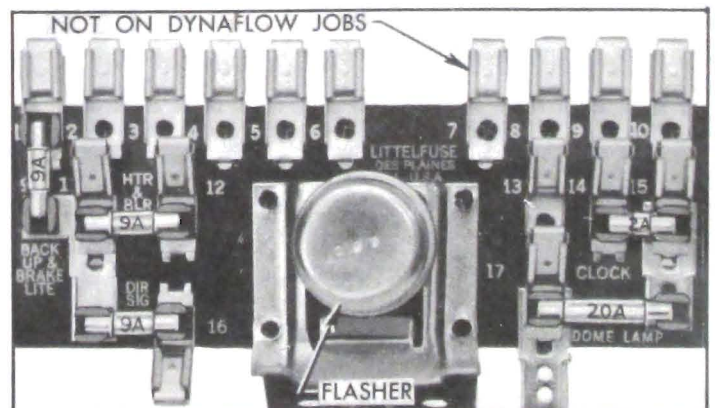


Figure 10-87—Fuse Block

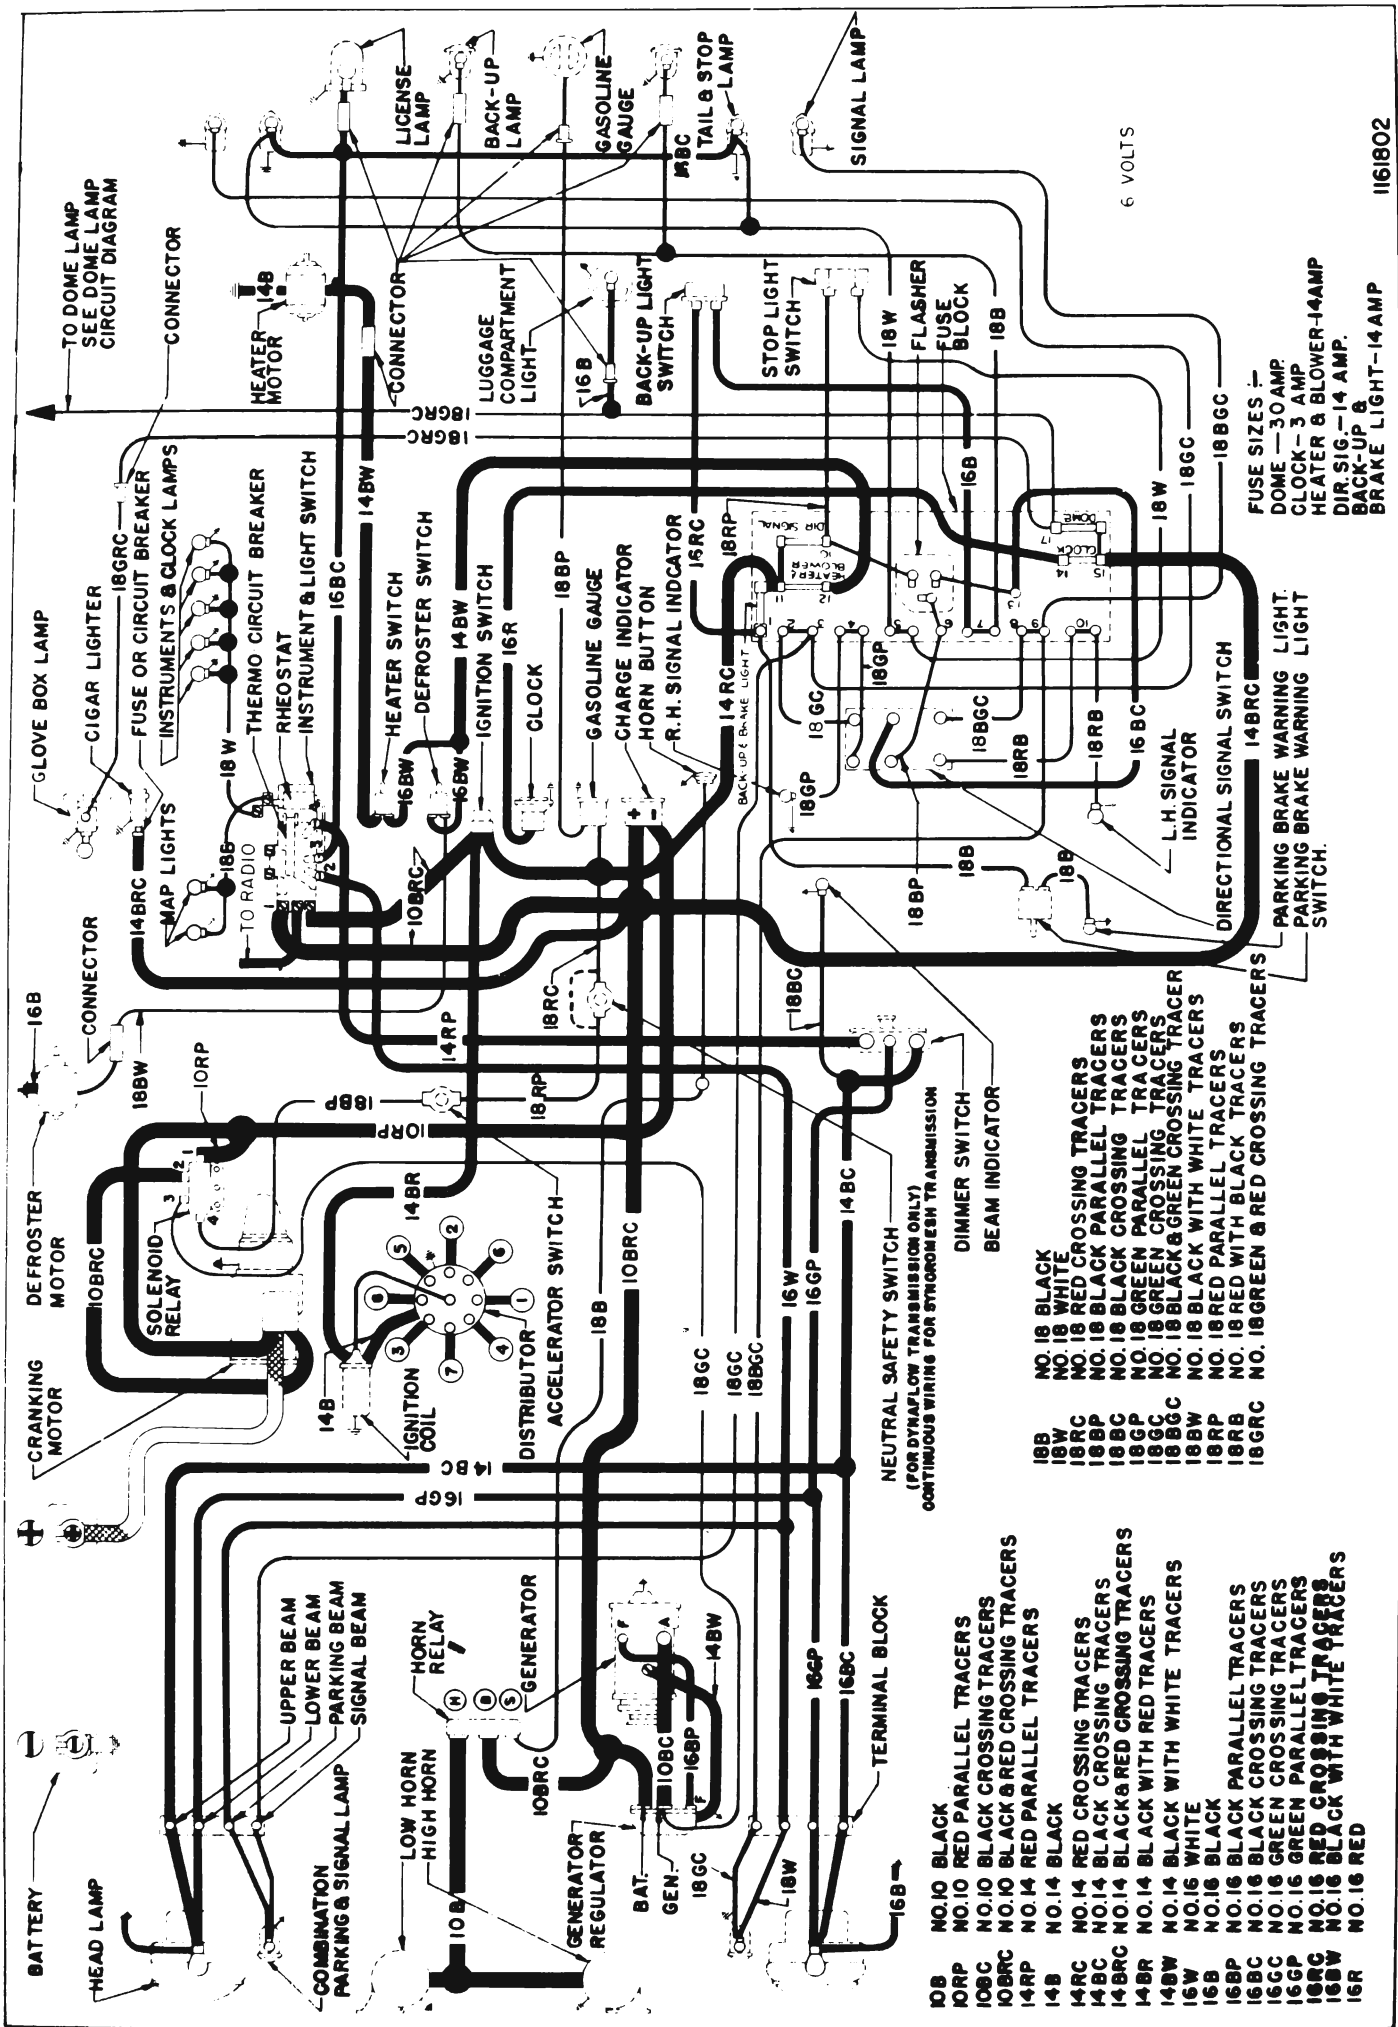


Figure 10-88—Chassis Wiring Circuit Diagram—Series 40

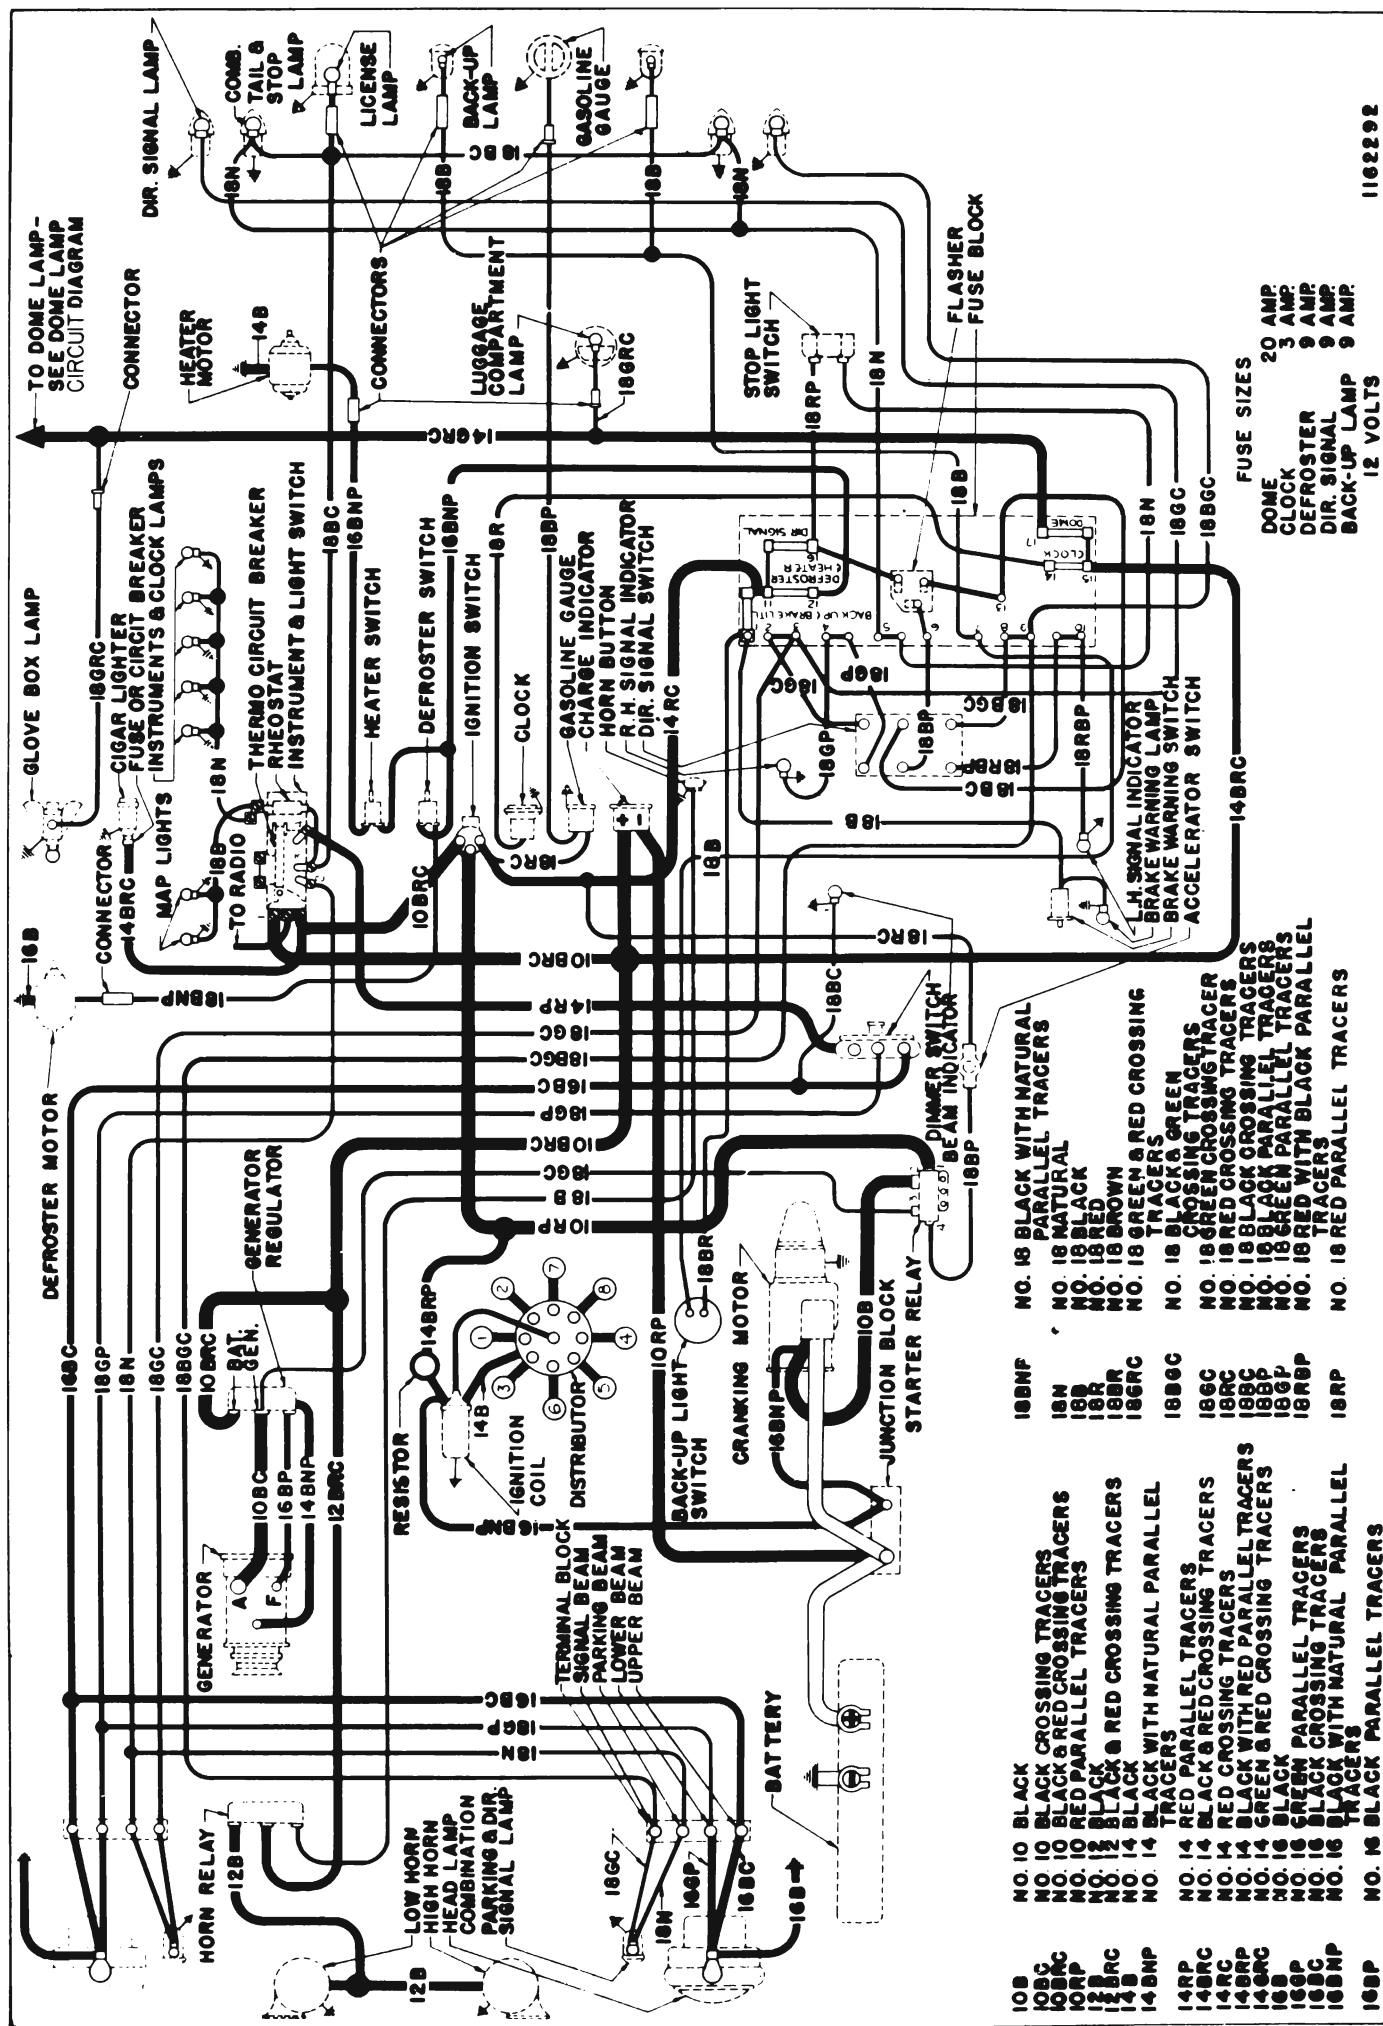


Figure 10-89—Chassis Wiring Circuit Diagram—Series 50 Synchronmesh

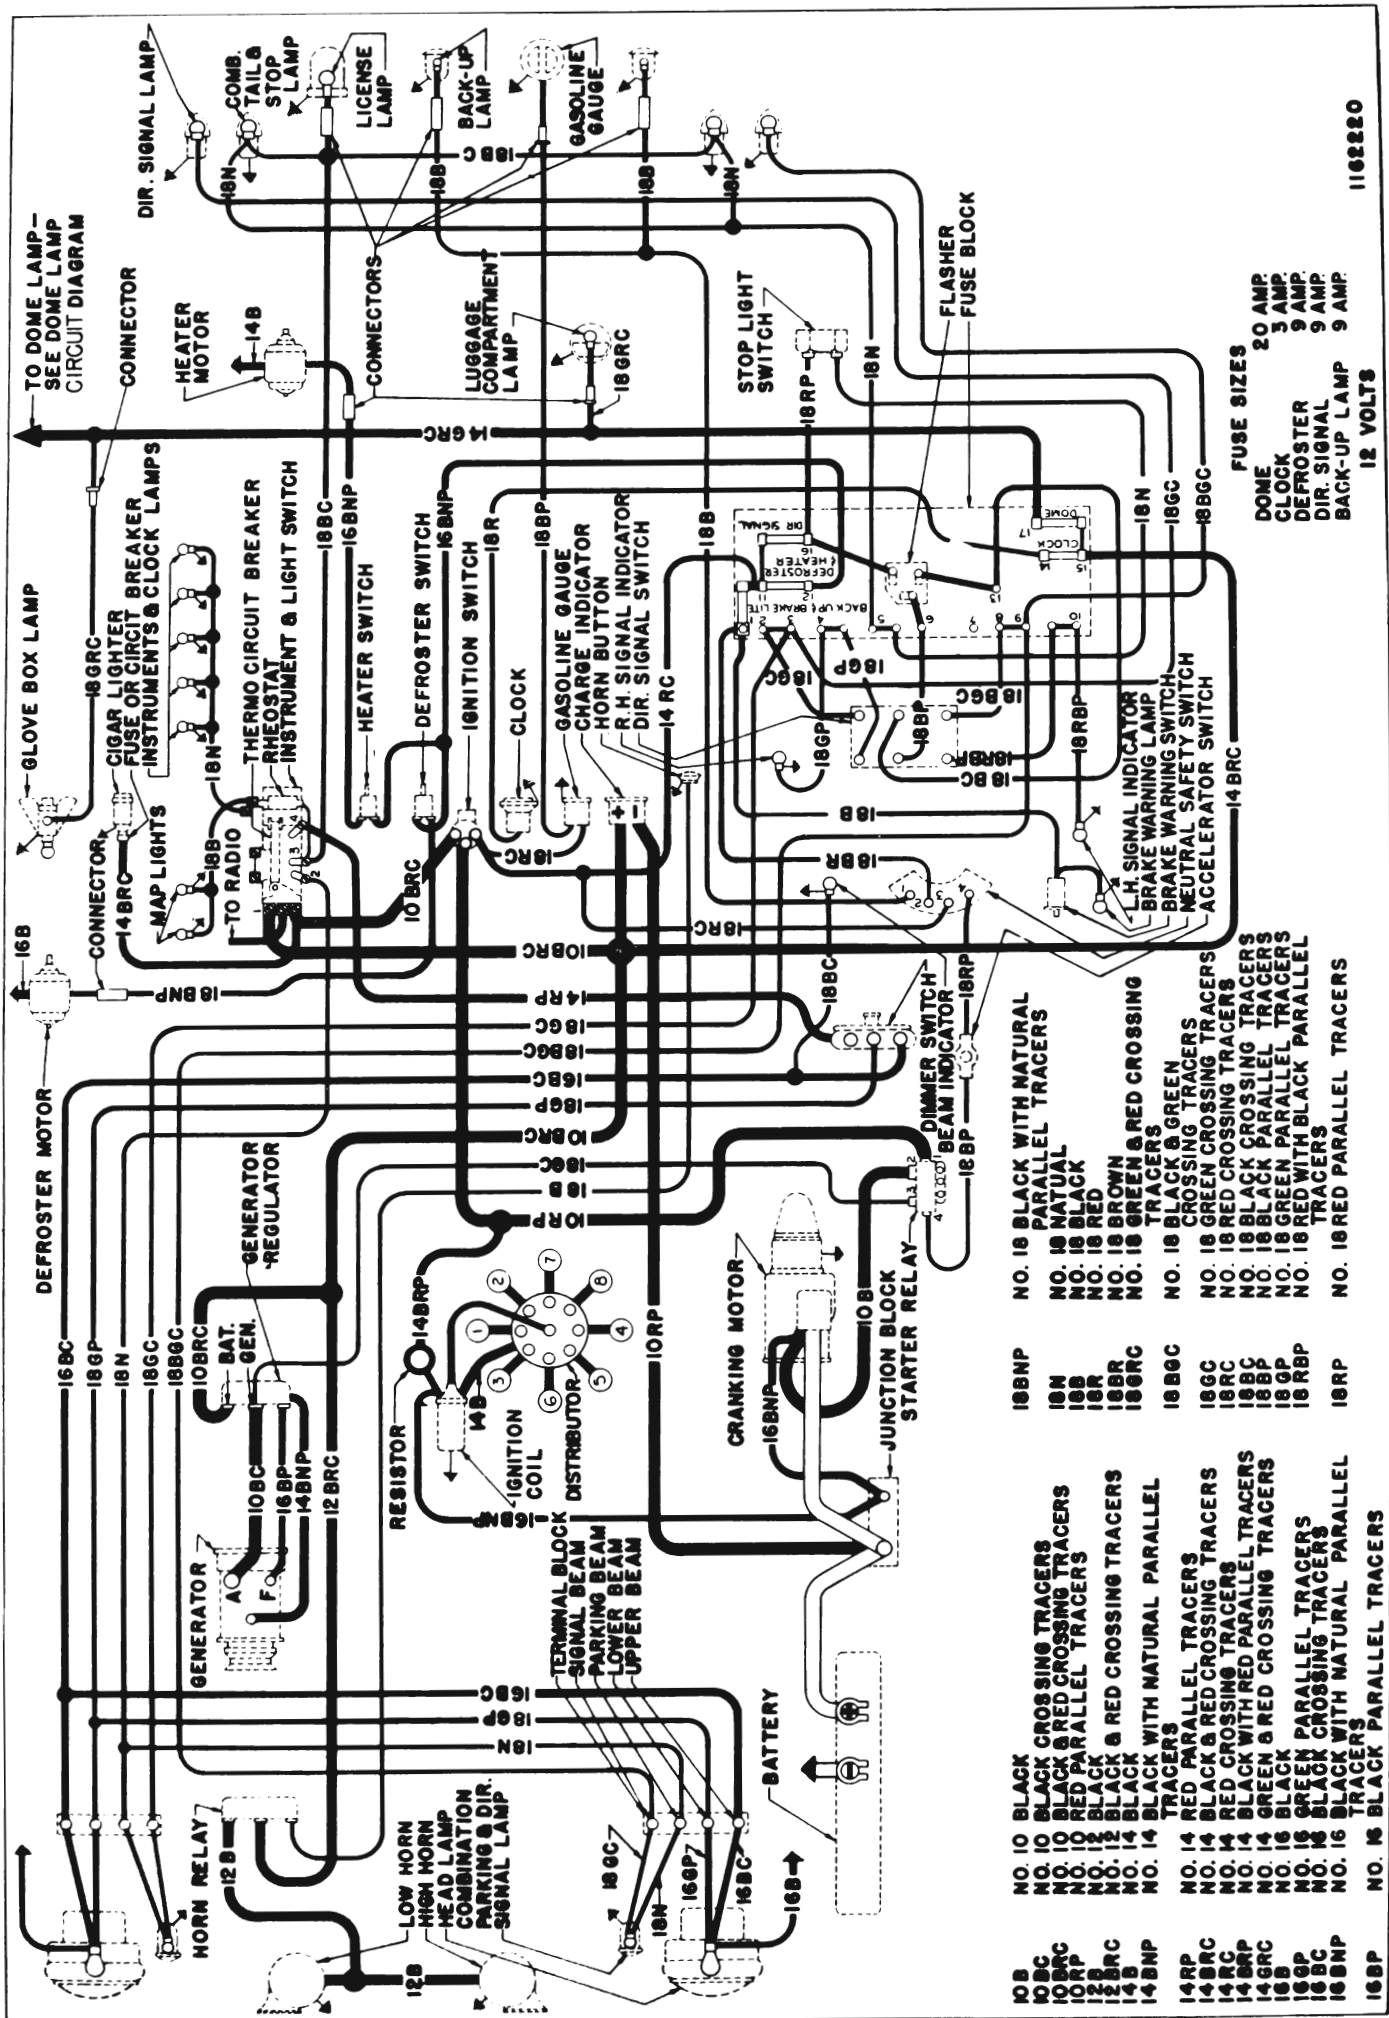


Figure 10-90—Chassis Wiring Circuit Diagram—Series 50-70 Dynaflow

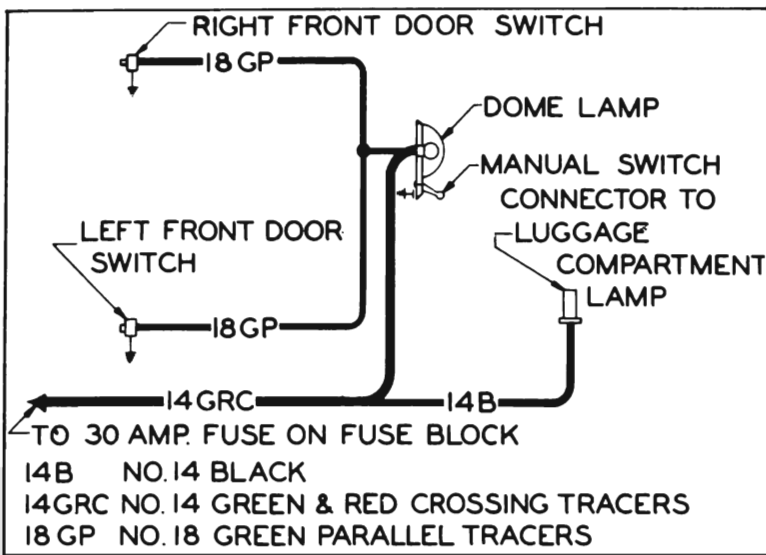


Figure 10-91—Dome Lamp Wiring Circuit Diagram—Series 40

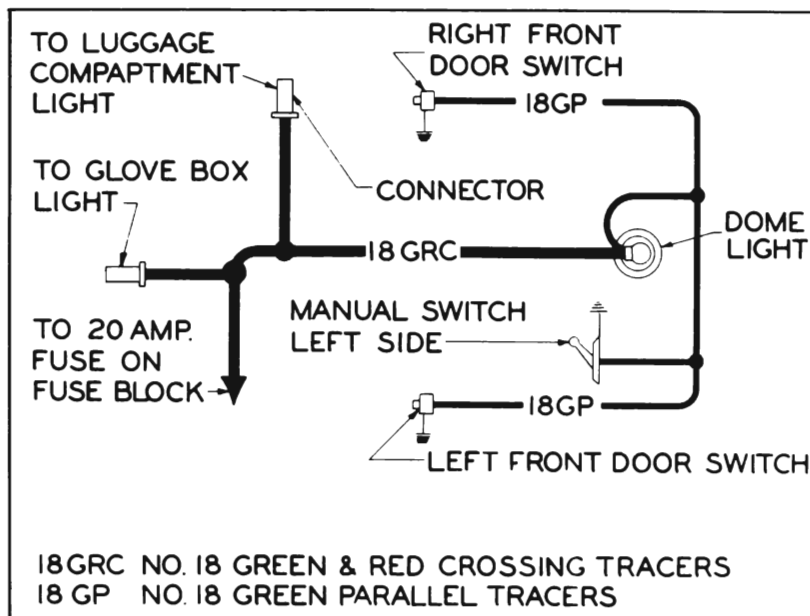


Figure 10-92—Dome Lamp Wiring Circuit Diagram—Models 56 C, 56 R, 76 C, 76 R

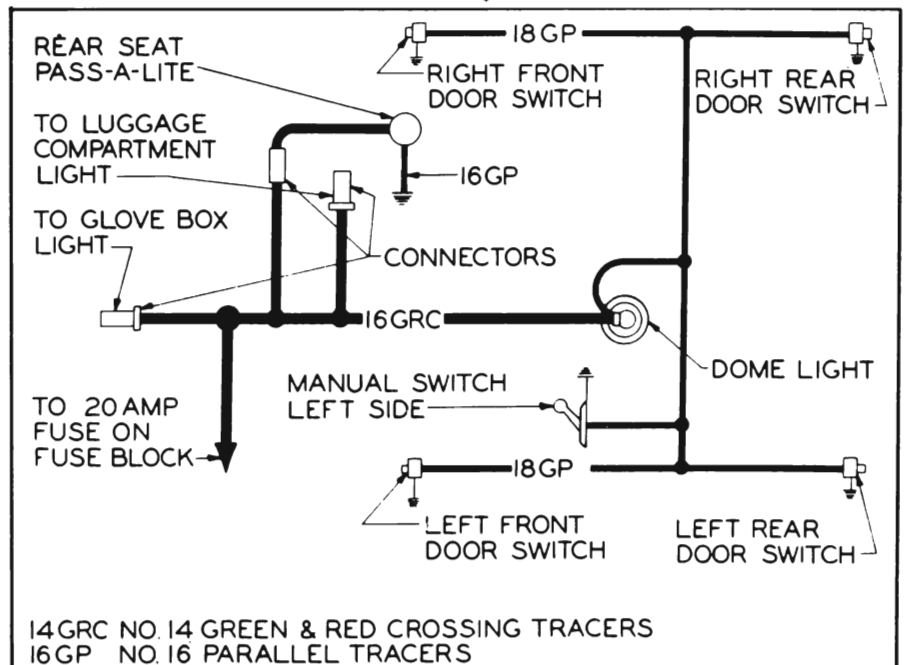


Figure 10-93—Dome Lamp Wiring Circuit Diagram—Models 52 and 72 R

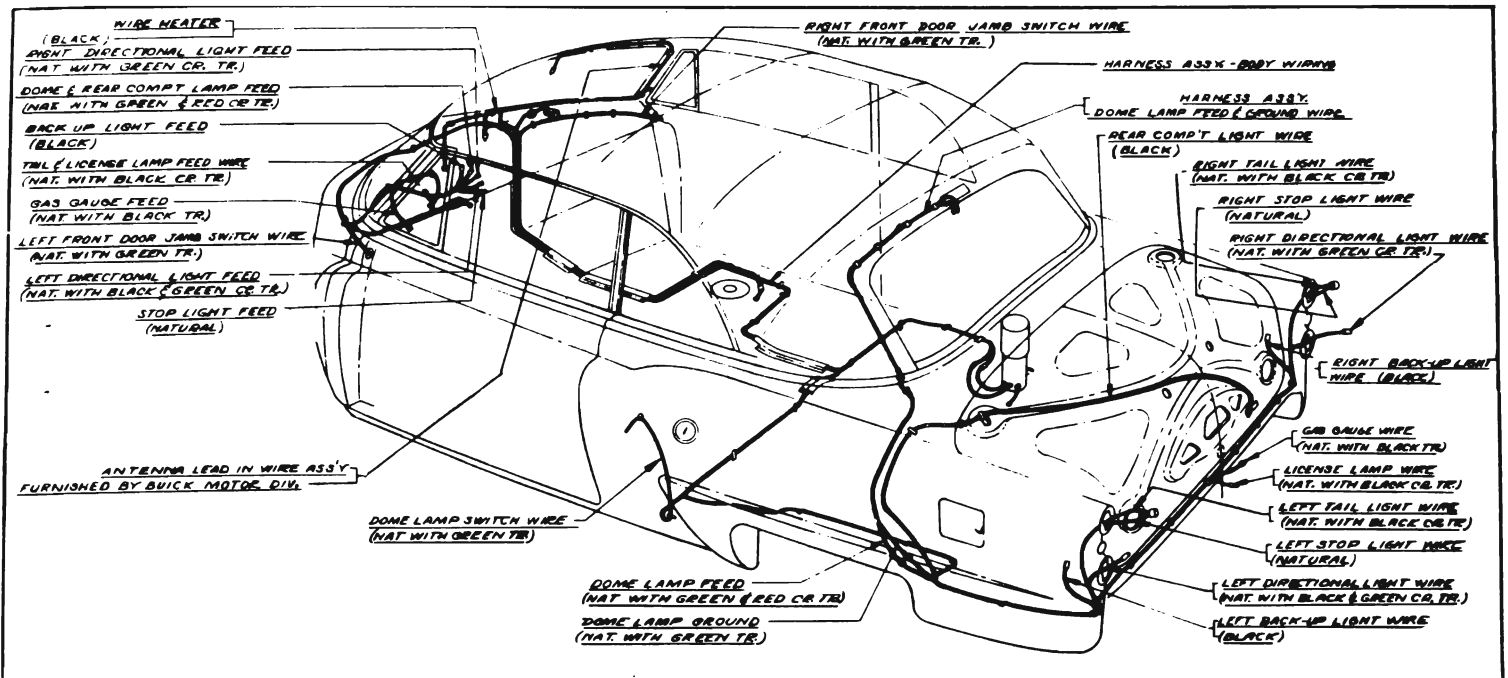


Figure 10-94—Body and Hydro-Lectric Wiring Circuit Diagram—
Model 46 C—Style 4367 X

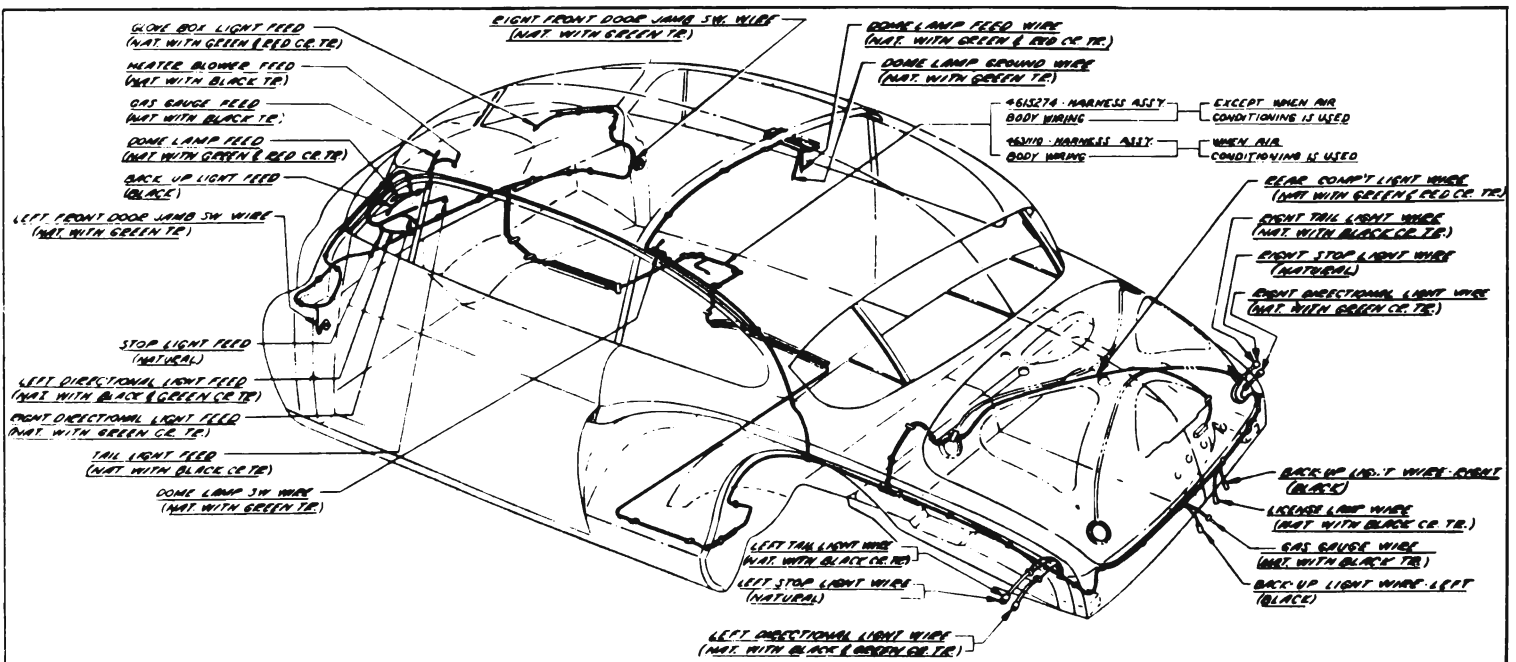


Figure 10-95—Body Wiring Circuit Diagram—Model 56 R—
Style 4537

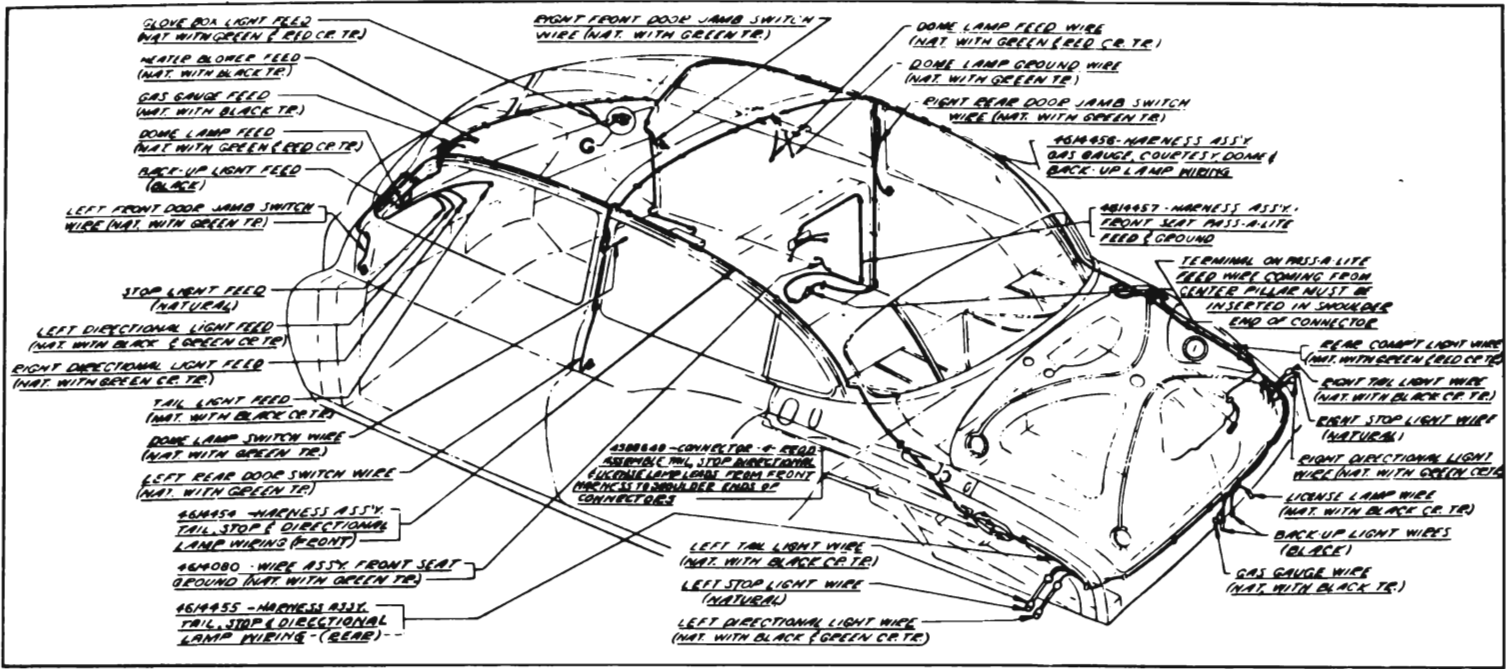


Figure 10-96—Body Wiring Circuit Diagram—Models 52, 72 R—Styles 4519, 4719

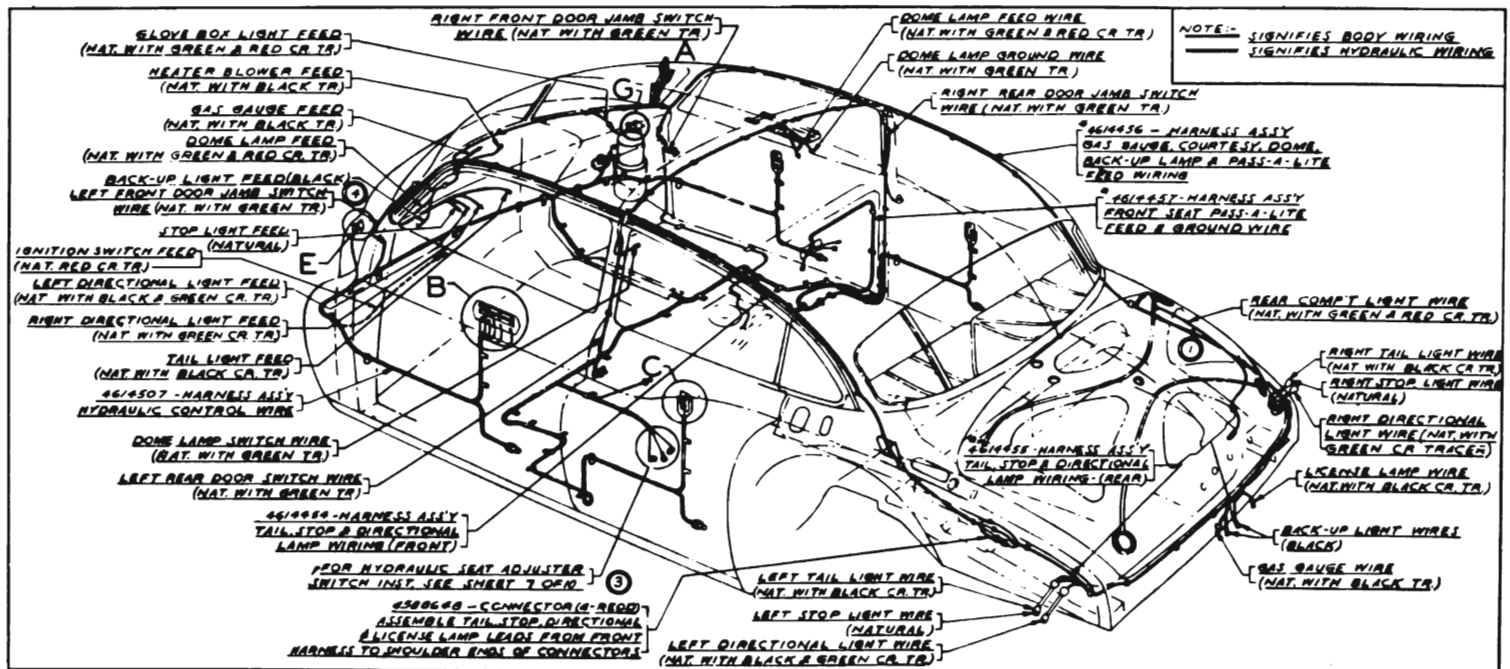


Figure 10-97—Body and Hydro-Lectric Wiring Circuit Diagram—Models 52, 72 R—Styles 4519 X, 4719 X

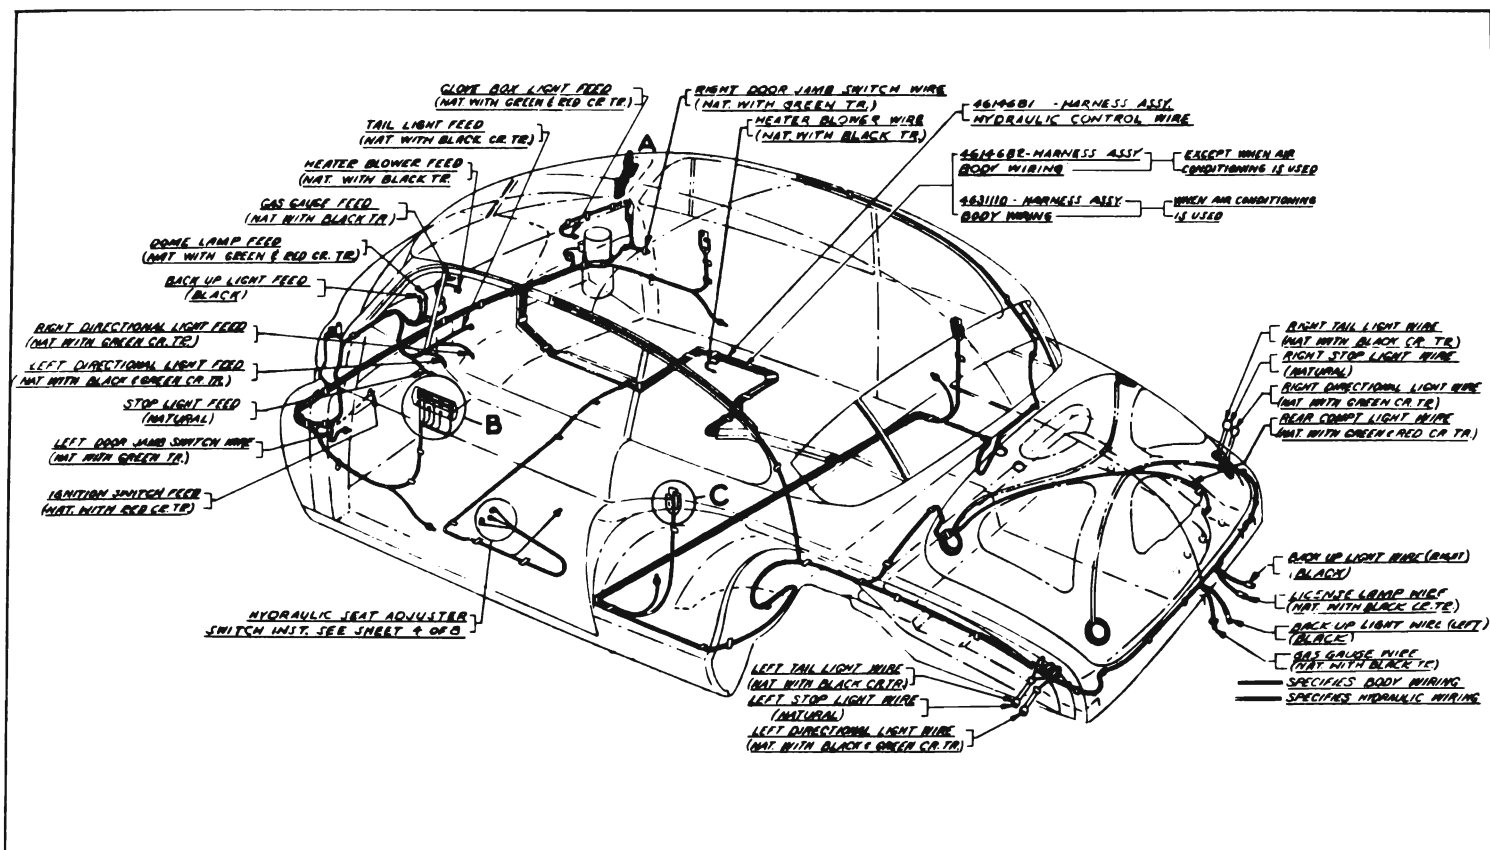


Figure 10-98—Body and Hydro-Lectric Wiring Circuit Diagram—Model 76 R—Style 4737 X

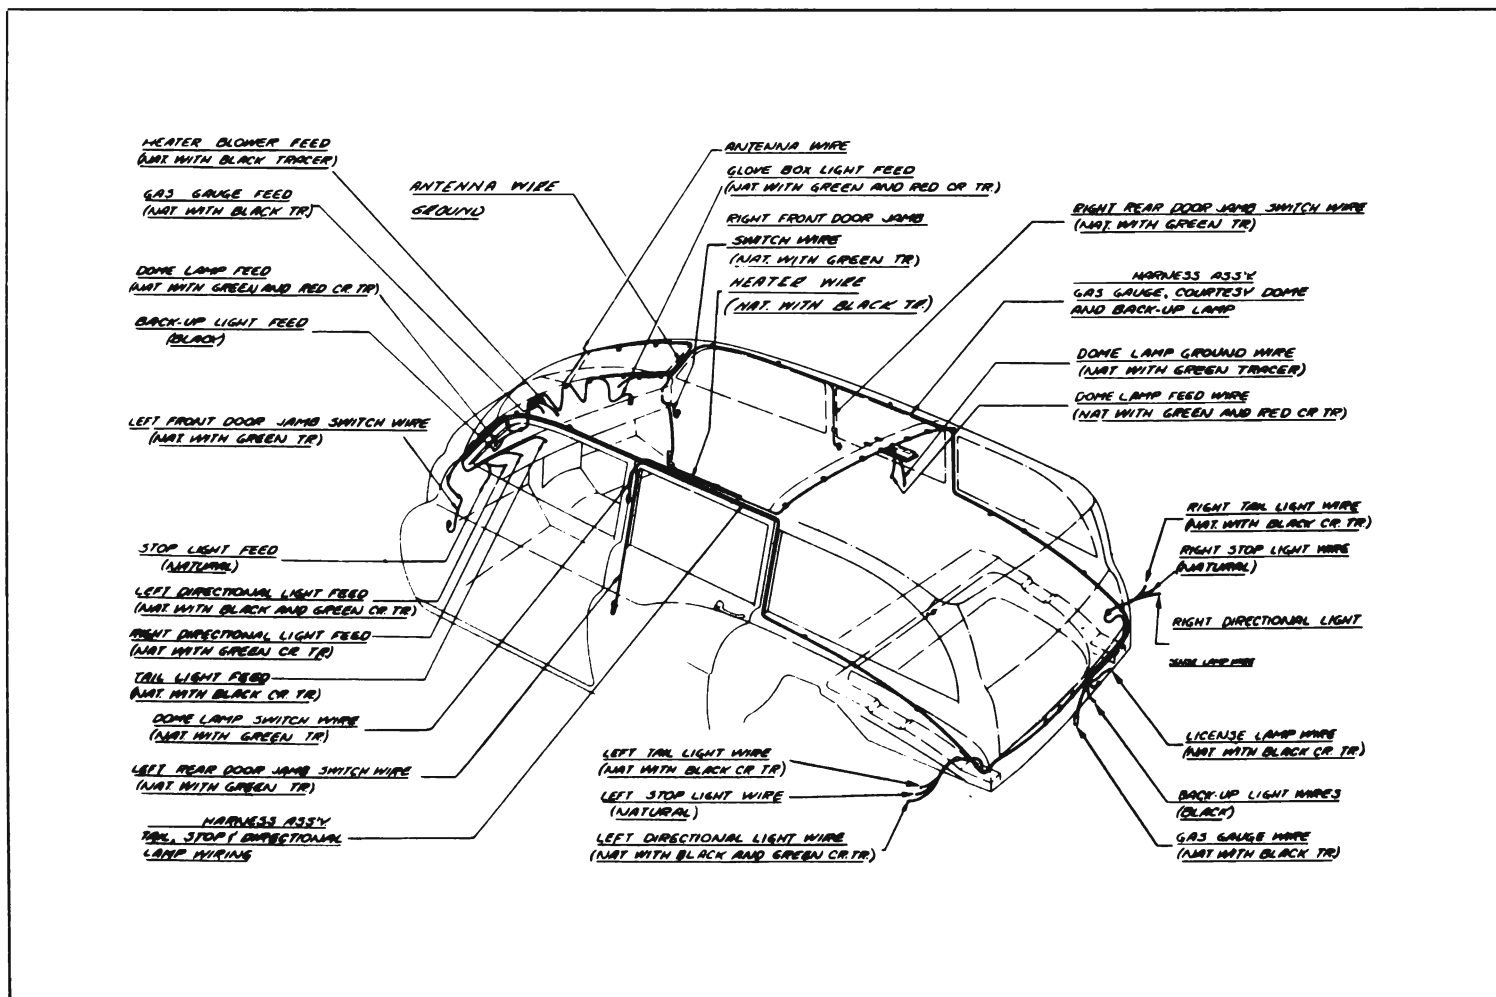


Figure 10-99—Body Wiring Circuit Diagram—Models 59, 79 R—Styles 4581, 4781