

	Page		Page
Periodic Inspection	10-41	F	
Repairs on Bench	10-44	Flywheel & Ring Replacement	
Specifications	10-2	Auto. Trans.	2-42
Voltage Test	10-41	Synchromesh	2-42
Cranking System	10-38	Flywheel Housing Alignment	4-17
Trouble Diagnosis	10-6	Frame	12-1
Crankshaft & Bearings	2-6	Front Shock Absorbers	See Shock Absorbers
Bearing Replacement	2-29	Front Springs	See Chassis Springs
Dimensions	2-2	Front Wheel Suspension	7-1
Oil Seal Replacement	2-31	Front Wheels	
Current Regulator	See Generator Regulator	Alignment	7-23
Cut-out Relay	See Generator Regulator	Bearing Adjustment	7-15
Cylinder Crankcase	2-6	Bearing Replacement, Lubrication	7-14
Cylinder Heads	2-7	Fuel Consumption, Excessive	3-9
Removal	2-20	Fuel Pump	3-16
Installation	2-22	Inspection & Test	3-17
Cylinder Reboring	2-33	Repairs	3-17
		Fuel System	3-3
		Trouble Diagnosis	3-8
		Fuse Block	10-95
		Fuse Specifications	10-3
		G	
D		Gasoline Filters & Strainers	3-11
Dash Pot & Throttle Linkage Adjustment	3-13	Gasoline Gauge	10-91
Defroster, Windshield	11-23	Trouble Diagnosis	10-91
Diagnosis, Trouble		Gasoline Tank Replacement	3-15
Battery	10-5	Gauge	
Brakes	9-7	Gasoline	10-91
Clutch	4-4	Generator	10-88
Clock & Instruments	10-10	Pinion Setting	6-19
Cranking System	10-6	Oil Pressure	10-88
Engine	2-14	Temperature	10-89
Fuel System	3-8	Gears, Planetary, Auto. Trans.	5-12
Generating System	10-6	Gear Shift Control Mechanism	4-12
Ignition System	10-8	Generator	10-19
Lighting System	10-9	Inspection, Test, on Car	10-23
Radio	11-4	Lubrication	1-3
Rear Axle	6-4	Repairs, on Bench	10-26
Safety Minder	10-93	Specifications	10-1
Shock Absorbers	7-9	Test, on Bench	10-26
Signal Systems	10-9	Generator Regulator	10-20
Steering Action	7-10	Specifications	10-2
Steering Gear, Power	8-19	Test & Adjust, on Car	10-28
Steering Gear, Manual	8-3	Generating System	10-19
Tires	7-6	Trouble Diagnosis	10-6
Transmission—Auto.	5-27	Glove Box Light	10-78
Transmission—Synchromesh	4-12	Guide-Matic	10-66
Differential	See Rear Axle	Adjustment	10-67
Dimmer Switch	10-61	Operation	10-66
Directional Signal Lamps & Switch	10-82	Trouble Diagnosis	10-66
Lamp Circuits	10-82	Guide T-3 Aimer	10-62
Switch Adjustment	10-83		
Trouble Diagnosis	10-82		
Distributor, Ignition	10-46		
Advance Mechanism	10-48		
Condenser Tests	10-55		
Contact Points—Condenser, Replace	10-51		
Dwell Angle Adjustment	10-51		
Overhaul	10-56		
Specifications	10-3		
Timing	10-51		
		H	
E		Hard Starting	3-8
Engine	2-1	Headlamps	10-60
Cooling System	2-12	Aiming Adjustment	10-62
Correction for Unbalance	2-43	Sealed Beam Unit, Replace	10-62
Cranking System	10-38	Heater & Defroster	11-20
Dimensions, Fits, Adjustments	2-2	Air Condition	11-24
Exhaust Manifold Valve Service	3-11	Non-Air Condition	11-20
Fuel & Exhaust System	3-1	Hood	12-6
Hard Starting	3-8	Horns, Relay & Button	10-79
Identification	0-3	Adjustments	10-79
Ignition System	10-46	Trouble Diagnosis	10-81
Lubrication System	2-9	Hydraulic Control System, Auto. Trans.	5-16
Mountings	2-4	Hydraulic Valve Mechanism	2-8
Mounting Adjustment	2-41	Hydraulic Valve Lifter Service	2-22
Oil Recommendations	1-10	Hydrometer Test of Battery	10-14
Specifications	2-1		
Tune Care, Trouble Diagnosis	2-14		
Ventilation System	2-11		
Exhaust Pipes	3-6		
Exhaust Manifold	3-6		
		I	
		Identification No., Vehicle	0-3
		Ignition Coil	10-46
		Specifications	10-2
		Tests	10-54
		Ignition Distributor	See Distributor
		Ignition System	10-46
		Trouble Diagnosis	10-8

	Page		Page
Ignition Switch	10-46		
Switch Replace, Lock Repairs	10-59		
Ignition Timing	10-51		
Indicator, Charge	10-88		
Indicator, Headlight Beam	10-62		
Indicator Lights			
Generator	10-88		
Oil Pressure	10-88		
Water Temperature	10-89		
Indicators, Direction Signal	10-82		
Inflation Pressures, Tire	1-4		
Instrument Panel Compt. (Glove Box)			
Light & Switch	10-78		
In ake Manifold	3-5		
Intake Silencer	3-4		
K			
King Pin Inclination, Theoretical	7-25		
Knuckle, Steering, Replace	7-17		
L			
Lamp Bulb Specifications	10-3		
Lamps			
Back-Up	10-76		
Direction Signal	10-82		
Headlamps	10-60		
License, Rear	10-77		
Park, Signal, Tail, Stop	10-76		
Lash Adjustment, Clutch Pedal	4-5		
Lighting System	10-60		
Trouble Diagnosis	10-9		
Lighters, Cigar	10-78		
Lights			
Headlights	10-60		
Direction Signal	10-82		
Instrument Panel Control	10-77		
Lower Control Arm, Rebush, Replace	7-20		
Lubricare (Lubrication)	1-1		
Auto. Transmission	1-3		
Body	1-6		
Chassis	1-1		
Clutch Internal Parts	4-5		
Parking Brake Cables	9-15		
Speedometer Cable	10-93		
Lubrication System, Engine	2-9		
Specifications	2-2		
M			
Manifold Heat Control	3-5		
Valve Service	3-11		
Manifold Intake	3-5		
Exhaust	3-6		
Marks on Ring Gear & Pinion	6-18		
Master Cylinder, Brake	9-12		
Filling	9-12		
Gauging, Cylinder Piston	9-34		
Overhaul	9-21		
Models, Car	0-3		
Mountings, Body	12-3		
Mountings, Engine	2-4		
Adjustment	2-41		
Muffler	3-6		
N			
Neutral Safety Switch	10-37		
O			
Oil Consumption, Excessive	2-15		
Oil Recommendation, Engine	1-10		
Oil Filter	2-10		
Changing Element	1-5		
Oil Pressure Gauge	10-88		
Oil Pump	2-9		
Dimensions of Parts	2-3		
Repairs	2-39		
Oil Pump, Steering	8-11		
Oil Seals, R. Wheel Bearings	6-8		
P			
Parking Brake Controls	9-2		
Adjustment, Lubrication	9-14		
Release Warning Signal	10-78		
Parking Lamps	10-76		
Power Brakes	9-23		
Power Headlight Control	See Guide-Matic		
Pedal Adjustment, Brake	9-14		
Pedal Adjustment, Clutch	4-5		
Pinion Adjustment, Rear Axle	6-20		
Pinion Setting Gauges	6-18		
Pistons, Pins, Rings	2-6		
Dimensions	2-2		
Replacement	2-31		
Ring Fitting	2-34		
Propeller Shafts			
Assembly & Straightening, Front	6-13		
Installation & Adjustment	6-13		
Removal & Disassembly	6-9		
Torsional Damper	6-12		
Pump, Fuel	3-16		
Pump, Oil	2-9		
Repairs	2-39		
Pump, Hydraulic Steering	8-14		
Pump, Water	2-13		
Repairs	2-38		
Push Button Setting, Radio	11-14		
R			
Radiator	2-11		
Thermostat Test	2-37		
Radio	11-1		
Adjustments on Car	11-14		
Antenna Installation	11-10		
Receiver Installation	11-6		
Trouble Diagnosis	11-4		
Rear Axle Assembly	6-1		
Disassembly	6-14		
Lubrication	1-11		
Removal	6-6		
Specifications	6-1		
Trouble Diagnosis	6-4		
Rear Wheel Bearing			
Lubrication	1-8		
Replacement	6-7		
Rear Wheel Suspension	7-3		
Reboring Cylinders	2-33		
Receiver Installation, Radio	11-6		
Recharging Battery	10-17		
Regulator, Generator	10-20		
Relay, Cut-Out	10-20		
Relay, Horn	10-79		
Release Mechanism, Clutch	4-1		
Ring Gear & Pinion Marks	6-18		
Ring Gear Replacement	6-21		
Rings, Piston	See Piston Rings		
Rochester 4-Barrel Carburetor	3-50		
Rocker Arms, Replacement	2-21		
S			
Safety-Minder	10-93		
Saginaw Oil Pump, Steering	8-14		
Sealed Beam Unit, Headlamp	10-61		
Serial Numbers, Car & Engine	See Identification No., Vehicle		
Sheet Metal, Chassis	12-3		
Shift Control, S-M Transmission	4-12		
Signal Lamps	10-82		
Signal, Parking, Brake Release	10-78		
Silencer, Intake	3-4		
Shock Absorbers, Front & Rear	7-4		
Replacement	7-21		
Trouble Diagnosis	7-9		
Solenoid Switch, Test, Adjust	10-42		
Specifications	10-2		
Sonomatic Radio	11-2		

	Page		Page
Spark Plugs	10-53	Timing Chain Replacement	2-26
Clean & Adjust	10-53	Tires	7-4
Spark Timing Control	10-51	Abnormal Wear	7-6
Specific Gravity, Battery	10-14	Inflation	1-4
Specifications		Inspection	7-12
Battery	10-1	Interchanging	7-13
Brakes	9-1	Tire & Wheel Balance	7-14
Car, General	0-3	Toe-In, Front Wheels, Check & Adjust	7-27
Chassis Suspension	7-1	Torque Ball	4-11
Clutch	4-1	Torque Converter	5-7
Cranking System	10-2	Torsional Damper, Propeller Shaft	6-12
Engine	2-1	Transmission, Synchromesh	4-9
Front Wheel Alignment	7-23	Disassembly, Assembly	4-18
Fuel & Exhaust Systems	3-1	Lubricare	1-1
Generating Systems	10-1	Removal & Installation	4-15
Ignition System	10-2	Shift Control Mechanism	4-12
Lighting System	10-3	Specifications	4-9
Rear Axle	6-1	Trouble Diagnosis	4-12
Signal System (Horn, Lights, etc.)	10-4	Transmission, Twin Turbine	5-1
Steering Gear, Power	8-10	Approved Oils	1-8
Steering Gear Manual	8-1	Drain & Refill	1-8
Steering Gear Lubricare	1-4	Installation of Assembly	5-36
Transmission, Auto. Trans.	5-1	Manual Control	5-4
Transmission, Synchromesh	4-9	Manual Control Linkage Adjust.	5-33
Speedometer	10-92	Pushing Car to Start Engine	5-5
Gears	4-11	Removal of Assembly	5-36
Trouble Diagnosis	10-93	Specifications	5-1
Springs, Chassis	7-2	Towing Disabled Car	5-5
Stabilizer Link Adjustment	7-14	Trouble Diagnosis	5-27
Starter	10-33	Trim Dimensions, Chassis Spring, F. & R.	7-18
Steering Gear, Power	8-10	Trouble Diagnosis	See Diagnosis
Steering Gear, Manual	8-1	Twilight Sentinel	10-72
Steering Gear Lubricare	1-4		
Steering Geometry (Turning Angles), Checking	7-27	U	
Steering Knuckle, Replace	7-15	Universal Joint	
Steering Linkage	8-2	Front	4-11
Steering Wheel, Replace	8-6	Rear	6-10
Stop Lights & Switch	10-77		
Stromberg 2-Barrel Carburetor	3-41	V	
Strut Rods, Replace	6-7	Vacuum Switch	See Carburetor Starter Switch
Suspension, Chassis	7-1	Valve Mechanism, Engine	2-7
Switch		Checking Timing	2-26
Back Up Light	10-38	Guide Replacement	2-20
Carburetor Starter Switch	10-35	Hydraulic Lifters	2-8
Dimmer	10-61	Hydraulic Lifter Service	2-22
Direction Signal	10-82	Noise	2-16
Ignition	10-59	Reconditioning Valves	2-20
Lighting	10-60	Specifications	2-2
Neutral Safety	10-38	Ventilation, Crankcase	2-11
Stop Light	10-77	Ventilator, Outside Air	11-28
T		Voltage Regulator	10-20
Tail Lamps	10-77	Voltage Test, Cranking Motor	10-41
Tank, Gasoline, Replacement	3-15		
Temperature Gauge	10-89	W	
Thermo Circuit Breaker	10-60	Warning Signal, Park Brake	10-78
Thermostat		Warranty	0-2
Choke Adjustment	3-13	Water Pump	2-13
Exh. Manifold Valve	3-10	Repairs	2-38
Radiator, Test	2-37	Wheel Alignment	7-23
Throttle Linkage	3-4	Wheel Bearing, Front, Adjust	7-15
Adjustment	3-13	Wheel Bearing Lubrication, Front	1-7
Tie Rods & Ends	8-3	Wheel Bearing Lubrication, Rear	1-8
Adjustment	7-27	Wheel Bearing Replacement, Front	7-14
Tightening Specifications		Wheel Bearing Replacement, Rear	6-7
Brakes	9-1	Wheel Cylinder, Brake, Overhaul	9-20
Chassis Suspension	7-1	Wheel & Tire Balance	7-14
Clutch	4-1	Wheel, Steering, Replace	8-6
Engine	2-1	Wheel Suspension	7-2
Fuel & Exhaust Systems	3-1	Windshield Defroster	11-23
Rear Axle	6-1	Wiring Circuit Diagrams	10-95
Steering Gear, Power	8-10	Wonderbar Radio	11-2
Steering Gear, Manual	8-1		
Transmission, Auto.	5-2		
Transmission, Synchromesh	4-9		
Timing			
Camshaft	2-27		
Carburetor Starter Switch	10-35		
Ignition	10-51		