

SECTION 2-D CENTER PILLAR

CONTENTS OF SECTION 2-D

Paragraph	Subject	Page
2-12	Center Pillar.....	2-35

2-12 CENTER

a. Removal and Installation of Center Pillar Finishing Cap— “29” and “39” Styles

1. Remove two (2) screws from top of cap and remove cap from center pillar.
2. To install, apply a bead of body caulking compound to underside of cap; then, position cap on center pillar and install attaching screws (see Figure 2-42).

b. Removal and Installation of Center Pillar Trim— “29” and “39” Styles

1. Remove center pillar finishing cap.
2. Carefully slide center pillar trim upward to disengage trim from pinchweld flanges and remove from body.
3. To install, reverse removal procedure.

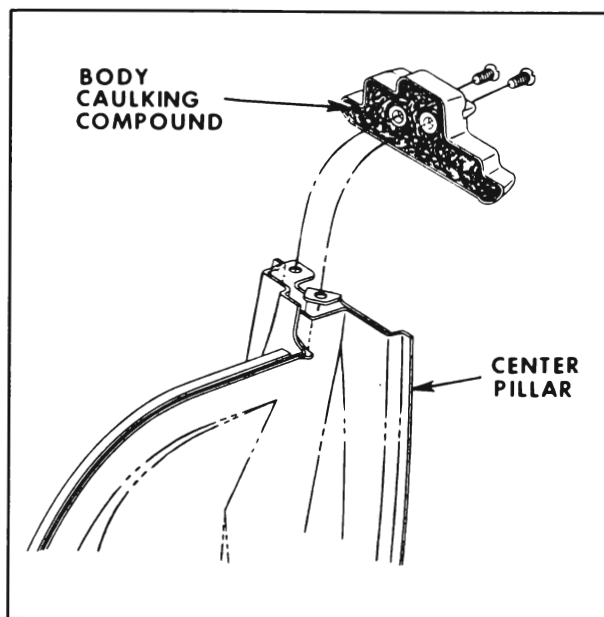


Figure 2-42—Center Pillar Finishing Cap Sealing