

	Page		Page
Car Models	0-2	Defroster, Windshield	11-29
Car Roughness or Vibration	7-11	Diagnosis, Trouble	
Carter 4-Barrel Carburetor	3-53	Air Conditioner	11-114
Carter	3-56	Battery	10-11
Disassembly, Cleaning Assembly	3-57	Brakes	9-10
Fast Idle Cam and Unloader		Cranking System	10-26
Adjustment	3-59	Engine	2-16
Caster, Check and Adjust	7-28	Fuel System	3-8
Center Support Bearing	6-28	Gasoline Gauge	10-69
Charge Indicator See Generator Indicator		Generating System	10-19
Chassis Lubrication	1-2	Guide-Matic	11-126
Chassis Sheet Metal	12-1	Ignition System	10-35
Chassis Springs	7-19	Radio	11-6
Replacement, Front	7-21	Rear Axle	6-4
Replacement, Rear	7-23	Safety Buzzer	10-70
Trim Dimensions	7-20	Shock Absorbers	7-5
Chassis Suspension Specification	7-1	Steering Action	7-11
Cigar Lighters	10-51	Steering Gear, Power	8-19
Circuit Diagrams, Wiring	10-124	Steering Gear, Manual	8-3
Clock Electric	10-68	Tires	7-7
Clutch, Automatic Transmission	5-12	Transmission - Automatic	5-1
Coil, Ignition Test	10-40	Differential	6-8
Connecting Rods	2-10	Dimmer Switch	10-47
Bearing Dimensions	2-3	Directional Signal Lamps and Switch	10-55
Bearing Replacement	2-35	Lamp Circuits	10-57
Rod Replacement	2-34	Switch Adjustment	10-56
Condenser Tests, Distributor	10-41	Trouble Diagnosis	10-56
Constant Velocity Universal Joint	6-29	Distributor, Ignition	10-33
Contact Points, Distributor		Advance Mechanism	10-34
Adjustment, Replacement	10-35	Condenser Tests	10-41
Cooling System, Engine	2-42	Contact Points, Replace	10-35
Filling, Flushing	2-42	Dwell Angle Adjustment	10-37
Prepare for Anti-Freeze	2-42	Overhaul	10-42
Trouble Diagnosis	2-18	Specifications	10-3
Crankcase Ventilation	3-21	Timing	10-37
Cranking Motor	10-23		
Bench Test	10-30	E	
Periodic Inspection	10-28	Electro-Cruise	11-133
Repairs on Bench	10-30	Electro-Cruise Maintenance	1-6
Specifications	10-2	Engine	2-1
Voltage Test	10-28	Cooling System	2-42
Trouble Diagnosis	10-26	Correction for Unbalance	2-50
Crankshaft and Bearings	2-6	Cranking System	10-23
Bearing Replacement	2-35	Dimensions, Fits, Adjustments	2-3
Dimensions	2-3	Exhaust Manifold Valve Service	3-20
Oil Seal Replacement	2-31	Fuel and Exhaust System	3-1
Cruise Control	11-133	Identification	0-2
Cylinder Crankcase	2-6	Ignition System	10-32
		Lubrication System	2-13
D		Mountings	2-7
Dash Pot and Throttle Linkage		Mounting Adjustment	2-7
Adjustment	3-23	Oil Recommendations	1-1

	Page
Specifications	2-1
Tune Care, Trouble Diagnosis	2-18
Ventilation System	3-21
Exhaust Pipes	3-10
Exhaust Manifold	3-10

F

Flywheel and Ring Replacement	2-50
Front Shock	
Absorbers	See Shock Absorbers
Front Springs	See Chassis Springs
Front Wheel Suspension	7-2
Front Wheels	
Alignment	7-27
Bearing Adjustment	7-15
Bearing Replacement, Lubrication	7-15
Fuel Consumption, Excessive	3-18
Fuel Pump	3-29
Inspection and Test	3-30
Repairs	3-30
Fuel System	3-8
Fuse Block	10-129
Fuse Specifications	10-4

G

Gasoline Filters and Strainers	3-8
Gasoline Gauge	10-68
Trouble Diagnosis	10-69
Gasoline Tank Replacement	3-25
Gauge	
Gasoline	10-68
Pinion Setting	6-13
Generator	10-13
Inspection, Test on Car	10-20
Repairs on Bench	10-13
Specifications	10-1
Generator Indicator	10-17
Generator Regulator	10-16
Specifications	10-2
Test and Adjust, on Car	10-20
Generating System	10-13
Trouble Diagnosis	10-19
Glove Box Light	10-50
Guide-Matic	11-126
Adjustment	11-131
Trouble Diagnosis	11-127
Guide T-3 Aimer	10-48

H

Hard Starting	3-17
Headlamps	10-46
Aiming Adjustment	10-48

	Page
Heater and Defroster	11-29
Air Conditioner	11-46
Non-Air Conditioner	11-29
Horns, Relay and Button	10-52
Adjustments	10-52
Trouble Diagnosis	10-52
Hydraulic Control System,	
Automatic Transmission	5-16
Hydraulic Valve Mechanism	2-27
Hydraulic Valve Lifter Service	2-27
Hydrometer Test of Battery	10-9

I

Identification No., Vehicle	0-2
Ignition Coil	10-32
Specifications	10-3
Tests	10-40
Ignition System	10-32
Ignition Switch	10-45
Switch Replace, Lock Repairs	10-45
Ignition Timing	10-38
Indicator Lights	
Generator	10-63
Oil Pressure	10-64
Water Temperature	10-64
Indicators, Direction Signal	10-55
Inflation Pressures, Tires	1-3
Instrument Panel Compartment	
(Glove Box) Light and Switch	10-50
Intake Manifold	3-9
Intake Silencer	3-8

K

King Pin Inclination, Theoretical	7-31
Knuckle, Steering, Replace	7-19

L

Lamp Bulb Specifications	10-4
Light Load Test of Battery	10-8
Lighting System	10-46
Lighters, Cigar	10-51

	Page		Page
Serial Number, Car and Engine See Identification No., Vehicle		Neutral Safety	10-51
Sheet Metal, Chassis	12-1	Stop Light	10-48
Silencer, Intake	3-8		
Shock Absorbers, Front and Rear	7-5	T	
Replacement	7-26	Tank, Gasoline, Replacement	3-25
Trouble Diagnosis	7-26	Thermo Circuit Breaker	10-47
Solenoid Switch, Test, Adjust	10-29	Thermostat	
Specifications	10-3	Choke Adjustment	3-22
Sonomatic Radio	11-1	Exhaust Manifold Valve	3-21
Spark Plugs	10-39	Radiator Test	2-37
Spark Timing Control	10-34	Throttle Linkage	
Specific Gravity, Battery	10-9	Adjustment	3-23
Specifications		Tie Rods and Ends	8-44
Air Conditioner	11-46	Adjustment	7-29
Battery	10-1	Tightening Specifications	
Brakes	9-1	Brakes	9-1
Car, General	0-2	Chassis Suspension	7-1
Chassis Suspension	7-1	Engine	2-1
Cranking System	10-2	Rear Axle	6-1
Engine	2-1	Steering Gear, Power	8-10
Front Wheel Alignment	7-27	Steering Gear, Manual	8-1
Fuel and Exhaust Systems	3-1	Transmission, Automatic	5-1
Generating Systems	10-1	Tilt Steering Wheel	8-54
Ignition System	10-3	Timing	
Lighting System	10-4	Camshaft	2-31
Rear Axle	6-1	Ignition	10-39
Signal System (Horn, Lights, etc.)	10-5	Timing Chain Replacement	2-31
Steering Gear, Power	8-10	Transmission, 4-Speed	4-47
Steering Gear, Manual	8-1	Description	4-47
Steering Gear, Lubrication	1-5	Trouble Diagnosis	4-50
Steering Linkage	8-44	Linkage Adjustment	4A-1
Transmission, Automatic	5-1	Disassembly	4-52
Speedometer	10-70	Assembly	4-57
Trouble Diagnosis	10-70	Tires	7-13
Springs, Chassis	7-20	Abnormal Wear	7-7
Spring, Hood Hinge	12-2	Inflation	1-3
Stabilizer Link	7-15	Inspection	7-13
Starter	10-23	Interchanging	7-14
Steering Gear, Power	8-10	Runout	7-12
Steering Gear, Manual	8-1	Tire and Wheel Balance	7-15
Steering Gear Lubrication	1-5	Toe-In, Front Wheels, Check and	
Steering Geometry (Turning Angles),		Adjust	7-29
Checking	7-31	Torque Converter	5-5
Steering Knuckle, Replace	7-19	Transmission, Automatic	5-1
Steering Linkage	8-44	Approved Oils	1-8
Steering Wheel, Removal	8-5	Drain and Refill	1-8
Stop Lights and Switch	10-48	Installation of Assembly	5-38
Suspension, Chassis	7-1	Manual Control	5-4
Switch		Manual Control Linkage Adjust	5-33
Back-Up Light	10-50	Pushing Car to Start Engine	5-5
Dimmer	10-47	Removal of Assembly	5-38
Direction Signal	10-55	Specifications	5-2
Ignition	10-32	Towing Disabled Car	5-5
Lighting	10-46		

Page

Page

Trim Dimensions, Chassis
 Spring, F. and R 7-20
 Trouble Diagnosis See Diagnosis

U

Universal Joints
 Checking & Adjusting Angles--4700 . . . 6-35
 Constant Velocity 6-29
 Front and Rear 6-30

V

Vacuum Trunk Release 12-154
 Checking Timing 2-19
 Guide Replacement 2-25
 Hydraulic Lifters 2-27
 Hydraulic Lifter Service 2-27
 Noise 2-17
 Reconditioning Valves 2-24
 Specifications 2-3
 Ventilation, Crankcase 3-21
 Ventilator, Outside Air 11-43
 Voltage Regulator 10-16
 Voltage Test, Cranking Motor 10-28

W

Warning Signal, Parking Brake 10-50
 Water Pump 2-45
 Repairs 2-45
 Wheel Alignment 7-27
 Wheel Bearing, Front, Adjust 7-15
 Wheel Bearing Lubrication,
 Front 1-7
 Wheel Bearing Replacement,
 Front 7-15
 Wheel Bearing Replacement, Rear . . . 6-7
 Wheel Cylinder, Brake, Overhaul 9-24
 Wheel and Tire Balance 7-15
 Wheel and Tire Runout 7-12
 Wheel Steering, Replace 8-5
 Wheel Suspension 7-2
 Windshield Defroster 11-29
 Windshield Washer 10-111
 Windshield Wiper, Single Speed 10-97
 Disassembly and Assembly 10-99
 Trouble-Shooting 10-98
 Windshield Wiper, Two Speed 10-101
 Disassembly and Assembly 10-107
 Trouble-Shooting 10-104
 Wiring Circuit Diagrams 10-124
 Wonderbar Radio 11-1