

# VEHICLE LIFTING POINTS

## CONTENTS

Subject	Page No.
<b>DESCRIPTION AND OPERATION:</b>	
Lifting .....	<b>OB-9</b>
<b>DIAGNOSIS: (Not Applicable)</b>	
<b>MAINTENANCE AND ADJUSTMENTS: (Not Applicable)</b>	
<b>MAJOR REPAIR: (Not Applicable)</b>	
<b>SPECIFICATIONS: (Not Applicable)</b>	


### DESCRIPTION AND OPERATION

#### LIFTING

If it is necessary to use any lifting device other than the original equipment jack, such as a hydraulic, scissors, or floor jack, or a service station or dealer hoist, see Figures OB-1 and OB-2 for acceptable lifting points. Lifting should only be done at the posi-

tions indicated to prevent possible damage to the vehicle.



**CAUTION:** *Failure to follow the procedure outlined above may result in unsatisfactory vehicle performance, or a durability failure which may result in loss of control of the vehicle.*

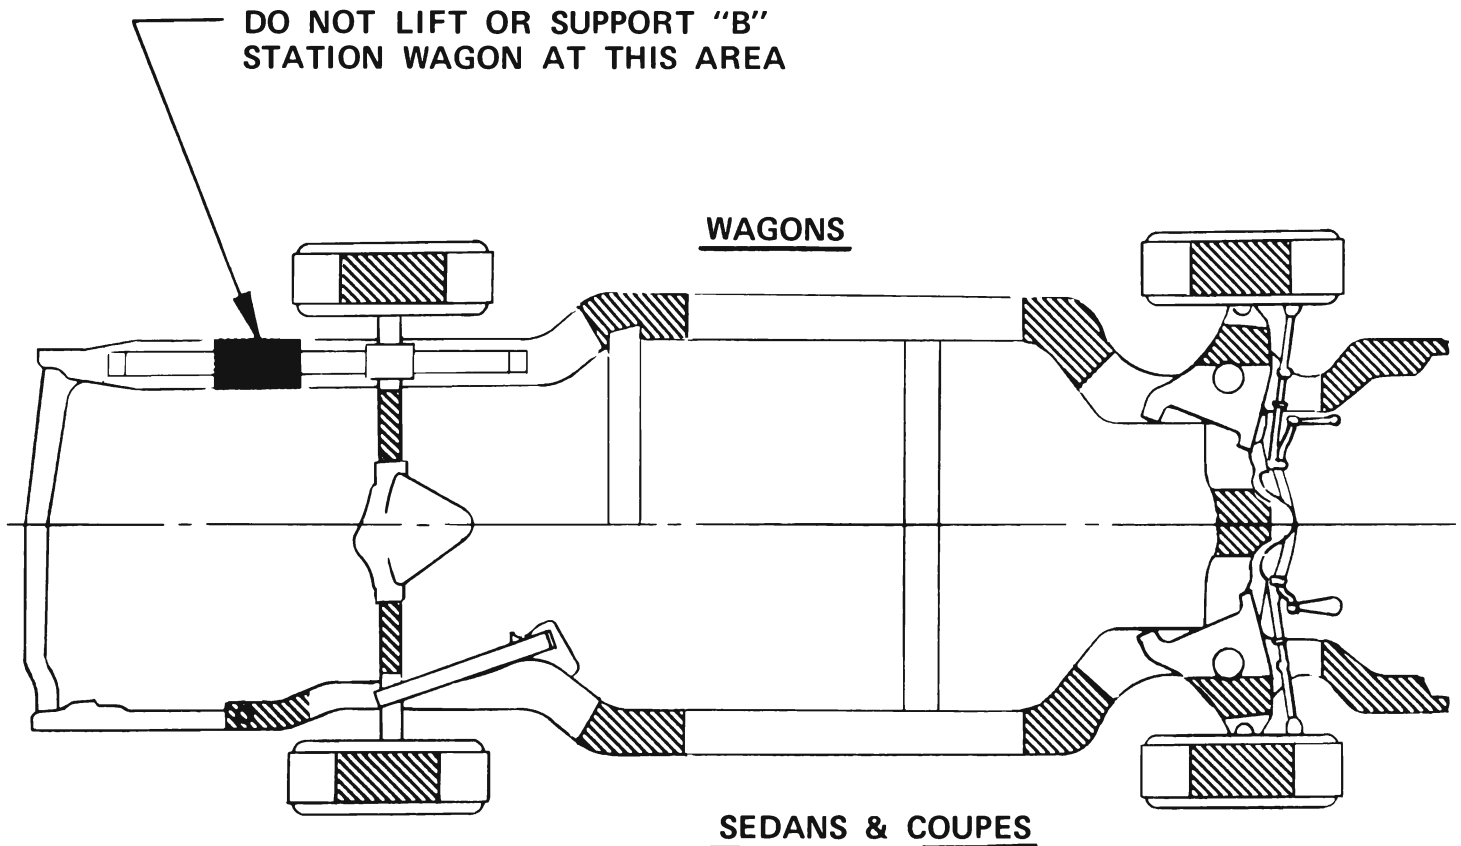

**NOTE: SUPPORTS MUST BE POSITIONED SO AS TO DISTRIBUTE LOAD AND SUPPORT VEHICLE IN A STABLE MANNER**

**3B0B1**


Figure OB-1 Lifting Points A, B, C and E Series

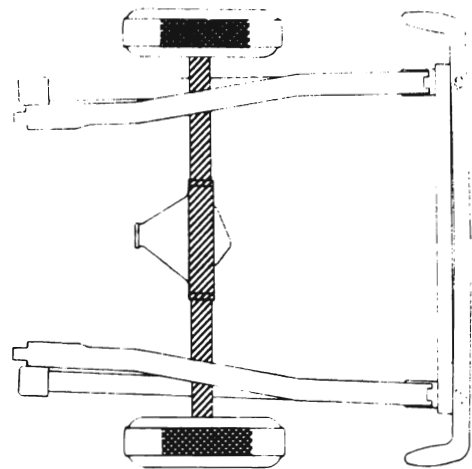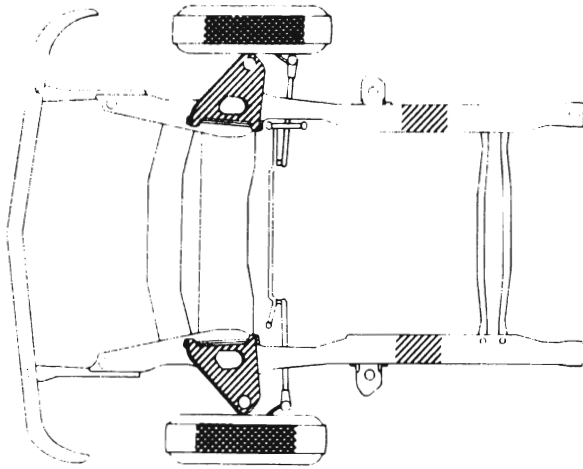

DRIVE ON HOIST



 BUMPER JACK AT FRAME ATTACHMENT ONLY



FLOOR JACK OR HOIST LIFT

**NOTE: SUPPORTS MUST BE POSITIONED SO AS TO DISTRIBUTE LOAD AND SUPPORT VEHICLE IN A STABLE MANNER.**

4B0B2

Figure OB-2 Lifting Points X Series